

DuraLAN™ Fast Ethernet NICs with Duralink64™ Software ANA™-62000/64000 Family

**Windows 95/98/2000
(Includes Windows 2000 GUI)
Windows NT 3.51/4.0
Novell NetWare 4.1x/5.x**

User's Guide

Copyright

© 2001 Adaptec, Inc. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of Adaptec, Inc., 691 South Milpitas Blvd., Milpitas, CA 95035.

Trademarks

Adaptec, the Adaptec logo, DuraLAN, Duralink64, and Single64 are trademarks of Adaptec, Inc., which may be registered in some jurisdictions.

Windows, Windows 95, Windows 98, Windows NT, and Windows 2000 are trademarks of Microsoft Corporation in the U.S. and other countries used under license.

EtherChannel is a registered trademark of Cisco Systems, Inc.

NetWare is a registered trademark of Novell, Inc.

All other trademarks are the property of their respective owners.

Changes

The material in this document is for information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Adaptec, Inc. assumes no liability resulting from errors or omissions in this document, or from the use of the information contained herein.

Adaptec reserves the right to make changes in the product design without reservation and without notification to its users.

Disclaimer

IF THIS PRODUCT DIRECTS YOU TO COPY MATERIALS, YOU MUST HAVE PERMISSION FROM THE COPYRIGHT OWNER OF THE MATERIALS TO AVOID VIOLATING THE LAW WHICH COULD RESULT IN DAMAGES OR OTHER REMEDIES.

Adaptec Customer Support

If you have questions about installing or using your Adaptec product, check this document first—you will find answers to most of your questions here. If you need further assistance, use the support options listed below.

Technical Support Identification (TSID) Number

- Before contacting Technical Support, you'll need your TSID. The TSID helps us provide more efficient service by accurately identifying your product and support status. The 12-digit TSID can be found on the white barcode-type label included inside the box with your product.
- Affix your TSID label here:



Support Options

- Search the Adaptec Support Knowledgebase (ASK) at <http://ask.adaptec.com> for articles, troubleshooting tips, and frequently asked questions for your product.
- For support via Email, submit your question to Adaptec's Technical Support Specialists at <http://ask.adaptec.com>.

North America

- Visit our Web site at <http://www.adaptec.com>.
- For information about Adaptec's support options, call +1 408-957-2550, 24 hours per day, 7 days per week.
- To speak with a Technical Support Specialist,

For **Hardware products** call +1 408-934-7274,
Monday–Friday, 3:00 A.M. to 5:00 P.M., Pacific Time.

For **RAID and Fibre Channel** call +1 321-207-2000
Monday–Friday, 3:00 A.M. to 5:00 P.M., Pacific Time.

To expedite your service, have your computer in front of you.

- To order Adaptec products, including accessories and cables, call +1 408-957-7274.

Europe

- Visit our Web site at <http://www.adaptec-europe.com>.
- **English and French:** To speak with a Technical Support Specialist, call one of the following numbers, Monday–Thursday, 10:00 to 12:30 and 13:30 to 17:30; Friday, 10:00 to 12:30 and 13:30 to 16:30, Central European Time:
 - **English:** +32 2 352 3470
 - **French:** +32 2 352 3460

To expedite your service, have your computer in front of you.

- **German:** To speak with a Technical Support Specialist, call +49 89 456 40660, Monday–Thursday, 9:30 to 12:30 and 13:30 to 16:30; Friday, 9:30 to 12:30 and 13:30 to 15:00, Central European Time. To expedite your service, have your computer in front of you.
- To order Adaptec products, including accessories and cables:
 - **UK:** +0800 96 65 26 or fax +0800 731 02 95
 - **Other European countries:** +32 11 300 379

Australia and New Zealand

- Visit our Web site at <http://www.adaptec.com.au>.
- To speak with a Technical Support Specialist, call +612 9416 0698, Monday–Friday, 10:00 A.M. to 4:30 P.M., Eastern Australia Time. To expedite your service, have your computer in front of you.

Hong Kong and China

- Visit our Web site at <http://www.adaptec.com>.
- To speak with a Technical Support Specialist, call +852 2869 7200, Monday–Friday, 10:00 A.M. to 5:00 P.M.
- Fax Technical Support at +852 2869 7100.

Singapore

- Visit our Web site at <http://www.adaptec.com>.
- To speak with a Technical Support Specialist, call +65 245 7470, Monday–Friday, 10:00 A.M. to 5:00 P.M.

Regulatory Compliance Statements

Federal Communications Commission Radio Frequency Interference Statement

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. However, if this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.
- Use a shielded and properly grounded I/O cable and power cable to ensure compliance of this unit to the specified limits of the rules.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.



European Union Compliance Statement

This Information Technology Equipment has been tested and found to comply with the following European directives:

EMC Directive 89/336/EEC, as amended by 92/31/EEC and 93/68/EEC

EN 50081-1 (1992)
EN55022 (1994) Class B
EN 50082-1 (1992)
EN61000-4-2 (1998)
EN61000-4-3 (1998)
EN61000-4-4 (1995)
EN61000-4-5 (1995) Surges
EN61000-4-6 (1996) Conducted immunity
EN61000-4-11 (1994) Supply dips of variation



Australian/New Zealand Compliance Statement

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to the Australian/New Zealand standard AS/NZS 3548 set out by the Spectrum Management Agency.



Canadian Compliance Statement

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.



Japanese Compliance (Voluntary Control Council Initiative)

Adaptec Software License Agreement

PLEASE READ CAREFULLY: THE USE OF THIS SOFTWARE IS SUBJECT TO THE SOFTWARE LICENSE TERMS OF ADAPTEC, INC. AND OTHER LICENSORS WHOSE SOFTWARE MAY BE BUNDLED WITH THIS PRODUCT.

BY YOUR USE OF THE SOFTWARE INCLUDED WITH THIS PRODUCT YOU AGREE TO THE LICENSE TERMS REQUIRED BY THE LICENSOR OF THAT SOFTWARE, AS SET FORTH DURING THE INSTALLATION PROCESS. IF YOU DO NOT AGREE TO THE LICENSE TERMS APPLICABLE TO THE SOFTWARE, YOU MAY RETURN THE ENTIRE UNUSED PRODUCT FOR A FULL REFUND.

Adaptec Software License Agreement

(Multiple User Applications)

In return for acquiring a license to use the Adaptec software ("Software") and the related documentation, you agree to the following terms and conditions:

1. License. This Agreement grants you, the Licensee, a license to:
 - a. Use the Software on a single computer system or on multiple workstations, systems and servers which incorporate an Adaptec RAID controller and may be accessed by multiple users from multiple locations. You may make as many installations of the Software as needed, but must restrict such installation only to systems, workstations or servers using an Adaptec RAID controller.
 - b. Make one copy of the Software in machine readable form solely for back-up purposes provided you reproduce Adaptec's copyright notice and any proprietary legends.
2. Restrictions. You may not distribute copies of the Software to others. You may not post or otherwise make available the Software, or any portion thereof, in any form, on the Internet. You may not use the Software in a computer service business, including in time sharing applications. The Software contains trade secrets and, in order to protect them, you may not decompile, reverse engineer, disassemble, or otherwise reduce the Software to a human-perceivable form. **YOU MAY NOT MODIFY, ADAPT, TRANSLATE, RENT, LEASE, LOAN, RESELL FOR PROFIT, DISTRIBUTE, NETWORK OR CREATE DERIVATIVE WORKS BASED UPON THE SOFTWARE OR ANY PART THEREOF.**
3. Ownership of Software. As Licensee, you own the media upon which the software is recorded or fixed, but Adaptec and its licensors retain title and ownership of the Software recorded on the original media and all subsequent copies of the Software, regardless of the form or media in which or on which the original and other copies may exist. This license is not a sale of the Software or any copy.
4. Confidentiality. You agree to maintain the Software in confidence and that you will not disclose the Software to any third party without the express written consent of Adaptec. You further agree to take all reasonable precautions to preclude access of unauthorized persons to the Software.

5. Term. This license is effective until January 1, 2045, unless terminated earlier. You may terminate the license at any time by destroying the Software (including the related documentation) together with all copies or modifications in any form. Adaptec will have the right to terminate our license immediately if you fail to comply with any term or condition of this Agreement. Upon any termination, including termination by you, you must destroy the Software (including the related documentation), together with all copies or modifications in any form.
6. Special Terms Applicable to Databases. Where a database is included with the Software, you acknowledge that it is licensed only in connection with the use of the Software to perform disc creation, and that the database and all data derived therefrom must be maintained in confidence in accordance with the provisions of Section 4. This license does not grant you any rights to distribute or disclose such database or data.
7. Limited Warranty. Adaptec and its Lessor warrant only that the media upon which the Software is furnished will be free from defects in material or workmanship under normal use and service for a period of thirty (30) days from the date of delivery to you. ADAPTEC AND ITS LICENSORS DO NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SOFTWARE OR DOCUMENTATION. THE FOREGOING STATES THE SOLE AND EXCLUSIVE REMEDIES ADAPTEC AND ITS LICENSORS WILL PROVIDE FOR BREACH OF WARRANTY. EXCEPT FOR THE FOREGOING LIMITED WARRANTY, ADAPTEC AND ITS LICENSORS MAKE NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED, AS TO NON-INFRINGEMENT OF THIRD PARTY RIGHTS, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow the exclusion of implied warranties or limitations on how long an implied warranty may last, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.
8. The entire liability of Adaptec and its licensors, and your exclusive remedy for a breach of this warranty, shall be:
 - a. The replacement of any media not meeting the above limited warranty which is returned to Adaptec; or:
 - b. If Adaptec or its distributor is unable to deliver replacement media which is free from defects in materials or workmanship, you may terminate this Agreement by returning the Software and your money will be refunded.
9. Limitation of Liability. IN NO EVENT WILL ADAPTEC OR ITS LICENSORS BE LIABLE TO YOU FOR ANY INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES, INCLUDING ANY LOST PROFITS, LOST SAVINGS, OR LOSS OF DATA, EVEN IF ADAPTEC OR A LICENSOR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY OTHER PARTY. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation or exclusion may not apply to you.

10. Export. You acknowledge that the laws and regulations of the United States and other countries may restrict the export and re-export of the Software. You agree that you will not export or re-export the Software or documentation in any form in violation of applicable United States and foreign law.
11. Government Restricted Rights. The Software is subject to restricted rights as follows. If the Software is acquired under the terms of a GSA contract: use, reproduction or disclosure is subject to the restrictions set forth in the applicable ADP Schedule contract. If the Software is acquired under the terms of a DoD or civilian agency contract, use, duplication or disclosure by the Government is subject to the restrictions of this Agreement in accordance with 48 C.F.R. 12.212 of the Federal Acquisition Regulations and its successors and 49 C.F.R. 227.7202-1 of the DoD FAR Supplement and its successors.
12. General. You acknowledge that you have read this Agreement, understand it, and that by using the Software you agree to be bound by its terms and conditions. You further agree that it is the complete and exclusive statement of the agreement between Adaptec and you, and supersedes any proposal or prior agreement, oral or written, and any other communication between Adaptec and you relating to the subject matter of this Agreement. No additional or any different terms will be enforceable against Adaptec unless Adaptec gives its express consent, including an express waiver of the terms of this Agreement, in writing signed by an officer of Adaptec. You assume full responsibility for the use of the Software and agree to use the Software legally and responsibly. This Agreement shall be governed by California law, except as to copyright matters, which are covered by Federal law. This Agreement is deemed entered into at Milpitas, California by both parties. Should any provision of this Agreement be declared unenforceable in any jurisdiction, then such provision shall be deemed severable from this Agreement and shall not affect the remainder hereof. All rights in the Software not specifically granted in this Agreement are reserved by Adaptec.

Should you have any questions concerning this Agreement, you may contact Adaptec by writing to:

Adaptec, Inc.
Legal Department
691 South Milpitas Boulevard
Milpitas, California 95035.

Limited 3-Year Hardware Warranty

1. Adaptec, Inc. ("Adaptec") warrants to the purchaser of this product that it will be free from defects in material and workmanship for a period of three (3) years from the date of purchase. If the product should become defective within the warranty period, Adaptec, at its option, will repair or replace the product, or refund the purchaser's purchase price for the product, provided it is delivered at the purchaser's expense to an authorized Adaptec service facility or to Adaptec.
2. Repair or replacement parts or products will be furnished on an exchange basis and will either be new or reconditioned. All replaced parts or products shall become the property of Adaptec. This warranty shall not apply if the product has been damaged by accident, misuse, abuse or as a result of unauthorized service or parts.
3. Warranty service is available to the purchaser by delivering the product during the warranty period to an authorized Adaptec service facility or to Adaptec and providing proof of purchase price and date. The purchaser shall bear all shipping, packing and insurance costs and all other costs, excluding labor and parts, necessary to effectuate repair, replacement or refund under this warranty.
4. For more information on how to obtain warranty service, write or telephone Adaptec at 691 South Milpitas Boulevard, Milpitas, CA 95035, (800) 959-7274.
5. THIS LIMITED WARRANTY DOES NOT EXTEND TO ANY PRODUCT WHICH HAS BEEN DAMAGED AS A RESULT OF ACCIDENT, MISUSE, ABUSE, OR AS A RESULT OF UNAUTHORIZED SERVICE OR PARTS.
6. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES WHICH NOW OR HEREAFTER MIGHT OTHERWISE ARISE RESPECT TO THIS PRODUCT. IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT SHALL (A) HAVE NO GREATER DURATION THAN 3 YEARS FROM THE DATE OF PURCHASE, (B) TERMINATE AUTOMATICALLY AT THE EXPIRATION OF SUCH PERIOD AND (C) TO THE EXTENT PERMITTED BY LAW BE EXCLUDED. IN THE EVENT THIS PRODUCT BECOMES DEFECTIVE DURING THE WARRANTY PERIOD, THE PURCHASER'S EXCLUSIVE REMEDY SHALL BE REPAIR, REPLACEMENT OR REFUND AS PROVIDED ABOVE. INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION LOSS OF DATA, ARISING FROM BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ARE NOT THE RESPONSIBILITY OF ADAPTEC AND, TO THE EXTENT PERMITTED BY LAW, ARE HEREBY EXCLUDED BOTH FOR PROPERTY DAMAGE, AND TO THE EXTENT NOT UNCONSCIONABLE, FOR PERSONAL INJURY DAMAGE.
7. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, AND SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY TO YOU.
8. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Contents

1 Getting Started

System Requirements	1-3
Hardware Requirements	1-3
Software Requirements	1-3
Fast Ethernet	1-4
Adaptec DuraLAN NICs	1-4
Driver Configurations for Adaptec DuraLAN NICs	1-6
Duralink64 Failover	1-6
Duralink64 Port Aggregation	1-7
FEC (Fast EtherChannel)	1-8
Advisories	1-9

2 Introduction to Duralink64 Port Aggregation

Traditional Network Configurations	2-2
Servers with Duralink64 Port Aggregation	2-4
Duralink64 Port Aggregation Example	2-4

3 DuraLAN NIC Installation

Important Note for Windows 95 Users	3-2
Installing the Appropriate NIC	3-3
Installing the DuraLAN NIC	3-4
Connecting the Network Cable	3-6
Installing the Appropriate NIC Driver	3-7

4 Network Configuration Examples

Network without Duralink64 Failover Protection	4-2
Single Hub or Switch on an Ethernet Segment	4-2
Dual Hubs	4-3
Dual Hubs with an Ethernet Switch	4-4
Dual Hubs with Routers	4-4
Dual Hubs with a 4-Port NIC	4-5

5 Duralink64 Driver Installation for Windows

Before You Begin	5-2
Note on DuraLAN NIC Ports	5-2
Installing the Duralink64 Driver	5-3
HotPlug and Windows 2000	5-3
Installing Windows 2000 (with GUI)	5-3
Installing Windows NT 4.0	5-7
Installing Windows NT 3.51	5-9
Installing Windows 98	5-11
Installing Windows 95	5-12
Windows 95 OSR2	5-12
Windows 95 OSR1	5-13
Installation Tips	5-14
Windows 95	5-14
Windows 98	5-15
Windows Clients Using Novell Client 32	5-15
Removing Previously Installed Drivers	5-16
Windows 2000	5-16
Windows NT 4.0	5-16
Windows NT 3.51	5-17
Windows 98 and 95 OSR1/OSR2	5-18

6 Duralink64 Standard Driver for Windows

Configuring the Standard Driver Ports in Windows 2000	6-2
General Port Configuration	6-2
Configuring Ports for Windows 2000	6-3
Configuring the Standard Driver Ports in Windows NT 4.0 and 3.51	6-4
Configuring the Ports in Windows 98/95	6-6

7 Duralink64 Failover for Windows NT and Windows 2000

Configuring the Ports	7-2
Configuring the Ports for Windows 2000	7-2
Configuring the Ports for Windows NT 4.0 or 3.51	7-2
Creating the Failover Pair	7-4
Configuring the Failover Pair for Windows 2000	7-4
Configuring the Failover Pair for Windows NT 4.0	7-6
Configuring the Failover Pair for Windows NT 3.51	7-8
Monitoring Failover Pairs in Windows NT 3.51 or 4.0	7-10
Note on DuraLAN NIC Ports	7-10

8 Duralink64 Port Aggregation for Windows NT and Windows 2000

Configuring Ports	8-2
Configuring the Ports for Windows 2000	8-2
Configuring the Ports for Windows NT 3.51 or 4.0	8-2
Creating Port Aggregation Groups	8-4
Creating Port Aggregation Groups for Windows 2000	8-4
Creating Port Aggregation Groups for Windows NT 4.0	8-6
Creating Fast EtherChannel Groups	8-8
Creating Fast EtherChannel Groups for Windows 2000	8-8
Creating Fast EtherChannel Groups for Windows NT 3.51 or 4.0	8-10
Assigning the TCP/IP Address	8-13
Assigning TCP/IP Address for Windows 2000	8-13
Assigning TCP/IP Address for Windows NT 3.51 or 4.0	8-16
Modifying Groups	8-18
Renaming Groups in Windows 2000	8-18
Renaming Groups in Windows NT 3.51 or 4.0	8-19
Adding or Removing Ports for Windows 2000	8-19
Adding or Removing Ports for Windows NT 3.51 or 4.0	8-21

Checking System Status for Windows 2000	8-24
Understanding the Status Tab for Windows 2000	8-25
Field Descriptions	8-25
Viewing the Groups	8-26
Checking System Status for Windows NT 3.51 or 4.0	8-27
Understanding the Status Tab for Windows NT 3.51 or 4.0	8-28
Field Descriptions	8-28
Viewing the Groups	8-29
Windows NT and Windows 2000	
Performance Monitor	8-30

9 Duralink64 Standard Driver for NetWare

Before You Begin	9-2
Note on NetWare	9-2
Installing the Duralink64 Driver during NetWare 5.1	
Operating System Installation	9-3
Installing the Duralink64 Driver during NetWare 5.0	
Operating System Installation	9-3
Installing the NetWare Standard Driver	9-4
Configuring the Ports	9-5
Assigning the Protocols	9-6
Viewing the Configuration	9-9
Restarting the Server	9-10
Copying and Saving the Configuration	9-11
Removing or Uninstalling Drivers	9-12

10 Duralink64 Failover for NetWare

Before you Begin	10-2
Note on NetWare	10-2
Installing the NetWare Failover Driver	10-3
Configuring the Ports	10-4
Creating the Failover Pairs	10-6
Assigning the Protocols	10-9
Viewing the Configuration	10-12
Copying and Saving the Configuration	10-13
Viewing the System Status	10-14
Element Descriptions	10-15
F Keys	10-15
Modifying the Driver Configuration	10-16
Removing or Uninstalling Drivers	10-16

11 Duralink64 Port Aggregation for NetWare

Before you Begin	11-2
Note on NetWare	11-2
Installing the NetWare Port Aggregation Driver	11-3
Configuring Ports	11-4
Creating Port Aggregation Groups	11-6
Creating Fast EtherChannel Groups	11-9
Assigning Protocols	11-12
Verifying Configuration	11-15
Copying and Saving the Configuration	11-16
Viewing System Status	11-17
System Status Data	11-17
Setting Time Intervals	11-18
Modifying Driver Configurations	11-18
Removing or Uninstalling Drivers	11-19

12 Installing Duralink64 NetWare Client

Installing Novell Client 32 for DOS	12-2
Selecting Options	12-3
Editing startnet.bat	12-4
Connecting Clients to the NetWare Server	12-4
Installing Novell Client 32 for Windows	12-5
Connecting Clients to the NetWare Server	12-5
Connecting Clients to the	
NetWare Failover Server	12-6
Connecting Clients to the	
NetWare Port Aggregation Server	12-7

A Cables and LEDs

Connection Types	A-2
Full Duplex Support	A-2
Cable Requirements	A-3
Straight-through Cables	A-3
Pin-out and Color Requirements	A-4
Diagnostics Loop-back Cable	A-4
Diagnostic LEDs	A-5
LED Functions	A-6

B Troubleshooting Tips

Isolating Faulty Hardware	B-2
Troubleshooting	B-3
Configuring the BIOS	B-4
Frequently Asked Questions	B-5
Duralink64 Software and DuraLAN NICs –	
General Questions	B-5
Duralink64 v5.x Failover Software Questions	B-7
Duralink64 v5.x Port Aggregation	
Software Questions	B-8
Duralink64 v5.x Windows NT –	
General Questions	B-11

Duralink64 v5.x Windows 95, Windows 98, and Windows 2000 – General Questions	B-12
Windows 95	B-12
Windows 98	B-12
Duralink64 v5.x NetWare – General Questions	B-13

C Duralink64 SNMP Agents

Monitoring the NICs by SNMP	C-2
SNMP Support	C-2

D The Diagnostics Utility

Running the Diagnostics	D-1
From the Hard Disk Drive	D-1
From the Floppy Disk Drive	D-2
Diagnostic Tests	D-2

1

Getting Started

In this Chapter

<i>System Requirements</i>	1-3
<i>Fast Ethernet</i>	1-4
<i>Adaptec DuraLAN NICs</i>	1-4
<i>Driver Configurations for Adaptec DuraLAN NICs</i>	1-6
<i>Duralink64 Failover</i>	1-6
<i>Duralink64 Port Aggregation</i>	1-7
<i>FEC (Fast EtherChannel)</i>	1-8
<i>Advisories</i>	1-9

This *User's Guide* describes how to install and configure Adaptec® DuraLAN™ Fast Ethernet Network Interface Cards (NICs). Please review the system requirements before you begin.

User's guide summary:

- Chapters 1 and 2 combined form an introduction to DuraLAN NICs. They describe how to install your Adaptec DuraLAN NIC.
- Chapters 3 and 4 explain the process of selecting and installing a DuraLAN NIC, describing how to install and configure the DuraLAN standard NIC driver in NetWare and Windows® environments.
- Chapters 5 through 8 explain Duralink64 driver for Windows, describing how Duralink64™ Failover adds value to your network and provides installation instructions for Windows NT® and NetWare-based servers.
- Chapters 9 through 12 describe the Duralink64 drivers for NetWare, including how to create a virtual port by grouping ports to maximize bandwidth for your mission-critical applications.
- At the back of the manual, the appendices provide supplemental information that may be required for a proper installation.

System Requirements

Hardware Requirements

The minimum hardware system requirements for using the Adaptec DuraLAN NIC are as follows:

System Component	Requirements
All NICs	<ul style="list-style-type: none">■ Available bus-mastering PCI slot■ Most recent PCI system BIOS is recommended■ Intel x86 platform with single or multiprocessor (Pentium Pro or above is required when running under Windows 2000)■ 16-MB RAM (64-MB RAM required when running under Windows 2000)
Two- and four-port NICs	<ul style="list-style-type: none">■ System BIOS supporting PCI-to-PCI bridge chip■ Multiport NICs require PCI 2.1-compliant bus



Note: Each port on an Adaptec NIC needs an IRQ (Interrupt Request) number/line. The system BIOS allocates the IRQs to the various ports. Adaptec NICs support IRQ sharing and can share interrupts with other PCI devices that are PCI 2.1 compliant.

Software Requirements

The minimum software system requirements are as follows:

- **Windows**—Windows NT 3.51 or 4.0 Workstation or Server, Windows® 95, Windows® 98, or Windows® 2000.
- **NetWare**—NetWare 4.x, 5.x.

Fast Ethernet

Fast Ethernet is a networking standard defined by the Institute of Electrical and Electronic Engineers (IEEE) in the IEEE 802.3u Specification. Fast Ethernet runs at 100 Megabits/sec, or at 200 Megabits/sec in Full Duplex Mode.

Fast Ethernet uses the same Carrier Sense Multiple Access with Collision Detection (CSMA/CD) architecture used on 10BaseT and 10Base2 10 Megabits/sec network specifications, which allows for easy integration with existing networks.


Adaptec DuraLAN NICs




Note: The 64-bit NICs will also work in 32-bit PCI slots.

Adaptec provides the following PCI 10/100 DuraLAN Fast Ethernet NIC models:


- **ANA-6x011 Single64™**—a single-port 64-bit/32-bit NIC supporting autosensing between 10- and 100-Megabits/sec line speeds.

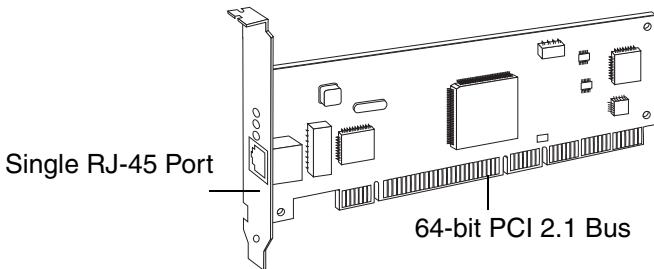

- **ANA-6x022**—a two-port NIC that offers two high-performance 10/100 Fast Ethernet ports on a single 64-bit/32-bit NIC. Each port runs at independent speeds for maximum flexibility. This NIC supports Full Duplex Mode to deliver speeds up to 400-Megabits/sec cumulative throughput.

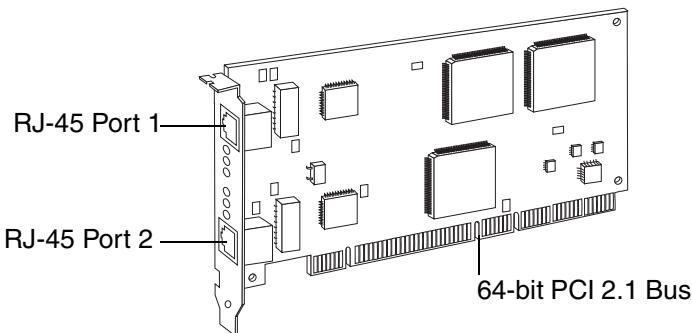

- **ANA-6x044**—a four-port NIC that offers four high-performance 10/100 Fast Ethernet ports on a single 64-bit/32-bit NIC. Each port runs at independent speeds for maximum flexibility. This NIC supports Full Duplex Mode to deliver speeds up to 800-Megabits/sec cumulative throughput.

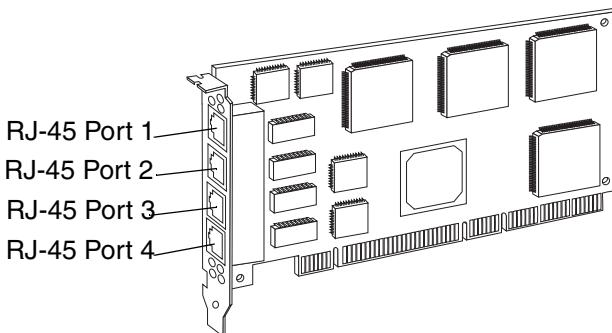

Driver Configurations for Adaptec DuraLAN NICs

A number of driver configurations are available for the Adaptec DuraLAN NICs. With the standard driver configuration, each port acts like a separate NIC and has its own protocol level address. In this driver configuration, each port or NIC would normally connect to a physically separate network. Be sure to observe correct subnetting when configuring your protocol while using the standard driver configuration. Consult your operating system documentation for details.

Duralink64 Failover

Duralink64 Failover software provides protection from network-link failures on Fast Ethernet servers running mission-critical applications. During a port failure, Duralink64 Failover keeps the connection to the server live by moving all traffic on the affected segment to a backup port. When a failure is detected on the primary port, that port is disabled and the backup port takes over to continue data transmission, keeping the connection running without interruption.

Duralink64 Failover is often used in a troubled environment to provide failover capabilities when any of the following conditions exist:

- An Ethernet link loss
- A watchdog timer expires
- An abnormal hardware interrupt occurs
- Abnormal send/receive counters, such as too many collisions or errors occur on the segment

Duralink64 Failover supports servers running under Windows NT 4.0 and 3.51, Novell NetWare 4.x, 5.0, and 5.1, and Windows 2000.

Duralink64 Failover is compatible with

- ANA-6x011 single-port NICs
- ANA-6x022 two-port NICs
- ANA-6x044 four-port NICs

Duralink64 Port Aggregation

Duralink64 Port Aggregation is a software package that provides network path redundancy and increased bandwidth for Fast Ethernet servers running mission-critical applications. Duralink64 Port Aggregation works by distributing the throughput over multiple ports.

With Duralink64 Port Aggregation, you can create a virtual port by grouping multiple ports together. This grouping distributes the network load by sharing the resources of all ports in a group. In the Port Aggregation group, one port becomes the “primary” port and its MAC address is given to the protocol. Thus, the group behaves as a single interface, allowing the software to manage the combined resources of the group efficiently. In the event of a port failure, the remaining ports carry the load and keep the network running and uninterrupted.

Duralink64 Port Aggregation supports servers running under Windows NT 4.0 and 3.51, Novell NetWare 4.x, 5.0, and 5.1, and Windows 2000.



Note: Although a switch is required for Port Aggregation, the switch itself does not need to implement any special trunking capability for this driver configuration.

Duralink64 Port Aggregation is compatible with

- ANA-6x011 single-port NICs
- ANA-6x022 two-port NICs
- ANA-6x044 four-port NICs

FEC (Fast EtherChannel)

Fast EtherChannel (FEC) is a technology developed by Cisco Systems based on standard Fast Ethernet used in parallel to provide the additional bandwidth network backbones required today. FEC combines two or four Fast Ethernet links to a single logical connection capable of carrying 800 Megabits/sec of aggregate full-duplex throughput. In addition to scalable bandwidth, the technology also provides fault tolerance and resiliency, protecting the network from outages due to failed links.

FEC allows grouping of DuraLAN ports or NICs allowing full utilization of available bandwidth (up to 800 Megabits/sec). Up to four single-port NICs, two 2-port NICs, or one 4-port NIC can be grouped. This technology also provides load balancing and management of each link by distributing traffic across multiple links in the channel. In addition, FEC technology provides redundancy in the event of link failure.

Duralink64 software and all of Adaptec DuraLAN NICs support FEC technology, allowing redundancy and high-speed aggregation between switches supporting FEC and servers configured with Adaptec's FEC driver option.

FEC is available on select Cisco Catalyst switches and Cisco routers.

For additional information on Cisco's FEC technology, visit the Cisco Systems web site at <http://www.cisco.com>

Advisories

This document includes three kinds of advisories.



Note: Notes are reminders, tips, or suggestions that might simplify the procedures included in this document.



Caution: Cautions alert you to actions that might cause damage to your system or your data.



WARNING: Warnings alert you to actions that might cause injury to you or someone else.

To avoid injury to people or damage to equipment and data, be sure to follow the cautions and warnings in this document. Adaptec does not claim to have included in this document every condition or situation that might require a caution or warning notice. Be sure to consult the documentation for your computer and any connected equipment when you are installing the equipment or changing its configuration.



WARNING: *Always* use caution when handling electrical equipment!

2

Introduction to Duralink64 Port Aggregation

In this Chapter


<i>Traditional Network Configurations</i>	2-2
<i>Servers with Duralink64 Port Aggregation</i>	2-4

This chapter compares traditional Ethernet configurations to Ethernet servers using Duralink64 Port Aggregation. These examples show the impact Duralink64 Port Aggregation has on network performance and hardware investment.

Traditional Network Configurations


The following three examples show some typical configuration methods.

The figure below illustrates a single segment server initialized at 100 Megabits/sec with Full Duplex Ethernet (FDE). In this example, the segmented server is limited to 200 Megabits/sec. In addition, if the connection to the server fails, the network may go down.

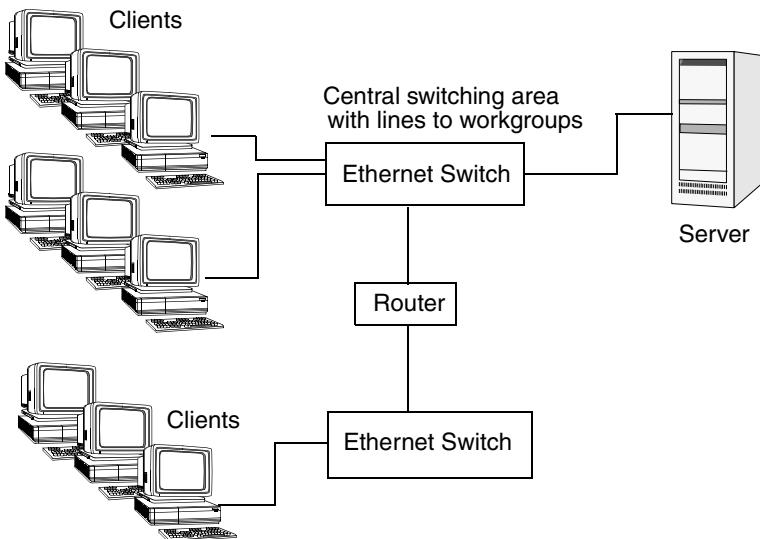


The next traditional method provides network *fault tolerance* through doubling the hardware and addition of a special version of NetWare (SFT3). Data is kept current between servers via a Mirrored

Server Link (MSL). In the illustration below, one server is active while the other is ready to take over all duties if the other fails.

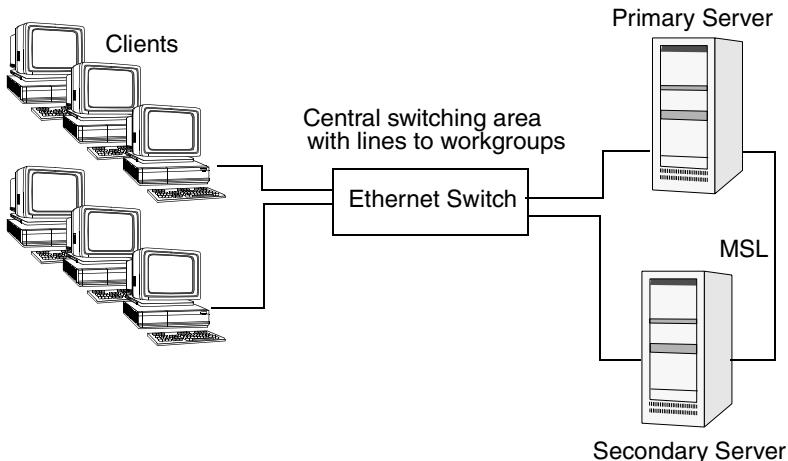

The figure below illustrates a configuration with Windows NT server clustering (Microsoft's *Wolfpack*).

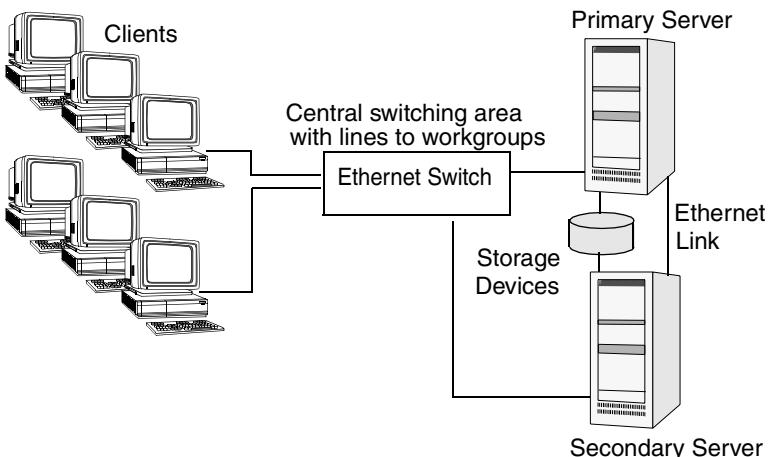


Servers with Duralink64 Port Aggregation

A server with Duralink64 Port Aggregation can use up to 12 Adaptec PCI Fast Ethernet ports in one aggregated group (at 1.2 Gigabits/sec per group).

If any of the contributing members of a specific aggregated group should fail, that member is excluded from the group. The remaining ports distribute the existing load.

Duralink64 Port Aggregation Example

The figure below illustrates a server with 12 ports from three Adaptec ANA-6x044 NICs. With this configuration, the server has a cumulative bandwidth of 1.2 Gigabits/sec on its single virtual segment. Further, the network segment is fault tolerant, enabling the network to remain alive should any port fail.

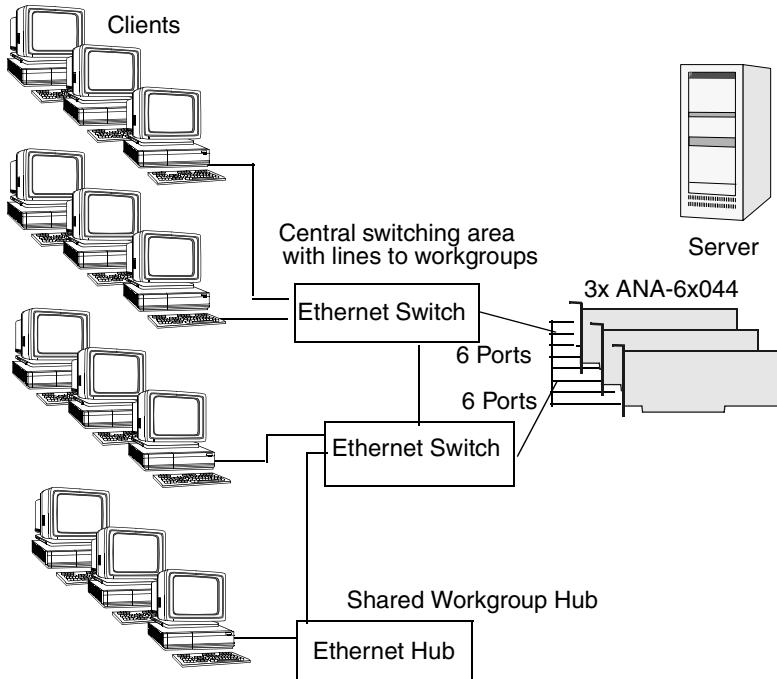

3

DuraLAN NIC Installation

In this Chapter

<i>Important Note for Windows 95 Users</i>	3-2
<i>Installing the Appropriate NIC</i>	3-3
<i>Installing the DuraLAN NIC</i>	3-4
<i>Connecting the Network Cable</i>	3-6
<i>Installing the Appropriate NIC Driver</i>	3-7

This chapter provides instructions on installing your Adaptec DuraLAN NIC. If you are a Windows 95 user, please read *Important Note for Windows 95 Users!* before proceeding with this installation.

Important Note for Windows 95 Users

Before installing the DuraLAN NIC, verify which version of Windows 95 is installed. (You either have OSR1 or OSR2.) You will need to know which version you have if you install the DuraLAN Standard driver. Use the following instructions for help:

- 1 Start Windows 95.
- 2 Click the **Start** menu, point to **Settings** and then click **Control Panel**.
- 3 Double-click the **System** icon. The General tab displays your version of Windows 95.

Windows 95 Versions	
4.00.950	OSR1
4.00.950A	OSR1
4.00.950B	OSR2
4.00.950C	OSR2

- 4 Click **OK** to exit the General tab.
- 5 Shut down the system, and then turn OFF the power.
- 6 Continue with *Installing the DuraLAN NIC* on page 3-4.

Installing the Appropriate NIC

The following table describes which DuraLAN NIC to install for your operating system and Adaptec driver.

	DuraLAN Standard Driver	Duralink64 Failover	Duralink64 Port Aggregation/Fast Ethernet Channel
Windows 95 OSR1¹	ANA-62011 ANA-62022 ANA-62044	N/A N/A N/A	N/A N/A N/A
Windows 95 OSR2¹	ANA-62011 ANA-62022 ANA-62044	N/A N/A N/A	N/A N/A N/A
Windows 98	ANA-62011 ANA-62022 ANA-62044	N/A N/A N/A	N/A N/A N/A
Windows 2000	ANA-6x011 ANA-6x022 ANA-6x044	ANA-6x011 ANA-6x022 ANA-6x044	ANA-6x011 ANA-6x022 ANA-6x044
Windows NT 3.51, 4.0	ANA-6x011 ANA-6x022 ANA-6x044	ANA-6x011 ANA-6x022 ANA-6x044	ANA-6x011 ANA-6x022 ANA-6x044
NetWare 4.x, 5.0, 5.1	ANA-6x011 ANA-6x022 ANA-6x044	ANA-6x011 ANA-6x022 ANA-6x044	ANA-6x011 ANA-6x022 ANA-6x044

¹ Windows 95 OSR1 and OSR2 use two different Adaptec drivers. See the appropriate installation instructions.

Installing the DuraLAN NIC



WARNING: Before you begin, turn OFF power to the PC, and disconnect the power cord!


- 1 Ground yourself by touching an unpainted surface of the PC case.
- 2 Remove the cover from your computer. Refer to the manufacturer's documentation for help.
- 3 Locate an unused PCI expansion slot.
 - For best performance, install the 64-bit DuraLAN NIC in a 64-bit PCI expansion slot (32-bit PCI expansion slots may be used also).
 - Some noncompliant 32-bit PCI expansion slots *do not* support 64-bit NICs. This is because the slot's outside notch is not deep enough to allow the bus contacts to fit around the slot. If the 64-bit DuraLAN NIC does not fit in the slot, please return to your purchase location for replacement.
- 4 Unscrew the bracket screw and remove the expansion slot bracket cover.



Note: PCI slots and NICs come in two varieties: 3.3-volt, and the more common 5-volt. All Adaptec PCI NICs support 5-volt and 3.3-volt slots.

- 5 Carefully remove the DuraLAN NIC from its antistatic container.
- 6 Verify the model name on the NIC (such as ANA-6x011, ANA-6x022, and so on).
- 7 Check the NIC for any visible signs of damage which may have occurred during shipment. If you find a problem, immediately notify your network supplier and the shipping service that delivered your NIC.
- 8 Insert the NIC into the expansion slot, pressing down firmly until the bus contacts are seated in the slot.

9 Replace the screw that was removed in Step 4, as shown in the figure below:

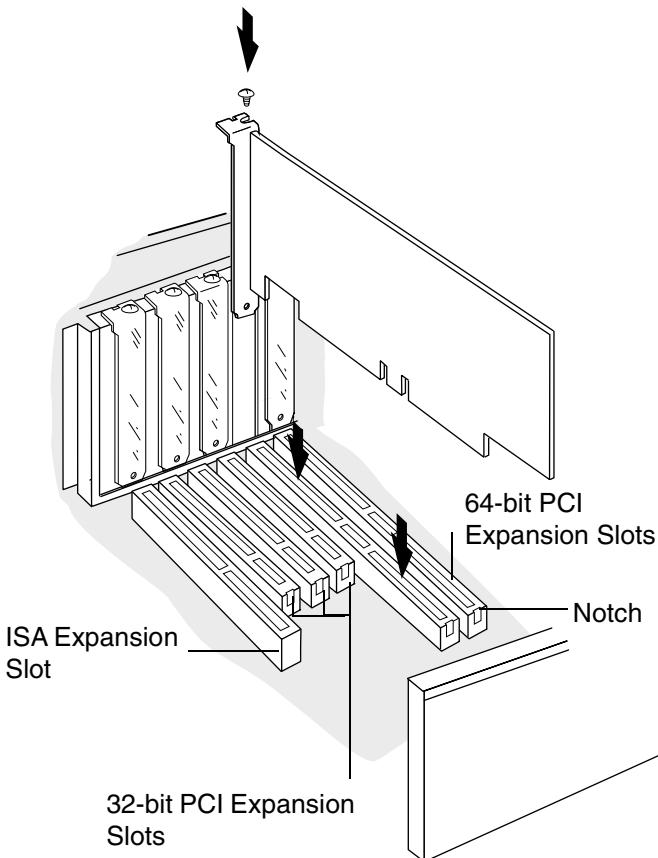

10 Replace the computer cover.

11 Continue with *Connecting the Network Cable* on page 3-6.

Connecting the Network Cable

Cable requirements for Adaptec DuraLAN NICs vary according to network speed, cabling standard, and the connector to be used. See [Appendix A, Cables and LEDs](#) for detailed information on cabling.

- 1** Determine the appropriate cabling for your network.
- 2** Connect the cable to the NIC connector. (For multiport NICs, connect a cable to each port.)
- 3** Connect the other end of the cable to your hub, switch, or client.
- 4** Continue with [Installing the Appropriate NIC Driver](#) on page [3-7](#).

Installing the Appropriate NIC Driver

After installing the DuraLAN NIC, you must install the appropriate DuraLAN NIC driver.



Note: For Windows NT 3.51/4.0, Windows 2000, and Novell NetWare, only one driver type may be configured at any one time. You may install one of three drivers: the DuraLAN Standard driver, Duralink64 Failover, or Duralink64 Port Aggregation.

The Adaptec Duralink64 disks contain the following drivers:

Disk 1	Disk 2
Windows 2000 Standard	
Windows NT 4.0 Standard	NetWare 4.x/5.0/5.1 Standard
Windows NT 3.51 Standard	Client 32 for DOS
Windows 95 Standard	NetWare Failover
Windows 98 Standard	DOS Diagnostics
Windows 2000 Failover	
Windows NT 4.0 Failover	NetWare Port Aggregation/Fast EtherChannel
Windows NT 3.51 Failover	
Windows 2000 Port Aggregation	
Windows NT 4.0 Port Aggregation	
Windows NT 3.51 Port Aggregation	
Windows 2000 Fast EtherChannel	
Windows NT 4.0 Fast EtherChannel	
Windows NT 3.51 Fast EtherChannel	

- DuraLAN Standard driver

The Standard driver uses each DuraLAN port independently.



Note: Windows 95, Windows 98, and Novell Client 32 *do not* support Duralink64 Failover. Install the DuraLAN Standard driver for these operating systems.

- Duralink64 Failover driver

The Duralink64 Failover driver groups two ports in a Failover combination, one as the primary port and the other as the backup port. The ports may be connected to a hub or switch.

- Duralink64 Port Aggregation or FEC driver

The Duralink64 Port Aggregation driver groups up to twelve ports together and must be used with a switch. Fast EtherChannel can be grouped in groups of two or four. This grouping requires a switch that supports FEC.

Always use the latest software version available for your DuraLAN NIC. Drivers are updated regularly on Adaptec's Web, FTP, and BBS sites to provide enhanced performance and new features.

4

Network Configuration Examples


In this Chapter

<i>Network without Duralink64 Failover Protection</i>	4-2
<i>Single Hub or Switch on an Ethernet Segment</i>	4-2
<i>Dual Hubs</i>	4-3
<i>Dual Hubs with an Ethernet Switch</i>	4-4
<i>Dual Hubs with Routers</i>	4-4
<i>Dual Hubs with a 4-Port NIC</i>	4-5

This chapter describes the benefits of using Duralink64 Failover and some typical network configurations. The primary and backup Adaptec DuraLAN Fast Ethernet NICs or ports reside in the server. Duralink64 Failover operates on these NICs to provide redundancy on the server. The backup port does not operate until the primary port fails.


Network without Duralink64 Failover Protection

This figure shows one NIC connected to a hub or switch on an Ethernet segment. If the NIC fails, all network traffic is stopped.

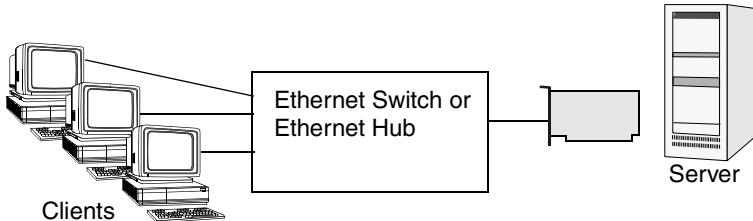


Single Hub or Switch on an Ethernet Segment

This figure shows two NICs connected to a hub or switch on an Ethernet segment. Duralink64 Failover provides failover capability if one NIC fails.

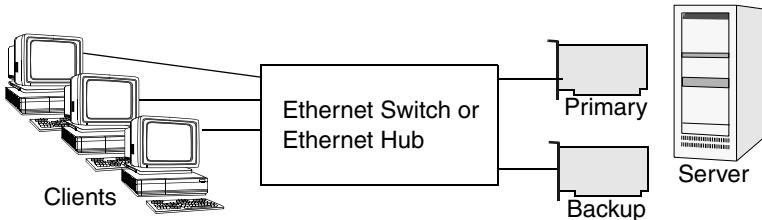


Dual Hubs

This figure shows each NIC connected to a separate hub to provide redundancy. If the hub port being used by the primary NIC fails, the backup NIC becomes active and all network traffic is immediately directed through it.

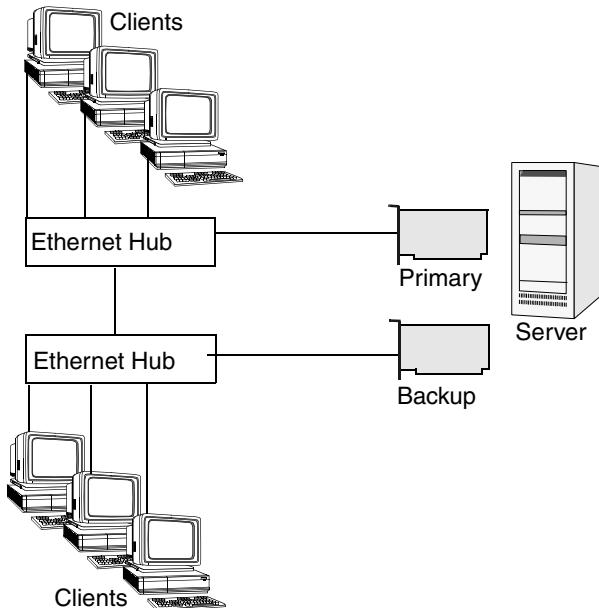


Dual Hubs with an Ethernet Switch

This figure shows how Duralink64 Failover provides network redundancy to a switched network. Ethernet switches provide network traffic segmentation.

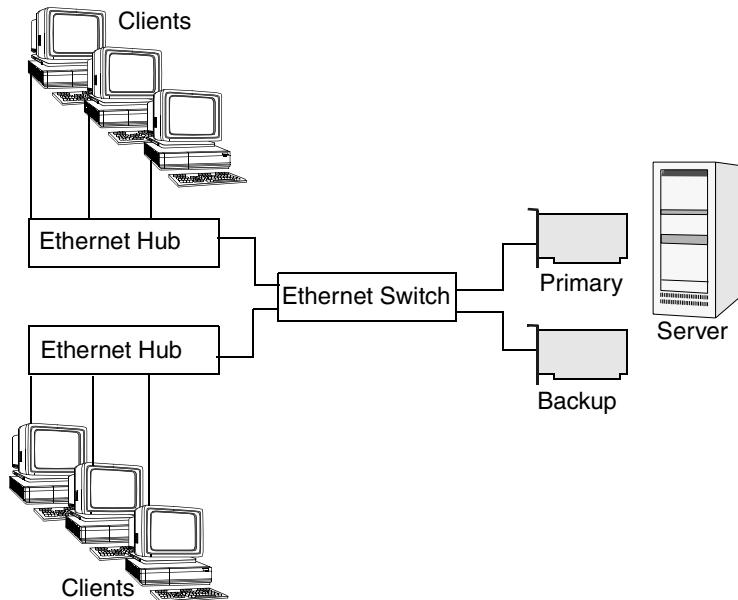


Dual Hubs with Routers

This figure shows how to set up Duralink64 Failover in a network configuration using routers. Routers provide WAN and LAN connectivity and allow physical network protocol redundancy.

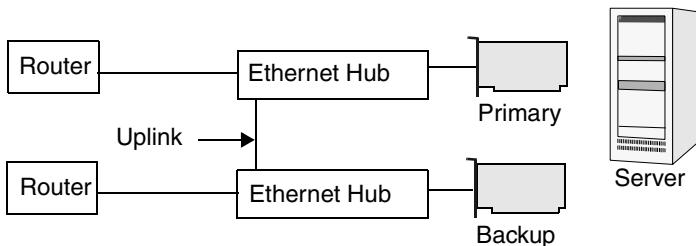

Dual Hubs with a 4-Port NIC

This figure shows port redundancy, using Duralink64 Failover, within a 4-port NIC. As shown in the figure below, Ports 1 and 3 are used as the primary ports to each Ethernet hub. Ports 2 and 4 are backup ports connected to each hub.

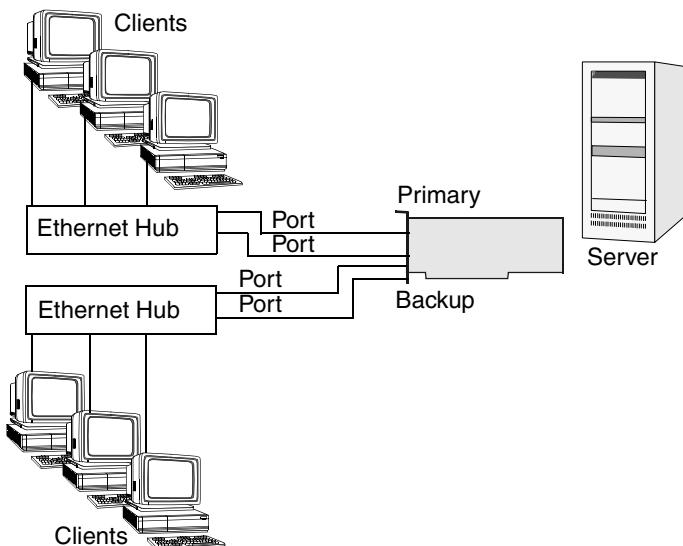

5

Duralink64 Driver Installation for Windows

In this Chapter

<i>Before You Begin</i>	5-2
<i>Installing the Duralink64 Driver</i>	5-3
<i>Installation Tips</i>	5-14
<i>Removing Previously Installed Drivers</i>	5-16

This chapter provides instructions for installing the DuraLink64 driver of your choice on a server running Windows NT versions 4.0 or 3.51, or Windows 2000.

Before You Begin

- Verify that all system, memory, and NIC requirements are met. (See *System Requirements* on page 1-3.)
- Verify that the new Adaptec DuraLAN NIC is installed properly in the server. (See *Chapter 3, DuraLAN NIC Installation*.)
- Check your system for installed DuraLAN NIC drivers.



Note: For Windows NT 3.51/4.0 and Novell NetWare, only one driver type may be configured at any one time. You may install one of three drivers: the DuraLAN Standard driver, Duralink64 Failover, or Duralink64 Port Aggregation. See *Removing Previously Installed Drivers* on page 5-16.

Note on DuraLAN NIC Ports

When you are installing Adaptec DuraLAN NICs, it is a good idea to document where each port physically resides in the server, especially when two or more identical NICs exist. This is important because ports are identified by generic port names, such as Adptsf1, Adptsf2, Adptsf3, and so on.

Port names are assigned to ports in the order that the system scans these ports at boot time. Consequently, whenever you physically rearrange the network cards, the port names change as well.

Installing the Duralink64 Driver



Note: All NICs must be updated after installing the Adaptec Duralink64 5.0 driver.

HotPlug and Windows 2000

Windows 2000 supports HotPlug on server systems that have HotPlug-compatible hardware. HotPlug allows you to add or remove an NIC to your server system without turning off your computer. Refer to the system's user guide for more complete and specific details of how the system performs while the HotPlug slot is in service or when it is not being used.

Following is a description of successful in-house procedures (at Adaptec) using IBM's Netfinity 7000 server to demonstrate how to properly remove or install the NIC.

To Remove: Double-click the **Unplug or Eject Hardware** icon located at the bottom right corner of the desktop area. This brings up the "Unplug or Eject Hardware" window. Select the ports that you want to remove. Click **STOP**. Click on the port name to confirm selection. Click **OK**.

The green LED on the top of the slot where the NIC is located will start to flash. This indicates that the NIC is no longer in service. The NIC can then be unclipped and removed from its slot.

The computer does not need to be turned off. The system will continue running and will reconfigure the remaining NICs.

To Install: Insert the NIC into an empty slot. Clip into place (different server brands have different clipping and locking systems). The computer will automatically sense the addition of the NIC and reconfigure itself to add the port(s) to the system.

Installing Windows 2000 (with GUI)


Windows 2000 includes a DuraLAN NIC driver embedded in the installation software. When you plug in a Plug and Play device, Windows 2000 installs the necessary drivers, updates the system, and allocates resources.

If you are installing Windows 2000 at this time, start with Step 6 when prompted for the DuraLAN NIC.

To install the DuraLAN driver on a Windows 2000 platform, follow these steps:


- 1 Start Windows 2000.
- 2 From the Start menu, point to **Settings**, and then click **Control Panel**.

- 3 In the Control Panel, double-click the System icon  .
- 4 In the System Properties window, select the **Hardware** tab, and click **Device Manager...** .
- 5 Double-click **Network adapters**.
- 6 Double-click an appropriate Adaptec ANA6x0xx NIC, as shown below:

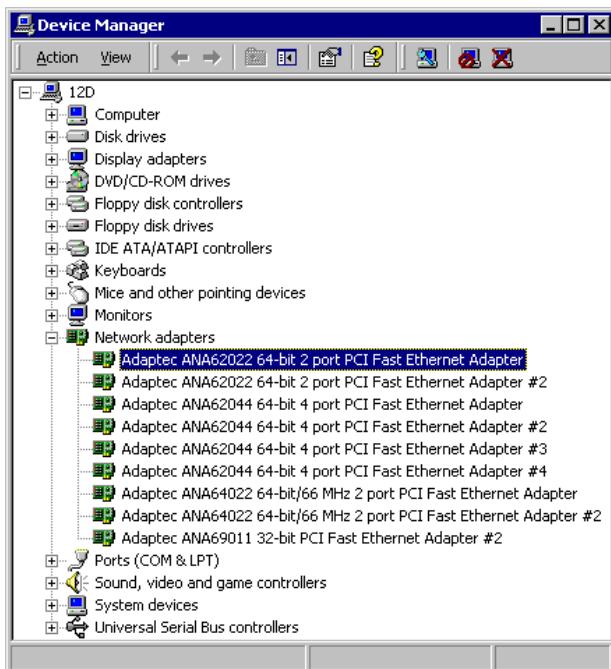

- 7 Click the **Driver** tab.

8 Click Update Driver... .

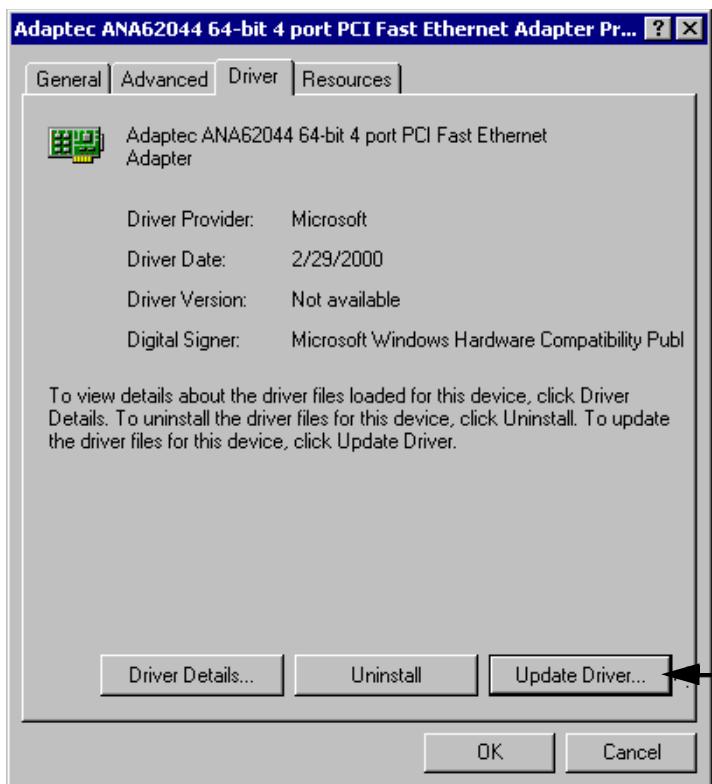

9 Click Next to continue.

10 In the Install Hardware Device Drivers window, select **Search for a suitable driver for my device [recommended], and click Next.**

11 Insert the floppy disk containing the driver files in the floppy disk drive.

12 In the Locate Driver Files window, select **Floppy disk drives, and click Next.**

13 In the Driver Files Search Results window, select **Install one of the other drivers, and click Next.**

- 14 In the Driver Files Found window, scroll to the driver list to the right to view the Location field, select the **netana.inf** file located on the floppy disk, and click **Next**.
- 15 In the final Upgrade Device Driver Wizard screen, click **Finish** to close the wizard.
- 16 In the Port Properties window, click **Close**.
- 17 Repeat Steps 6 through 16 for each Adaptec ANA-6x0xx NIC port that is to be configured.
- 18 Continue to the appropriate configuration chapter:
 - [*Chapter 6, Duralink64 Standard Driver for Windows.*](#)
 - [*Chapter 7, Duralink64 Failover for Windows NT and Windows 2000.*](#)
 - [*Chapter 8, Duralink64 Port Aggregation for Windows NT and Windows 2000.*](#)




Note: If you are updating Adaptec drivers, make sure to upgrade all Adaptec based network cards.

Installing Windows NT 4.0

If you are installing Windows NT at this time, start with Step 6 when prompted for the DuraLAN NIC.


To install the DuraLAN driver on a Windows NT 4.0 platform follow these steps:

- 1 Start Windows NT.
- 2 From the Start menu, point to **Settings**, and click **Control Panel**.
- 3 In the Control Panel, double-click **System**.
- 4 In the Network window, click the **Adapters** tab.
- 5 In the Adapters tab, click **Add**.
- 6 In the Select Network Adapter window, click **Have Disk**.

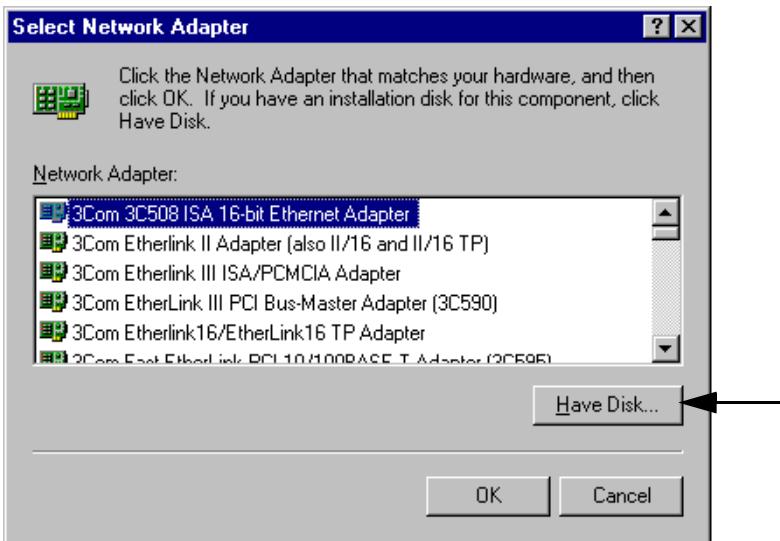


- 7 When the Insert Disk window appears, insert the Duralink64 for Windows disk, and click **OK**.

8 In the Select OEM Option window, click the DuraLAN NIC model that is installed, and click **OK**.

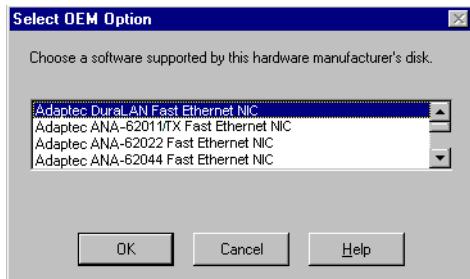

9 In the Adaptec DuraLAN NIC Driver Installation window, select the driver, and click **OK**. For basic installations, select **Standard**.

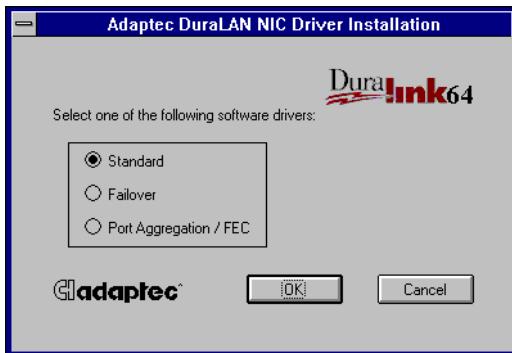

10 Continue to the appropriate configuration chapter:


- [Chapter 6, Duralink64 Standard Driver for Windows.](#)
- [Chapter 7, Duralink64 Failover for Windows NT and Windows 2000.](#)
- [Chapter 8, Duralink64 Port Aggregation for Windows NT and Windows 2000.](#)

Installing Windows NT 3.51

If you are installing Windows NT at this time, start with Step 6 when prompted for the DuraLAN NIC.


To install the DuraLAN driver on a Windows NT 3.51 platform, follow these steps:

- 1 Start Windows NT.
- 2 From the Main Group menu, click **Control Panel**.
- 3 In the Control Panel, double-click **Network**.
- 4 In the Network Settings window, click **Add Adapters**.

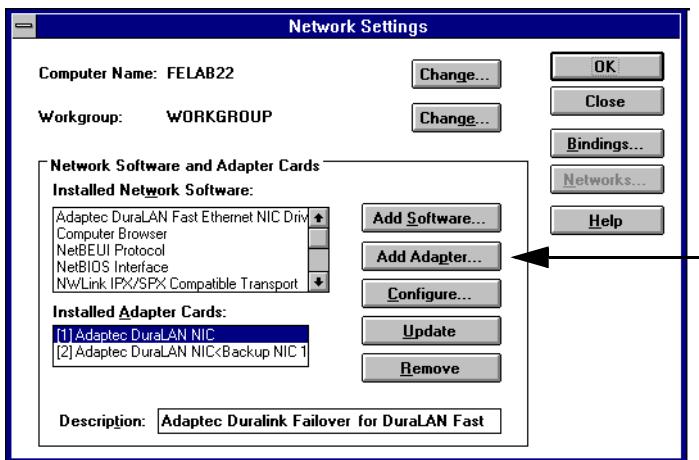


- 5 In the Add Network Adapter window, select **(Other) Requires disk from manufacturer**.
- 6 When the Insert Disk window appears, insert the Duralink64 for Windows disk, and click **OK**.

7 In the Select OEM Option window, click the DuraLAN NIC model that is installed, and click **OK**.

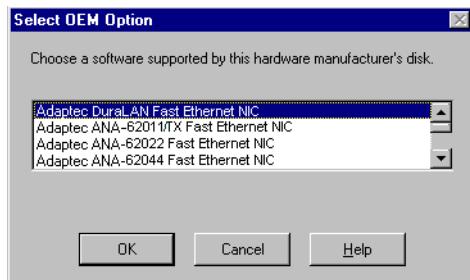

8 In the Adaptec DuraLAN NIC Driver Installation window, select the driver, and click **OK**.

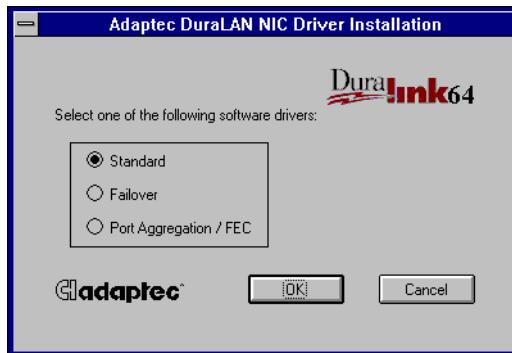

9 Continue to the appropriate configuration chapter:

- [Chapter 6, Duralink64 Standard Driver for Windows.](#)
- [Chapter 7, Duralink64 Failover for Windows NT and Windows 2000.](#)
- [Chapter 8, Duralink64 Port Aggregation for Windows NT and Windows 2000.](#)

Installing Windows 98

To install the DuraLAN driver on the Windows 98 platform, follow these steps:

- 1 Start Windows 98, and wait for the New Hardware window to open.¹
- 2 In the first screen, click **Next**.
- 3 In the next window, click **Search for the best driver for your device (recommended)**, and click **Next**.
- 4 In the next window, select **Floppy Disk Drives**.
- 5 Insert the Duralink64 for Windows Disk, and click **Next**.



Note: If you do not insert the floppy disk, the following message appears: Windows was unable to locate a driver for this device. If you do not want to install a driver now, click **Next**. To search again, click **Back**.

- 6 The system indicates that the driver file was found. Insert the CD you used to install Windows 98, then click **Next**.



Note: You may receive the following Version Conflict message: A file being copied is older than the file currently on your computer. It is recommended that you keep your existing file. Do you want to keep the file?
Click **Yes**.

- 7 Click **Finish**.
- 8 Remove the floppy disk.
- 9 If the System Settings Change window appears, click **Yes** to restart the system.
- 10 Continue to [Chapter 6, Duralink64 Standard Driver for Windows](#).

¹ If the wizard does not open, refer to [Installation Tips](#) on page 5-14.

Installing Windows 95

This section provides instructions for installing the Duralink64 Standard driver in Windows 95 OSR1 and OSR2. To verify which version of Windows 95 is installed, see *Important Note for Windows 95 Users* on page [3-2](#).

Windows 95 OSR2

To install the Duralink64 Standard driver on a Windows 95 OSR2 platform, follow these steps:

- 1 Start Windows 95. The Update Device Driver wizard opens.
- 2 Insert the Duralink64 for Windows disk.
- 3 In the wizard, click **Next**.
- 4 Click **Finish**.
- 5 In the Insert Disk window, click **OK**.
- 6 Type **a :**, and click **OK**.
- 7 When the Insert Disk window appears, insert the Windows 95 CD, and click **OK**.
- 8 Enter the path to the Windows 95 installation directory, and then click **OK**. (As an example, **d :\win95**.¹ Consult your Microsoft Windows 95 documentation for help.)
- 9 Remove the floppy disk from the floppy disk drive.
- 10 When the System Settings Change window appears, restart the system.
- 11 **OPTIONAL.** To verify the driver installation, see *Installation Tips* on page [5-14](#).



Note: As the system restarts, Windows 95 applies the driver files to each additional port detected.

- 12 Continue to [Chapter 6, Duralink64 Standard Driver for Windows](#).

¹ In this example, **d :** represents the CD-ROM drive letter.

Windows 95 OSR1

To install the DuraLAN Standard driver on a Windows 95 OSR1 platform, follow these steps:

- 1 Start Windows 95. The New Hardware Found wizard opens.
- 2 In the wizard, click **Driver from disk provided by hardware manufacturer**, and click **OK**.
- 3 Insert the Duralink64 for Windows disk.
- 4 In the Install from Disk window, type `a:\win95a`, and click **OK**.



Caution: If you accept the default path, `a:\`, the system will copy the wrong files which will cause errors in Windows 95 OSR1 version.

- 5 When the Copying Files... window appears, insert the Windows 95 CD and click **OK**.
- 6 Enter the path to the Windows 95 directory, and then click **OK**. (For example, `d:\win95`.¹ Consult your Microsoft Windows 95 documentation for help.)
- 7 Remove the floppy disk from the floppy disk drive.
- 8 If the System Setting Change window appears, click **Yes** to restart the system.



Note: As the system restarts, Windows 95 applies the driver files to each additional port detected.

- 9 **OPTIONAL.** To verify the driver installation, see *Installation Tips* on page [5-14](#).
- 10 Continue to [Chapter 6, Duralink64 Standard Driver for Windows](#).

¹ In this example, `d:\` represents the CD-ROM drive letter.


Installation Tips

This section provides tips to assist you in the DuraLAN driver installation.

Windows 95

How do I verify that the DuraLAN Standard driver is installed properly?

- 1 From the Start menu, point to **Settings**, then click **Control Panel**.
- 2 In the Control Panel, double-click **System**.
- 3 In the Device Manager tab, look under Network adapters.

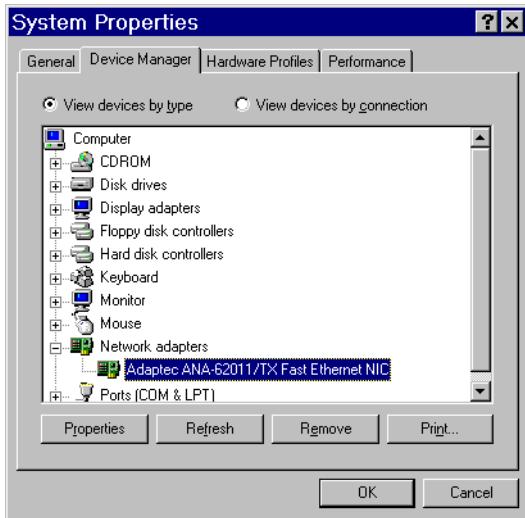

- 4 The DuraLAN NIC appears under Network adapters. Click **OK**.



Note: If a yellow exclamation point (!) appears next to the DuraLAN NIC, remove the current DuraLAN Standard driver, then reinstall it. See *Windows 98 and 95 OSR1/OSR2* on page [5-18](#).

In the Device Manager, the new NICs replace the older NICs, but the Network window lists both. What should I do?

Remove the older NIC(s).

- 1 In the Network window, click the old NIC, then click **Remove**. Repeat this step for each appropriate NIC.
- 2 Click **OK** when you are done.

Windows 98

How do I access the Add New Hardware wizard if it does not open?

- 1 Click the **Start** menu, point to **Settings**, then click the **Control Panel**.
- 2 In the Control Panel, double-click **Add New Hardware**.

Windows Clients Using Novell Client 32

Connecting clients to the NetWare Duralink64 server requires the NDIS driver. *Do not* use an ODI driver! See [Chapter 12, Installing Duralink64 NetWare Client](#).

Removing Previously Installed Drivers

This section provides instructions for removing the previously installed DuraLAN Standard driver—a necessary step if you are installing the new Duralink64 driver included with your DuraLAN NIC.

Windows 2000

To remove the previously installed Duralink64 driver from the Windows 2000 platform, follow these steps:

- 1** Right click **My Computer**, and click **Properties**.
- 2** Select the **Hardware** tab.
- 3** Click **Device Manager**.
- 4** Double-click **Network Adapters**.
- 5** Select the Adaptec DuraLAN NIC that you wish to remove.
- 6** Right-click and select **Uninstall**.
- 7** Click **OK**; the driver will be uninstalled.

Windows NT 4.0

To remove the previously installed DuraLAN driver from a Windows NT 4.0 platform, follow these steps:

- 1** Double-click **My Computer**.
- 2** Double-click **Control Panel**.
- 3** Double-click **Network**.
- 4** In the Network window, click the **Adapters** tab.
- 5** In the Network Adapters list, click the Adaptec DuraLAN NIC you want to remove, and then click **Remove**.
- 6** When asked if you wish to continue, click **Yes**.
- 7** Repeat Step 5 until all Adaptec DuraLAN drivers are removed.

- 8** When you are done, click **Close**.
- 9** Click **Close** to close the Network window.
- 10** Click **Yes** to restart your computer.



Note: When you restart Windows NT, a message may indicate that at least one service failed to start. This message will not appear after you add the new driver. Click **OK**.

Windows NT 3.51

To remove the previously installed Duralink64 driver from the Windows NT 3.51 platform, follow these steps:

- 1** In the Main window, double-click **Control Panel**.
- 2** In the Control Panel, double-click **Network** to enter the Network Settings window.
- 3** In the Installed Adapter Cards box, click the DuraLAN NIC you want to remove, and click **Remove**.
- 4** Repeat Step 3 until all DuraLAN NICs have been removed.
- 5** Click **OK** when you are done.
- 6** Restart the system.

Windows 98 and 95 OSR1/OSR2

To remove the previously installed DuraLAN driver from the Windows 98 and Windows 95 OSR1/OSR2 platform, follow these steps:

- 1** From the Start menu, point to **Settings**, and then click **Control Panel**.
- 2** In the Control Panel, double-click **System**.
- 3** From the System Properties window, select the **Device Manager** tab, then double-click **Network adapters**.
- 4** Select the Adaptec DuraLAN NIC you want to remove, then click **Remove**.
- 5** Confirm the device removal by clicking **OK**.
- 6** Repeat Steps 3 and 4 for each existing DuraLAN NIC.
- 7** Restart the system.

6

Duralink64 Standard Driver for Windows

In this Chapter

<i>Configuring the Standard Driver Ports in Windows 2000</i>	6-2
<i>Configuring the Standard Driver Ports in Windows NT 4.0 and 3.51</i>	6-4
<i>Configuring the Ports in Windows 98/95</i>	6-6

This chapter describes how to configure the DuraLAN Standard driver for Windows.

Configuring the Standard Driver Ports in Windows 2000

General Port Configuration

Windows 2000, including a GUI, supports dynamic unload/reload of drivers. Driver updates no longer require a system reboot.


For each group of NICs, configure all the property values (that is, connection type, receive buffers, receive checksum offload, transmit checksum offload, and write invalidate enable) to be the same. For example, within a group, do not set up one NIC with the connection type *Autodetect* and the other NIC with the connection type *100 Mbps*. If you make changes to a group, be sure that all NICs within the group have the same values.

Stand-alone, Failover, Port Aggregation, and FEC can be configured in mixed groups. For example, one NIC can be set up as Stand-alone, another group of two NICs can be set up as Failover, and another group of NICs can be set up as Port Aggregation or FEC. A total number of 12 ports is supported for all configurations combined.


Configuring Ports for Windows 2000

To select the connection type for an Adaptec DuraLAN NIC, follow these steps:

- 1 From the Start menu, point to **Settings**, and click **Control Panel**.
- 2 In the Control Panel, double-click the **Adaptec Duralink** icon.

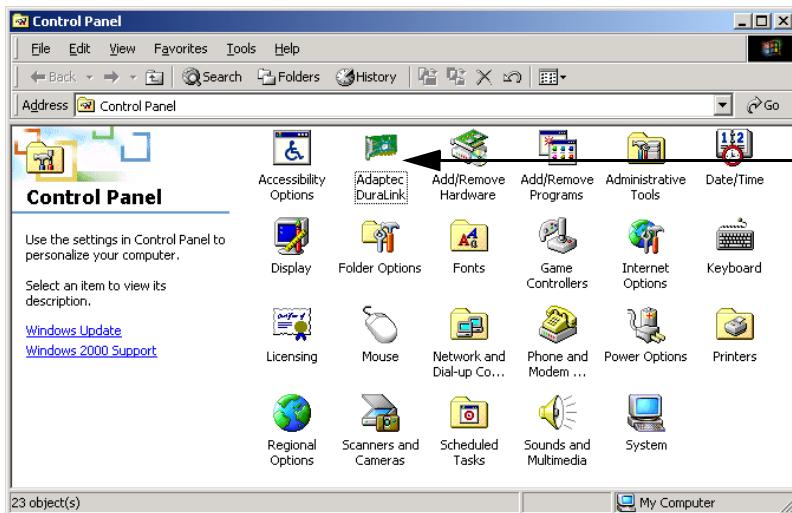

3 In the Duralink64 window, under the Configuration tab, select the port to be configured from the Available Adaptec Ports list.

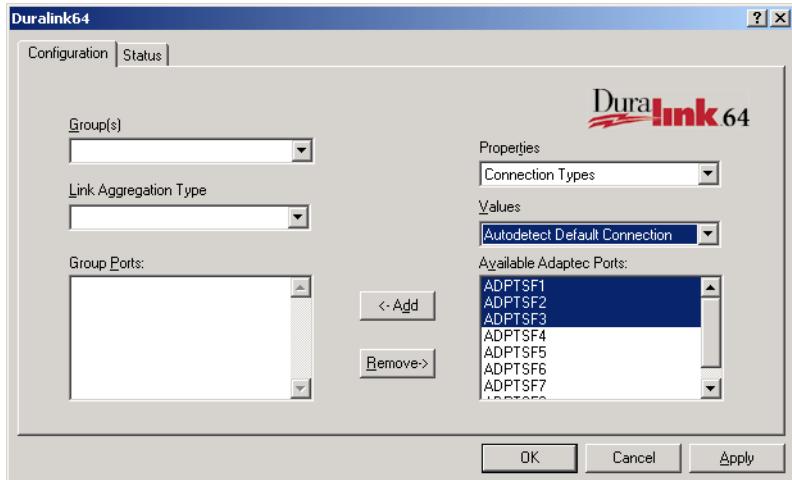

4 Select the speed for the connection. The default selection is *Autodetect*.



Note: It is recommended that the user leave all property value as default value unless the modification is really necessary. Autodetect will automatically select the appropriate speed for the Adaptec DuraLAN NIC you have installed.

5 Repeat Steps 3 and 4 for other existing port as necessary.

6 Click OK.


Configuring the Standard Driver Ports in Windows NT 4.0 and 3.51

In the Adaptec New Hardware Found window, each port is assigned to Autodetect, the default connection type that will always detect port connection and negotiate a compatible speed and transmission mode.



Note: If you are required to insert the Windows NT CD, you must reinstall the latest version of the Microsoft Windows NT Service Pack, and then restart the system.

- 1 In the Adaptec New Hardware Found window, make sure all the DuraLAN NIC ports appear.

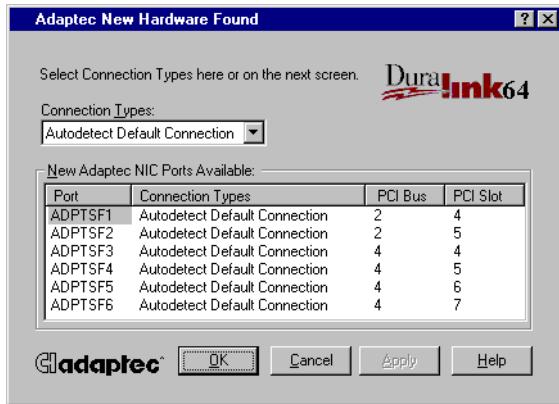


- 2 In the New Adaptec NIC Ports Available box, click the appropriate port.
- 3 In the Connection Types field, click the connection type for your network or use **Autodetect Default Connection**. The connection type will automatically be applied. For descriptions, see [Connection Types](#) on page [A-2](#).

- 4 Repeat Steps 2 and 3 for each existing port.
- 5 Remove the disk and click **OK**.
- 6 When you are done, click **Close** in the Network window.
- 7 See *Assigning TCP/IP Address for Windows NT 3.51 or 4.0* on page 8-16.
- 8 At the System Settings Change information box, click **Yes** to restart your system.


Configuring the Ports in Windows 98/95

To configure ports in Windows 2000, Windows 98, and Windows 95 OSR2 or OSR1, follow these steps:

- 1 From the Start menu, point to **Settings**, and click **Control Panel**.
- 2 In the Control Panel, double-click **Network**.
- 3 In the Network window, click the appropriate DuraLAN NIC, then click **Properties**.

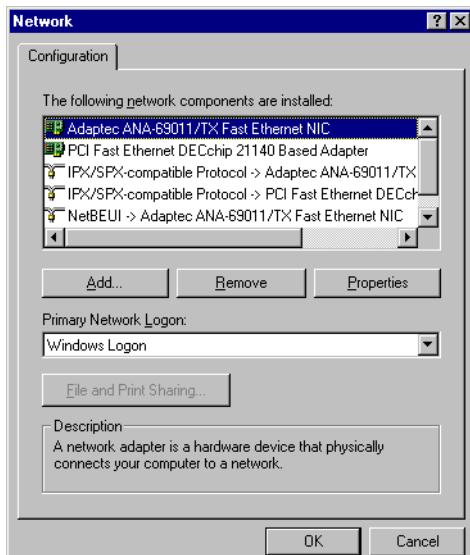

- 4 In the Properties window, click the **Advanced** tab.
- 5 In the Property box, click **Connection Type**.
- 6 In the Value list, click the appropriate connection type.
(*Connection Types* on page [A-2](#) provides descriptions.)

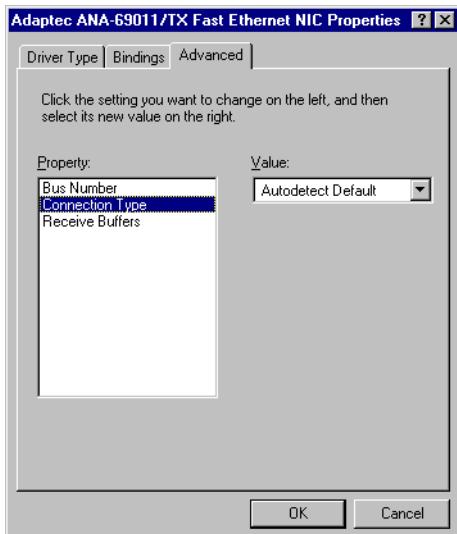

- 7 Click **OK**.
- 8 In the Configuration tab, click **OK**.
- 9 Click the **Start** button, and select **Shut Down...**
- 10 Restart the system.

Duralink64 Failover for Windows NT and Windows 2000

In this Chapter

<i>Configuring the Ports for Windows 2000</i>	7-2
<i>Configuring the Ports for Windows NT 4.0 or 3.51</i>	7-2
<i>Configuring the Failover Pair for Windows 2000</i>	7-4
<i>Configuring the Failover Pair for Windows NT 4.0</i>	7-6
<i>Configuring the Failover Pair for Windows NT 3.51</i>	7-8
<i>Monitoring Failover Pairs in Windows NT 3.51 or 4.0</i>	7-10
<i>Note on DuraLAN NIC Ports</i>	7-10

This chapter provides instructions for installing Duralink64 Failover on a server running Windows NT versions 4.0 and 3.51 or Windows 2000 with GUI.

Configuring the Ports


Configuring the Ports for Windows 2000

There is no need to configure the ports unless you want to change a specific property value (for example, connection type, receive buffers, and so forth). See [Configuring Ports for Windows 2000](#) on page [6-3](#) to configure property value; otherwise, leave everything as default.

Configuring the Ports for Windows NT 4.0 or 3.51

In the Adaptec New Hardware Found window, each port is assigned to *Autodetect*, the default connection type that will always detect port connection and negotiate a compatible speed and transmission mode.

- 1 In the Adaptec New Hardware Found window, make sure all the DuraLAN NIC ports appear.

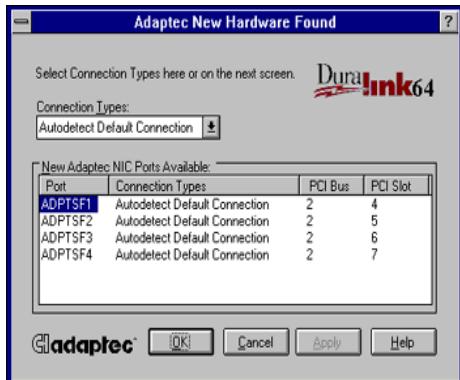

Note: Generally, PCI Bus 0 is the PCI Bus on the motherboard. PCI Bus 1 or above is an ANA-6x022 or ANA-6x044 NIC. The PCI Slot represents the port on the NIC starting from the top. The top port starts at PCI Slot 4.

- 2** In the New Adaptec NIC Ports Available box, click the appropriate port.
- 3** In the Connection Types field, click the connection type for your network or use **Autodetect Default Connection**. The connection type will automatically be applied. For descriptions, see *Connection Types* on page [A-2](#).
- 4** Repeat Steps 2 and 3 for each existing port.
- 5** When you are done, click **OK**.
- 6** Continue with *Configuring the Failover Pair for Windows NT 4.0* on page [7-6](#).


Creating the Failover Pair

You can create Failover pairs in the Configuration tab. A Failover pair consists of two ports only: the primary port and the backup port.

Configuring the Failover Pair for Windows 2000

To create Failover pairs in Windows 2000 with GUI, follow these steps:

- 1 Start Windows 2000.
- 2 From the Start menu, point to **Settings**, and click **Control Panel**.
- 3 In the Control Panel, double-click the **Adaptec Duralink** icon for the Duralink64 window.

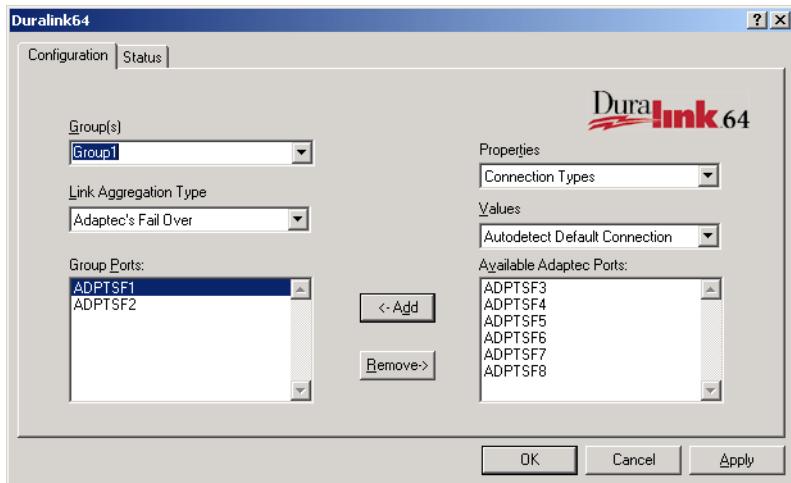

- 4 In the Group(s) field, click **Create New Group**, then type the name of the Failover group.



Note: The group name may be up to 20 characters. If you skip this step, the system assigns a default group name (GroupX).

- 5 In the **Link Aggregation Type** field, select **Adaptec's Fail Over**.
- 6 From the **Available Adaptec Ports** list, click on the appropriate port, then click **Add**.
- 7 To add the second port, repeat Step 6.




Note: To add multiple ports at one time, hold down the **Ctrl** key, and select the appropriate ports, then click **Add**. Only two ports are supported for Failover.

To assign TCP/IP addresses to your ports, refer to [*Assigning the TCP/IP Address*](#) on page [8-13](#).

Configuring the Failover Pair for Windows NT 4.0


To create Failover pairs, follow these steps:

- 1 From the Available Adaptec Ports box, click a port to be designated as a primary port.

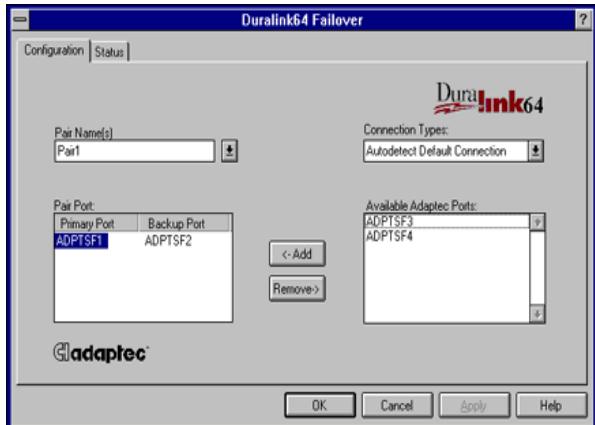

- 2 Click **Add**. The port is added under Primary Port in the Pair Port list.
- 3 To assign a backup to the primary port, click the appropriate port from the Available Adaptec Ports box, and then click **Add**. The port is added in the Backup Port field.
- 4 Click **Apply**.
- 5 **OPTIONAL.** Create another Failover pair by repeating Steps 1 through 4.
- 6 **OPTIONAL.** To remove a Failover pair
 - Click the port from the Primary Ports list, and then click **Remove**. Both ports return to the Available Adaptec Ports box.
 - Click **Apply**.

- When you are done, click **OK**. You will return to the Adapters tab. **<Backup NIC1>** indicates that Port 2 is the backup port for Port 1.

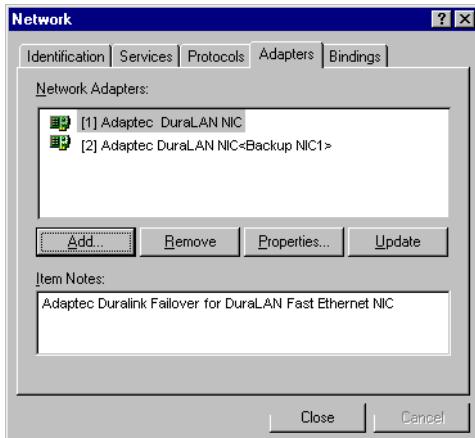

Note: The Adapters tab identifies one model only, even when several DuraLAN NIC models are installed. The DuraLAN NIC model displayed is the same as the first model you chose in Step 8 during the driver installation.

- When you are done, click **OK**. You will return to the Network Settings window.
- If SNMP is not set up on your computer, you will receive the Setup Message below. Ignore the message, and click **OK**.



- Enter the protocol information. Consult your Microsoft Windows NT 4.0 documentation for help configuring the protocol (such as entering values for TCP/IP).

- 11 Remove the floppy disk from the floppy disk drive.
- 12 Restart the system.




Note: If you were required to insert the Windows NT CD, you must reinstall the latest version of Microsoft Windows NT Service Pack, and then restart the system.

Configuring the Failover Pair for Windows NT 3.51

To create Failover pairs, follow these steps:

- 1 From the Available Adaptec Ports box, click the port you want as the primary port.

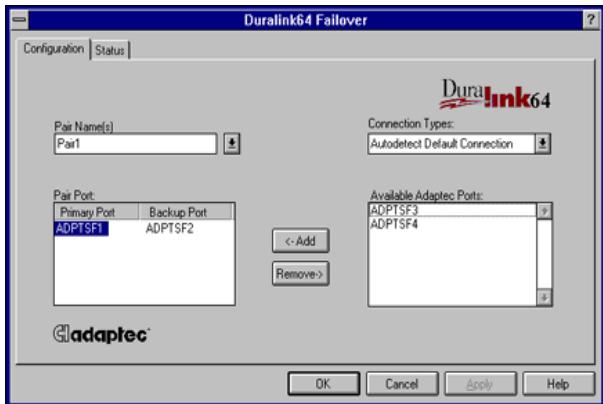

- 2 Click **Add**. The port is added under Primary Port in the Pair Port list.
- 3 To assign a backup to the primary port, click the appropriate port from the Available Adaptec Ports box, and then click **Add**. The port is added in the Backup Port field.
- 4 Click **Apply**.
- 5 **OPTIONAL.** Create another Failover pair by repeating Steps 1 through 4.

6 **OPTIONAL.** To remove a Failover pair

- Click the port from the Primary Ports list, and then click **Remove**. Both ports return to the Available Adaptec Ports box.
- Click **Apply**.

7 When you are done, click **OK**. You will return to the Network Settings window.**8** Click **OK**.

Note: The Adapters tab identifies one model only, even when several DuraLAN NIC models are installed. The DuraLAN NIC model displayed is the same as the first model you chose in Step 8 during the driver installation.

9 If SNMP is not set up on your computer, you will receive the Setup Message below. Ignore this message, and click **OK**.**10** Consult your Microsoft Windows NT 3.51 documentation for help configuring the protocol (such as entering values for TCP/IP).**11** Remove the floppy disk from the floppy disk drive.**12** In the Network Setting Change window, click **Restart Now**.

Note: If you were required to insert the Windows NT CD, you must reinstall the latest Microsoft Windows NT Service Pack, and then restart the system again.

Monitoring Failover Pairs in Windows NT 3.51 or 4.0

There are three ways to monitor the status of the Failover pairs:

- **SNMP Manager**—When Failover occurs, SNMP traps are sent to network management stations and error logs are updated through the operating system event log. In order to manage SNMP agents, compile the following .mib file on the SNMP management station:
`a:\snmpmibs\duralink.mib`
- **Event Viewer Dialog Box**—The local Event Viewer dialog box will log port failures in Windows NT.
- **Duralink64 Failover Window**—The Status tab monitors the traffic and health of the Failover pairs.

Note on DuraLAN NIC Ports

When you are installing Adaptec DuraLAN NICs, it is a good idea to document where each port physically resides in the server, especially when two or more identical NICs exist. This is important because ports are identified by generic port names.

Port names are assigned to ports in the order that the system scans these ports at boot time. Consequently, whenever you physically rearrange the network cards, the port names change as well.



Note: Windows 2000 currently does not support SNMP.

Duralink64

Port Aggregation for Windows NT and Windows 2000

In this Chapter

<i>Configuring the Ports for Windows 2000</i>	8-2
<i>Configuring the Ports for Windows NT 3.51 or 4.0</i>	8-2
<i>Creating Port Aggregation Groups for Windows 2000</i>	8-4
<i>Creating Port Aggregation Groups for Windows NT 4.0</i>	8-6
<i>Creating Fast EtherChannel Groups for Windows 2000</i>	8-8
<i>Creating Fast EtherChannel Groups for Windows NT 3.51 or 4.0</i>	8-10
<i>Assigning TCP/IP Address for Windows 2000</i>	8-13
<i>Assigning TCP/IP Address for Windows NT 3.51 or 4.0</i>	8-16
<i>Renaming Groups in Windows 2000</i>	8-18
<i>Renaming Groups in Windows NT 3.51 or 4.0</i>	8-19
<i>Adding or Removing Ports for Windows 2000</i>	8-19
<i>Adding or Removing Ports for Windows NT 3.51 or 4.0</i>	8-21
<i>Checking System Status for Windows 2000</i>	8-24
<i>Checking System Status for Windows NT 3.51 or 4.0</i>	8-27
<i>Windows NT and Windows 2000 Performance Monitor</i>	8-30

This chapter explains how to configure Duralink64 Port Aggregation on a server running Windows NT or Windows 2000 with GUI.

Configuring Ports

Configuring the Ports for Windows 2000

There is no need to configure the ports unless you want to change a specific property value (for example, connection type, receive buffers, and so forth). See *Configuring Ports for Windows 2000* on page [6-3](#) to configure property value; otherwise, leave everything as default.


Configuring the Ports for Windows NT 3.51 or 4.0

In the Adaptec New Hardware Found window, each port is assigned to *Autodetect*, the default connection type that always detects port connection and negotiates a compatible speed and transmission mode.



Caution: This procedure is critical. Only one DuraLAN driver can exist in a system! If a DuraLAN Standard driver, Duralink64 Failover driver, or Duralink64 Port Aggregation driver exists, remove it! See *Removing Previously Installed Drivers* on page [5-16](#).

- 1 In the Adaptec New Hardware Found window, make sure all the DuraLAN NIC ports appear.

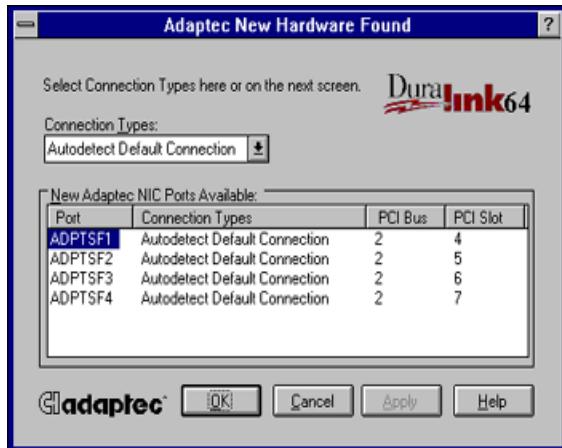

Note: Generally, PCI Bus 0 is the PCI Bus on the motherboard. PCI Bus 1 or above is an ANA-62022 or ANA-62044 NIC. The PCI Slot represents the port on the NIC starting from the top. The top port starts at PCI Slot 4.


- 2 In the New Available NIC Ports Available box, click the appropriate port.
- 3 In the Connection Types field, click the connection type for your network or use **Autodetect Default Connection**. For descriptions, see *Connection Types* on page [A-2](#).
- 4 Click **Apply**.
- 5 Repeat Steps 2 through 4 for each existing port.
- 6 When you are done, click **OK**.
- 7 Continue to *Creating Port Aggregation Groups* on page [8-4](#).

Creating Port Aggregation Groups

Creating Port Aggregation Groups for Windows 2000

To create Port Aggregation groups in Windows 2000 with GUI, follow these steps:

- 1 From the Start menu, point to **Settings**, and click **Control Panel**.
- 2 In the Control Panel, double-click the **Adaptec Duralink** icon.

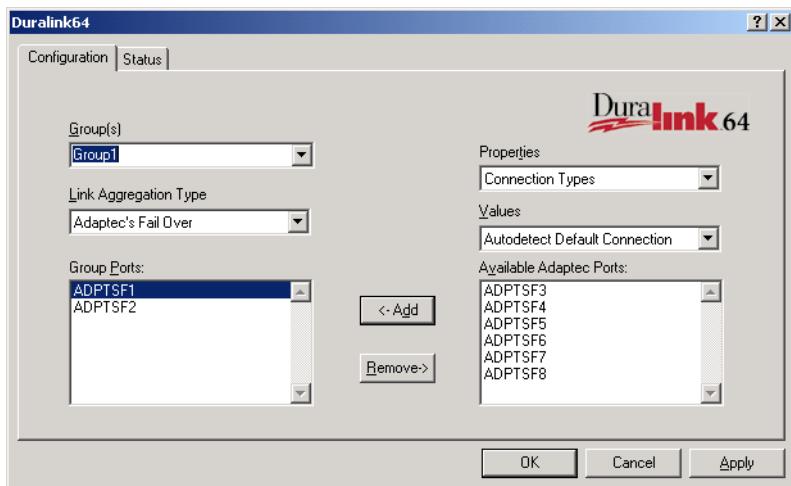

- 3 In the **Group(s)** field, click **Create New Group**, then type the new group name.



Note: The group name may be up to 20 characters. If you skip this step, the system assigns a default group name (GroupX).

- 4 In the **Link Aggregation Type** field, click the appropriate link type. For a description of Adaptec's Port Aggregation, see [Chapter 2, Introduction to Duralink64 Port Aggregation](#).

- 5 In the **Available Adaptec Ports** box, click the available port to add to the group, then click **Add**.
- 6 Repeat Step 5 for each additional port.



Note: You must assign the same Properties Value to each port in the same group, i.e. Connection Type, Receive Buffers, and so on.

OPTIONAL. To remove a port from the group, click the appropriate port from the Group Ports box, then click **Remove**.

- 7 When you are finished configuring the group, click **Apply**.
- 8 To create another group, repeat Steps 3 through 7.
- 9 To rename a group:
 - Select the group name in the **Group(s)** list box to change.
 - Type the new name.
 - Click **Apply**.
- 10 When you are finished configuring all groups, click **OK**.
- 11 Continue to *Assigning the TCP/IP Address* on page 8-13.


Creating Port Aggregation Groups for Windows NT 4.0

This section explains how to assign ports to a group while in Windows NT 4.0, and by doing so, creating a virtual port. If you have already installed Duralink64 Port Aggregation and wish to add or modify existing group or stand-alone port configurations, see [Modifying Groups](#) on page [8-18](#).

- 1 In the Group(s) field, click **Create New Group**, then type the new group name.



Note: The group name may be up to 20 characters. If you skip this step, the system assigns a default group name (GroupX).

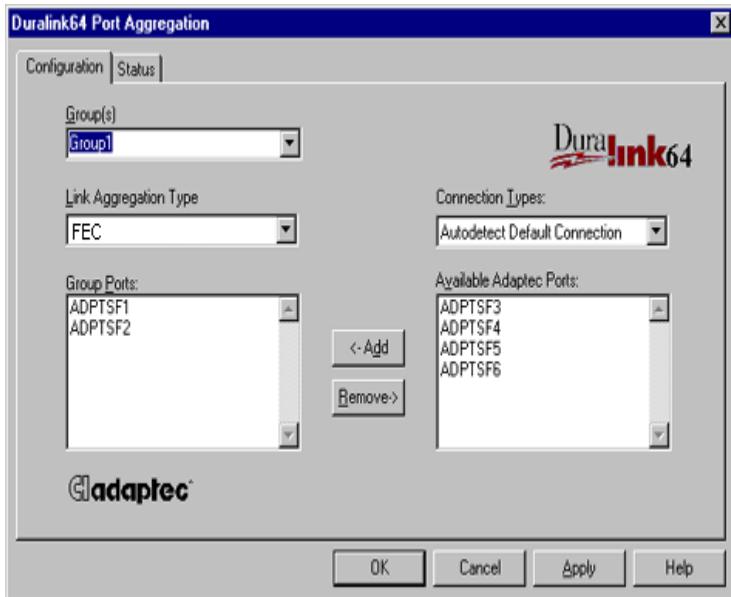

- 2 In the Link Aggregation Type field, click the appropriate link type. For a description of Adaptec's Port Aggregation, see [Chapter 2, Introduction to Duralink64 Port Aggregation](#).


- 3 In the Available Adaptec Ports box, click the available port to add to the group, then click **Add**.
- 4 Repeat Step 3 for each additional port.



Note: You must assign the same connection type to each port in the same group.

OPTIONAL. To remove a port from the group, click the appropriate port from the Group Ports box, then click **Remove**.

- 5 When you are finished configuring the group, click **Apply**.
- 6 To create another group, repeat Steps 1 through 5.
- 7 To rename a group:
 - Select the first group name in the Group(s) list box.
 - Type the new name.
 - Click **Apply**.
- 8 When you are finished configuring all groups, click **OK**.
- 9 If SNMP is not set up on the computer, you will receive the Setup Message below. Ignore the message, and click **OK**.

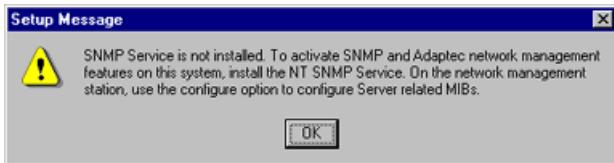


- 10 In the Network window, click **Close**.
- 11 Continue to *Assigning TCP/IP Address for Windows NT 3.51 or 4.0* on page 8-16.

Creating Fast EtherChannel Groups

Creating Fast EtherChannel Groups for Windows 2000

To create Fast EtherChannel (FEC) groups, follow these steps:

- 1 From the Start menu, point to **Settings**, and click **Control Panel**.
- 2 In the Control Panel, double-click the **Adaptec Duralink** icon to open the Duralink64 window.

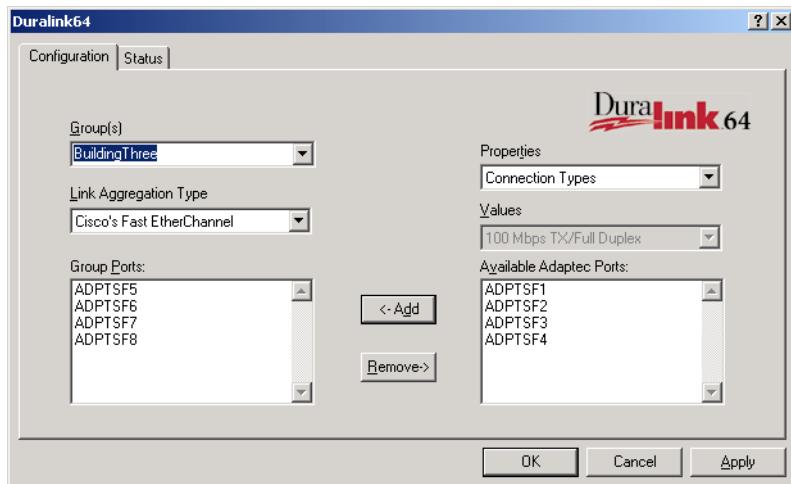

- 3 In the **Group(s)** field, click **Create New Group**, then type the new group name.



Note: The group name can be up to 20 characters. If you skip this step, the system assigns a default group name (*GroupX*).

- 4 In the Link Aggregation Type field, click **Cisco's Fast EtherChannel**.
- 5 In the Available Adaptec Ports box, click the available port to add to the group, then click **Add**.

6 Repeat Step 5 for each additional port.



Note: You must assign the same Properties Value to each port in the same group, i.e. Connection Type, Receive Buffers, and so on.

OPTIONAL. To remove a port from the group, click the appropriate port from the Group Ports box, then click **Remove**.

- 7** When you are finished configuring the group, click **Apply**.
- 8** To create another group, repeat Steps 3 through 7.
- 9** If you want to rename a group:
 - Select the group name in the Group(s) list box to change.
 - Type the new name.
 - Click **Apply**.
- 10** When you are finished configuring all groups, click **OK**.

To assign TCP/IP addresses to your ports, refer to *Assigning TCP/IP Address for Windows 2000* on page 8-13.

Creating Fast EtherChannel Groups for Windows NT 3.51 or 4.0

FEC allows you to fully aggregate two or four ports over transmit and receive under all protocols. The ports that are configured as the FEC group must be physically connected to the FEC ports on the switch. If using a Cisco switch, see your Cisco switch documentation to configure the ports in FEC Mode.


If you select Fast EtherChannel on the server, the connection type for each port is automatically configured to 100 Mbps TX/Full Duplex. You must also configure the ports on the switch (used by the FEC group) to either Auto Negotiation or 100 Mbps/Full Duplex Mode.

This section explains how to assign ports to an FEC group, thus creating a virtual port. If you have already installed Duralink64 Port Aggregation/FEC and wish to add or modify existing group or stand-alone port configurations, see [Modifying Groups](#) on page 8-18.

- 1 In the Group(s) field, click **Create New Group**, then type the new group name.



Note: The group name can be up to 20 characters. If you skip this step, the system assigns a default group name (GroupX).

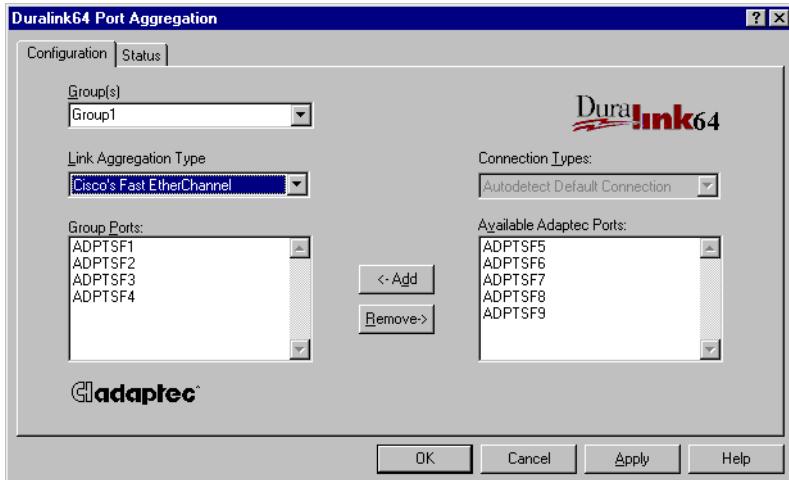


- 2** In the Link Aggregation Type field, click **Cisco's Fast EtherChannel**.
- 3** In the Available Adaptec Ports box, click the available port to add to the group, then click **Add**.
- 4** Repeat Step 3 for each additional port.




Note: You must assign the same connection type to each port in the same group.

OPTIONAL. To remove a port from the group, click the appropriate port from the Group Ports box, then click **Remove**.

- 5** When you are finished configuring the group, click **Apply**.
- 6** To create another group, repeat Steps 1 through 5.
- 7** If you want to rename a group:
 - Select the default group name in the Group(s) list box.
 - Type the new name.
 - Click **Apply**.
- 8** When you are finished configuring all groups, click **OK**.
- 9** If SNMP is not set up on your computer, you will receive the Setup Message below. Ignore the message, and click **OK**.

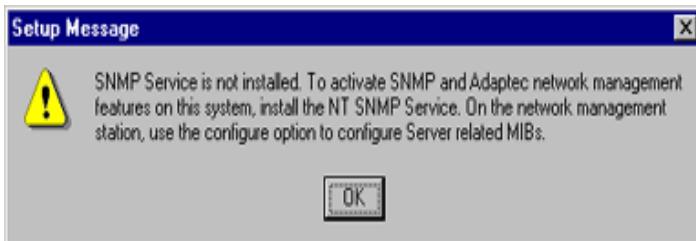

10 In the Network window, click **Close**.

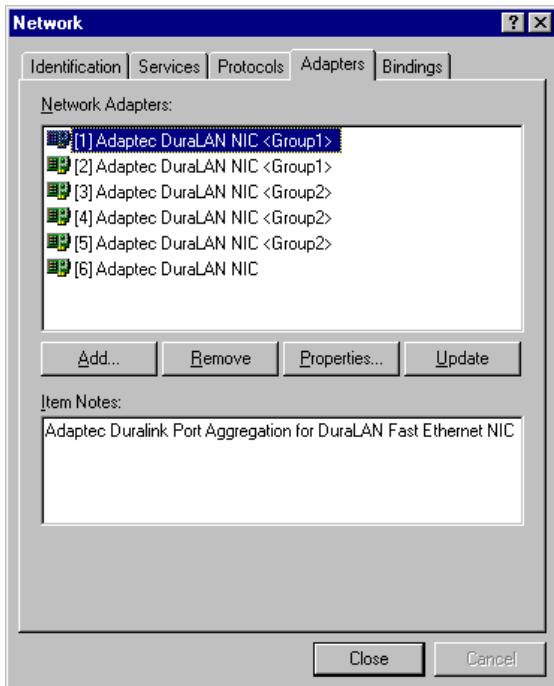


11 Continue to [Assigning TCP/IP Address for Windows NT 3.51 or 4.0](#) on page [8-16](#).

Assigning the TCP/IP Address

Assigning TCP/IP Address for Windows 2000

Once you have configured DuraLAN Failover, Port Aggregation, or FastEther Channel, you need to assign IP addresses to your ports. To identify the Primary port for Link Aggregation Type (Failover, Port Aggregation, or FastEther Channel), follow these steps:

- 1 Click on **Start**.
- 2 From the Start menu, point to **Settings**, then click **Control Panel**.
- 3 In the Control Panel, double click the **Adaptec DuraLink** icon.
- 4 On the Duralink64 GUI, select **Status Tab**.

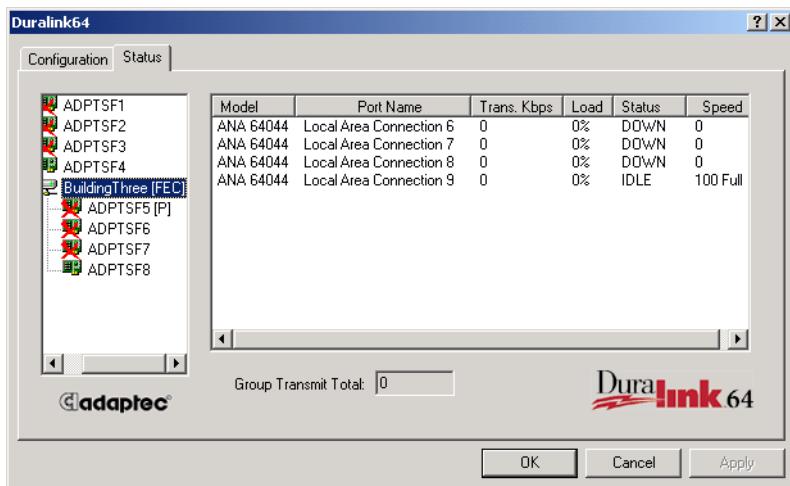


- 5 Select the appropriate Group. The Primary Port will have a [P] next to it.
- 6 To identify the Primary Local Area Connection port, look under Port Name (all network settings will be taken from this port).
- 7 Click on **Start**.
- 8 From the Start menu, point to **Settings**, then click **Control Panel**.

- 9** In the Control Panel, double click the **Network and Dial-up Connections** icon.
- 10** Right click on the appropriate **Local Area Connection** icon obtained from step 5 and select **Properties**.




Note: If a red “X” appears across the icon, it means that the network cable is unplugged or disconnected.

- 11** The Local Area Connection Properties screen appears.

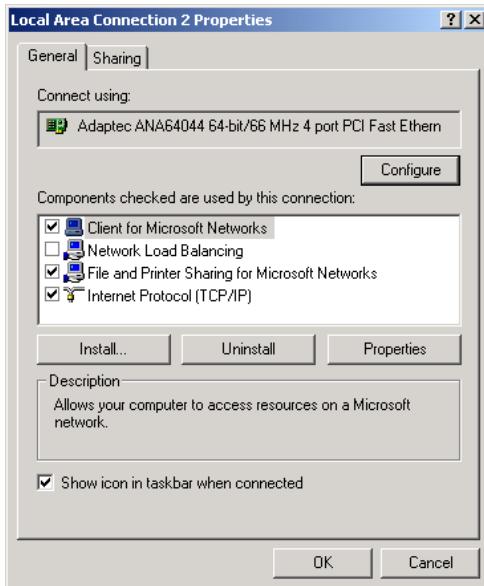

- 12** Double click **Internet Protocol (TCP/IP)**.

13 Click **Properties**. The Internet Protocol (TCP/IP) Properties screen appears.

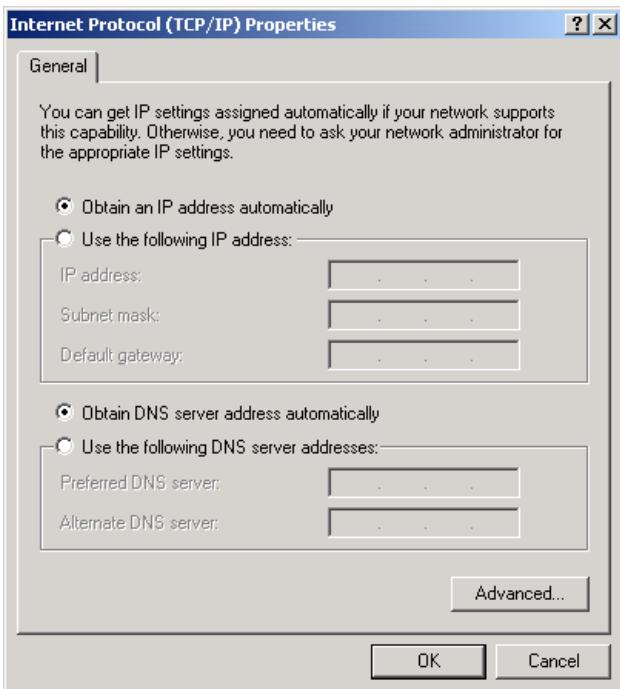

14 Select one of these options:

- **Obtain an IP address automatically.** The system will be able to automatically obtain the IP address from a DHCP server.
- **Use the following IP address.** If your LAN system does not automatically assign IP addresses, you can manually assign the TCP/IP address and Subnet mask.
- **Use the following DNS server addresses.** Enter DNS server preferred and alternate addresses.

15 To assign an IP address to the next Adaptec NIC port, repeat Steps 3 through 8.

16 Click **OK**. This takes you back to the Local Area Connection Properties screen.

17 Click OK.

Assigning TCP/IP Address for Windows NT 3.51 or 4.0



Note: If you are using Windows NT 3.51, please refer to the Windows NT 3.51 documentation for help configuring protocols.

Once you have configured Duralink64 Port Aggregation, Windows NT prompts you to configure the protocol. IP addresses to groups and stand-alone ports are assigned in the IP Address tab (such as those shown in the following figure). Ports assigned to a group use the same IP address; therefore, it must be entered only once.



To assign a TCP/IP address, follow these steps:

- 1** Under the IP Address tab, click the **Adaptec DuraLAN NIC** port from the Adapter list.
- 2** In the IP Address field, type the IP address.
- 3** In the Subnet Mask field, type the subnet mask number. You will be prompted to assign a different IP address for each port or group of ports. After all ports have been assigned an IP address, click **OK**.
- 4** Repeat Steps 1 through 3 for any other port or group.
- 5** Click **OK** when you are finished configuring all groups.
- 6** Restart your computer to complete the changes.
- 7** Click **Yes** at the message prompt to restart your computer.
- 8** Continue to *Checking System Status for Windows NT 3.51 or 4.0* on page [8-27](#).


Once Duralink64 Port Aggregation is installed, you may update group and port configurations using the instructions in *Modifying Groups* on page [8-18](#).

Modifying Groups

This section provides instructions for modifying the group or port configurations. You may rename groups as well as add or remove ports from existing groups.

Renaming Groups in Windows 2000


- 1 In the Duralink64 Port Aggregation window, go to the Configuration tab.

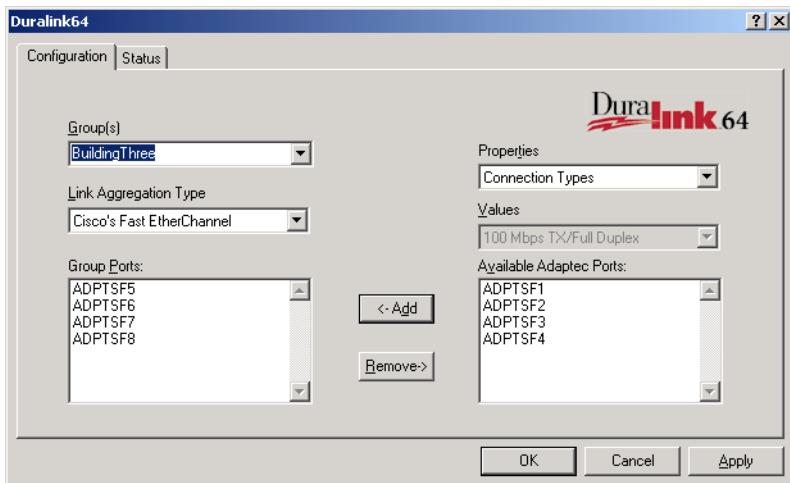

- 2 From the Group(s) field, select the appropriate group, then type the new name.
- 3 Click **Apply**.

Renaming Groups in Windows NT 3.51 or 4.0

- 1 In the Duralink64 Port Aggregation window, go to the Configuration tab.

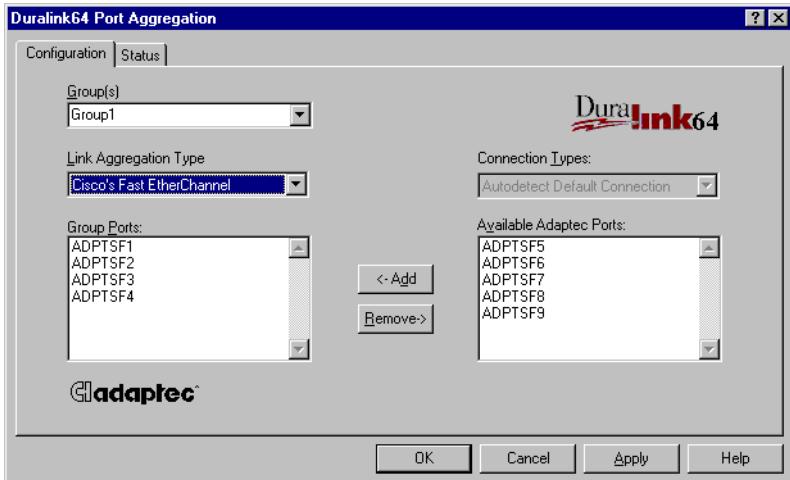

- 2 From the Group(s) field, select the appropriate group, then type the new name.
- 3 Click **Apply**.

Adding or Removing Ports for Windows 2000



Note: If you add or remove a port to or from a group, any existing group or port IP address is removed automatically. Keep track of any IP addresses you plan to use again.

- 1 In the Duralink64 Port Aggregation window, go to the Configuration tab.

- 2** In the Group(s) field, select the group you want to modify.
 - To add ports to the group, click the appropriate port from the Available Adaptec Ports box, and then click **Add**.
 - To remove ports from the group, click the appropriate port from the Group Ports box, and then click **Remove**.
- 3** Repeat Step 2 for each appropriate port.
- 4** To save changes, click **Apply**.
- 5** When you are finished, click **OK**.
- 6** When adding or deleting a group or port, you will receive a message such as the ones shown below. Click **OK**.

This message appears when you add ports with IP addresses to a new group.



This message appears when you add ports with IP addresses to Group2 with an existing IP address.




- 7** Click **Close**.

Adding or Removing Ports for Windows NT 3.51 or 4.0



Note: If you add or remove a port to or from a group, any existing group or port IP address is removed automatically. Keep track of any IP addresses you plan to use again.

- 1 In the Duralink64 Port Aggregation window, go to the Configuration tab.
- 2 In the Group(s) field, click **Create New Group**, then type the new group name or select the group you want to modify.
 - To add ports to the group, click the appropriate port from the Available Adaptec Ports box, and then click **Add**.
 - To remove ports from the group, click the appropriate port from the Group Ports box, and then click **Remove**.
- 3 Repeat Step 2 for each appropriate port.
- 4 To save changes, click **Apply**.
- 5 When you are finished, click **OK**.
- 6 If SNMP is not set up on the computer, you will receive the Setup Message below. Ignore the message, and click **OK**.

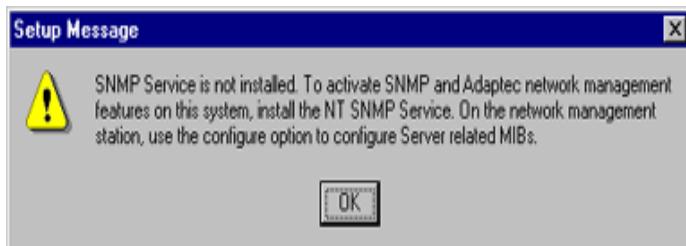


7 When adding or deleting a group or port, you will receive a message such as the ones shown below. Click **OK**.


This message appears when you add ports with IP addresses to a new group.



This message appears when you add ports with IP addresses to Group2 with an existing IP address.

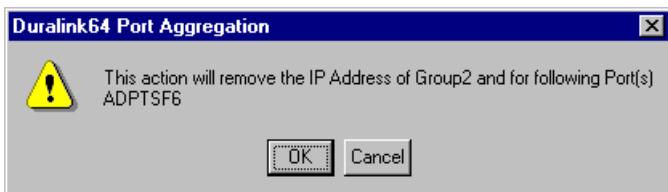


8 In the Network window, click **Close**.

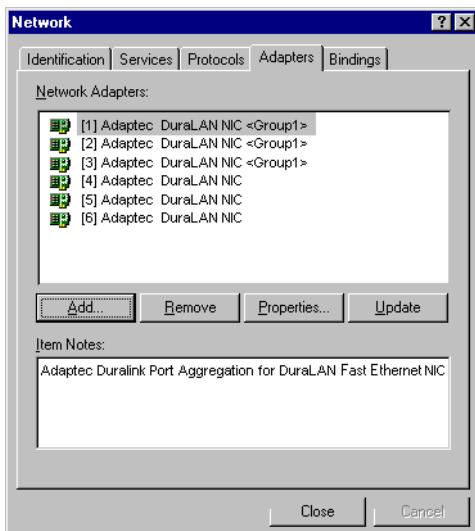

Checking System Status for Windows 2000


You can view group and independent port status. See *Field Descriptions* on page 8-25 for details.

- 1 From the Start menu, point to **Settings**, and click **Control Panel**.
- 2 In the Control Panel, double-click **Adaptec Duralink** icon.
- 3 Click the **Status** tab to view the group and independent port information, such as shown in the figure below.

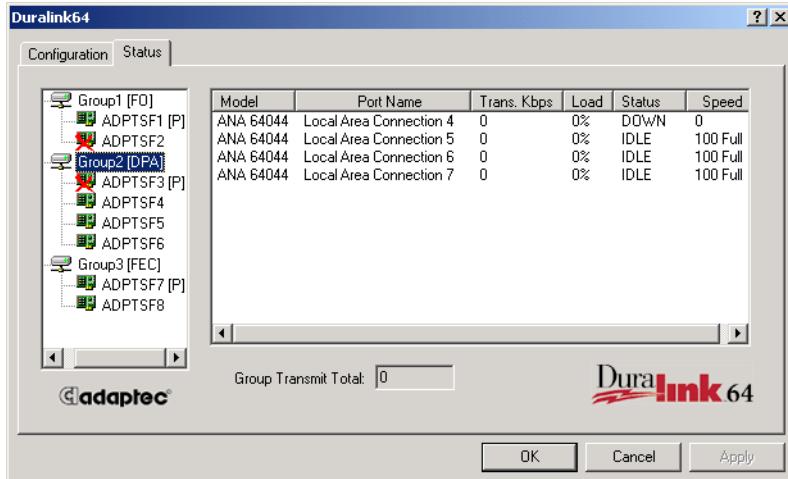

- 4 The Primary Port for each Group will have a [P] next to it.
- 5 Click **OK** to exit.

Understanding the Status Tab for Windows 2000

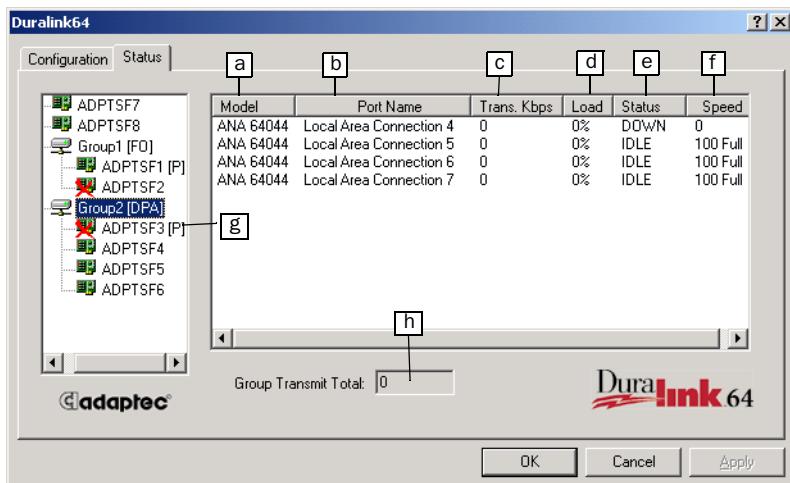

Field Descriptions

- a Model Adaptec DuraLAN NIC model number.
- b Port Name Local Area Connection assigned by the system.
- c Trans Kbps Total Kilobits per second (Kilobits/sec) transmitted per port (stand-alone and group). The Kilobits/sec sum of aggregated ports in a group equals the total Kilobits/sec transmitted by their group.
- d Load The percentage of transmit load carried by each port in a group. The percentage of a stand-alone port is always 100%. The percentage for a group is calculated as a percentage of bytes transmitted by the port over bytes transmitted by the group during the last screen refresh interval.
- e Status If the link is up and has transmitted data within the last screen refresh interval, ACTIVE is displayed. If the link is up but the port has not transmitted any data within the time interval, IDLE is displayed. If the link is down, DOWN is displayed.

- f Speed Speed is either 10 or 100 in half or full duplex mode. This value depends on the connection type you chose in *Configuring the Ports for Windows 2000* on page 8-2.
- g Primary Port This is the primary port assigned to the group. All TCP/IP settings will be taken from this port.
- h Group This field appears only when a group is selected.
 - Transmit
 - Total

Viewing the Groups

You can view the Groups list in two ways:

- Clicking a plus sign [+] next to port group will display the individual ports within a specific group.
- Clicking a minus sign [-] next to port group will hide the individual ports within a specific group.


Disabled ports are marked with a red X, such as ADPTSF5 shown below:



Checking System Status for Windows NT 3.51 or 4.0


You can view group and independent port status. See *Field Descriptions* on page 8-28 for details.

- 1 From the Start menu, point to **Settings**, and click **Control Panel**.
- 2 In the Control Panel, double-click **Network**.
- 3 In the Network window, click the **Adapters** tab.
- 4 In the Adapters tab, select **Adaptec DuraLAN NIC**. The Duralink64 Port Aggregation window appears.
- 5 Click the **Status** tab to view the group and independent port information, such as shown in the figure below.

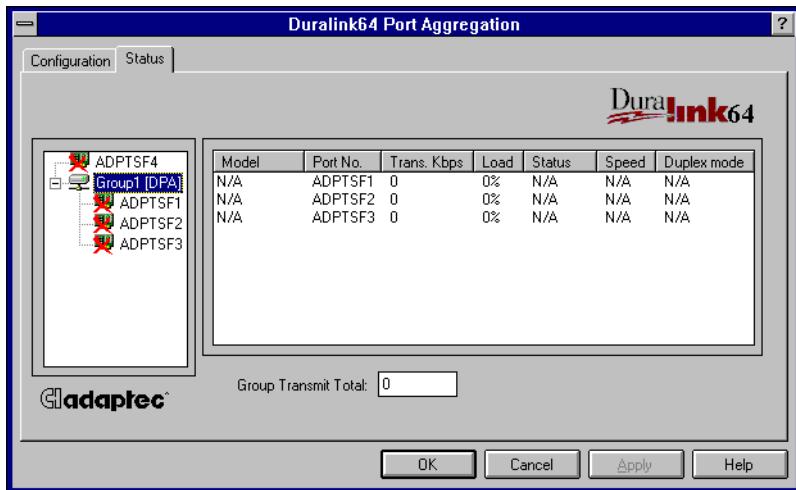

- 6 Click **OK** to exit.
- 7 Click **OK** to close the Network window.

Understanding the Status Tab for Windows NT 3.51 or 4.0

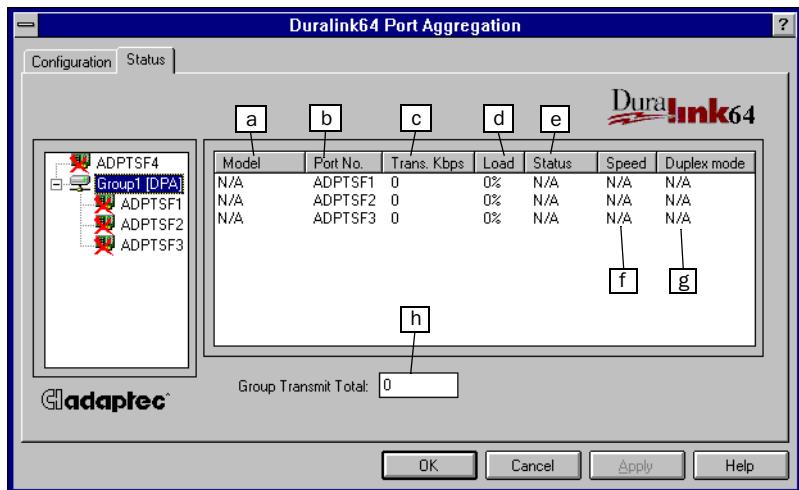

Field Descriptions

- a Model Adaptec DuraLAN NIC model number.
- b Port No. Port identification assigned by the system.
- c Trans Kbps Total Kilobits per second (Kilobits/sec) transmitted per port (stand-alone and group). The Kilobits/sec sum of aggregated ports in a group equals the total Kilobits/sec transmitted by their group.
- d Load The percentage of transmit load carried by each port in a group. The percentage of a stand-alone port is always 100%. The percentage for a group is calculated as a percentage of bytes transmitted by the port over bytes transmitted by the group during the last screen refresh interval.
- e Status If the link is up and has transmitted data within the last screen refresh interval, ACTIVE is displayed. If the link is up but the port has not transmitted any data within the time interval, IDLE is displayed. If the link is down, DOWN is displayed.

f Speed Speed is either 10 or 100. This value depends on the connection type you chose in *Configuring the Ports for Windows NT 3.51 or 4.0* on page 8-2.

g Duplex Mode Duplex Mode is either half or full. This value depends on the connection type you chose in *Configuring the Ports for Windows NT 3.51 or 4.0* on page 8-2.

h Group This field appears only when a group is selected.
Transmit
Total

Viewing the Groups

You can view the Groups list in two ways:

- Clicking a plus sign [+] next to port group will display the individual ports within a specific group.
- Clicking a minus sign [-] next to port group will hide the individual ports within a specific group.


Disabled ports are marked with a red X, such as ADPTSF5 shown below:



Windows NT and Windows 2000 Performance Monitor

You can view system traffic for selected groups and stand-alone ports in the Performance Monitor, as shown in the figure below (an example of Windows NT 4.0). In this window, each line represents the performance of the group or port listed at the bottom of the screen. When a group/port's activity drops, its line drops. Use the following instructions to select ports and groups you wish to view.


- 1 From the Start menu, point to **Programs**, then to **Administrative Tools**, and click **Performance Monitor**. The Performance Monitor example below is for Windows NT 4.0 only.

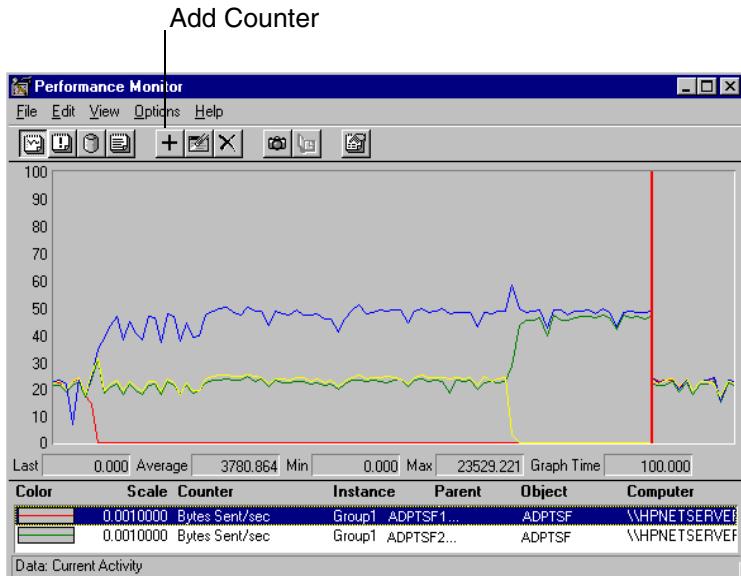

- 2 In the Performance Monitor, click the **Add Counter** button, indicated in the Performance Monitor window shown in Step 1, to open the Add to Chart window as shown on page 8-31. The Add to Chart example is for Windows NT 4.0 only.



Note: In Windows 2000 the Failover, Port Aggregation, and Fast EtherChannel groups of ports will appear as a single port.

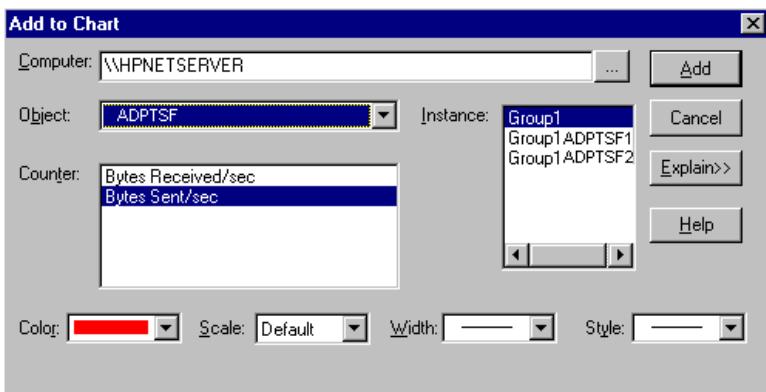

- 3 From the Object list box, select **ADPTSF**.
- 4 In the Instance box, click the port or group, then click the appropriate setting from the Counter box.
- 5 To distinguish ports and groups in the Performance Monitor, adjust the following parameters:
 - **Color**—is preset by the program for each selected group or port. You can set a specific color from the Color list box.
 - **Scale**—can be adjusted. You can set the scale of the plot for better viewing.
 - **Width**—allows you to set the width of the plot line.
 - **Style**—allows you to set the type of line that will be plotted for the selected group.
- 6 Repeat Steps 4 and 5 for each appropriate port or group.
- 7 When you are done, click **Done**.

Duralink64 Standard Driver for NetWare

In this Chapter

<i>Before You Begin</i>	9-2
<i>Installing the Duralink64 Driver during NetWare 5.1 Operating System Installation</i>	9-3
<i>Installing the Duralink64 Driver during NetWare 5.0 Operating System Installation</i>	9-3
<i>Installing the NetWare Standard Driver</i>	9-4
<i>Configuring the Ports</i>	9-5
<i>Assigning the Protocols</i>	9-6
<i>Viewing the Configuration</i>	9-9
<i>Restarting the Server</i>	9-10
<i>Copying and Saving the Configuration</i>	9-11
<i>Removing or Uninstalling Drivers</i>	9-12

This chapter provides instructions for installing and configuring the DuraLAN Standard driver for NetWare 4.x, NetWare 5.0 or 5.1.

Before You Begin

- Verify that all system, memory, and NIC requirements are met; see *System Requirements* on page 1-3.
- Verify that the new Adaptec DuraLAN NIC(s) have been installed properly in the server; see Chapter 3, *DuraLAN NIC Installation*.
- Check your system for installed DuraLAN NIC drivers. If a Duralink64 Standard driver, Duralink64 Failover driver, or Duralink64 Port Aggregation driver exists, it must be removed. For information about driver removal, see *Removing or Uninstalling Drivers* on page 9-12.
- Verify that IntraNetWare Service Pack 6 or later is installed for NetWare 4.11. This pack may be downloaded from
<http://support.novell.com>

Note on NetWare

When you are installing Adaptec DuraLAN NICs, it is a good idea to document where each port physically resides in the server—especially when two or more identical NICs exist. This is important since ports are identified by generic port names, such as Adptsf1, Adptsf2, Adptsf3, and so on.

Port names are assigned to ports in the order that the system scans these ports at boot time. Consequently, whenever you physically rearrange the network cards, the port names change as well.

Installing the Duralink64 Driver during NetWare 5.1 Operating System Installation


The Duralink64 driver is embedded in the NetWare 5.1 installation CD. Follow the instructions in the Novell standard installation procedure. A stand-alone installation is recommended.

After finishing NetWare 5.1 installation, please see *Installing the NetWare Standard Driver* on page 9-4.

Installing the Duralink64 Driver during NetWare 5.0 Operating System Installation

Follow this procedure when installing the Duralink driver during the installation of NetWare 5.0.

- 1 Install NetWare 5.0, following the NetWare instructions until you reach the Network Boards screen, as shown below:

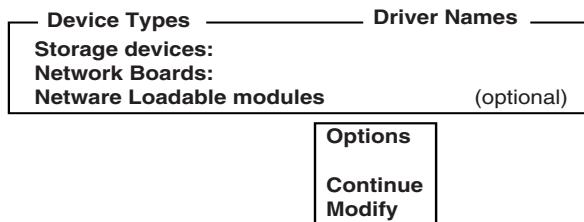

- 2 Select **Modify**, and press **Enter**.
- 3 Select the **Network Boards** field, and press **Enter**.
- 4 Press **Insert** twice.
- 5 Press **F3**. The Specify a Directory Path window appears.



- 6 Insert the Duralink64 driver disk, and press **Enter**.
- 7 After drivers finish loading, return to Driver Summary.

- 8 Return to the NetWare installation process. Review the Network Boards screen. Verify that the correct drivers were installed. Note that one driver will be installed for each port.
- 9 Continue with the NetWare installation process.

Installing the NetWare Standard Driver

If you are installing NetWare 4.x on a new server, *do not* add the DuraLAN NIC at this time. When prompted to add the NIC, select **No**, then continue with the NetWare installation.



Note: This driver uses 32 receive buffers for each port. Therefore, if you are using multiple ports, the number of receive buffers must be increased.

Type `load edit c:\nwserver\startup.ncf`, then type the following commands at the *end* of the file:

```
set minimum packet receive buffers = 512
set maximum packet receive buffers = 1024
```

If you are installing NetWare 5.0 on a new server, please see *Installing the Duralink64 Driver during NetWare 5.0 Operating System Installation* on page 9-3.

To install the Standard driver for NetWare, follow these steps:

- 1 Insert the Duralink64 NetWare 4.x, 5.0, and 5.1 disk.
- 2 At the system prompt type: `a:\nwserver\setupsf` and press **Enter**. The following window appears.



- 3 Select **Standard**, and press **Enter**.
- 4 In the message indicating that New Adaptec NICs have been detected, press **Enter**.
- 5 Continue to the next section, *Configuring the Ports* on page 9-5.

Configuring the Ports

- 1 In the Main Menu, select **Configure Ports**, then press **Enter**.
- 2 In the Ports screen, make sure you know what port names are assigned to the actual ports on the NIC.

No.	Port Name	NIC	Connection Type	Status
1	Adptsf1	ANA-62044/TX:[1]	Autodetect (default)	Enabled
2	Adptsf2	ANA-62044/TX:[2]	Autodetect (default)	Enabled
3	Adptsf3	ANA-62044/TX:[3]	Autodetect (default)	Enabled
4	Adptsf4	ANA-62044/TX:[4]	Autodetect (default)	Enabled
5	Adptsf5	ANA-62044/TX:[1]	Autodetect (default)	Enabled
6	Adptsf6	ANA-62044/TX:[2]	Autodetect (default)	Enabled
7	Adptsf7	ANA-62044/TX:[3]	Autodetect (default)	Enabled
8	Adptsf8	ANA-62044/TX:[4]	Autodetect (default)	Enabled



Note: Port names (Adptsf1, Adptsf2, and so on) do not correspond to the physical PCI slot numbers on the motherboard.

- 3 **OPTIONAL.** The *Autodetect* (default) detects which device the port is connected to and negotiates the port speed and transmission mode accordingly. Autodetect is recommended; however, to change the connection type(s):
 - Select the port, and press **Enter**. (To select multiple ports, select the port, then press **F5** one at a time for each port selected.)
 - In the Type of Connection menu, select the type, then press **Enter**. ([Connection Types](#) on page [A-2](#) provides descriptions.)

No.	Port Name	NIC	Type of Connection	
			Connection Type	Status
1	Adptsf1	ANA-62044/TX:[1]	Autodetect (default)	Enabled
2	Adptsf2	ANA-62044/TX:[2]	Autodetect (default)	Enabled
3	Adptsf3	ANA-62044/TX:[3]	Autodetect (default)	Enabled
4	Adptsf4	ANA-62044/TX:[4]	Autodetect (default)	Enabled
5	Adptsf5	ANA-62044/TX:[1]	Autodetect (default)	Enabled
6	Adptsf6	ANA-62044/TX:[2]	Autodetect (default)	Enabled
7	Adptsf7	ANA-62044/TX:[3]	Autodetect (default)	Enabled
8	Adptsf8	ANA-62044/TX:[4]	Autodetect (default)	Enabled

- 4 **OPTIONAL.** *Enabled* is the default status. To disable a port, select the port, then press **Tab**.
- 5 Press **Esc** when you are done.

Assigning the Protocols

You can assign IP or IPX protocols to Failover pairs and stand-alone ports.



Note: The IPX protocol supports all four frame types and multiple-frame types simultaneously. IP protocol supports either Ethernet_II or Ethernet_SNAP, but not both at the same time.

- 1 In the Main Menu, select **Configure Protocols**, then press **Enter**.
- 2 In the List of Ports box, select the port, then press **Enter**.

P = Stand-alone

List of Ports		
1	P	Adptsf4
2	P	Adptsf5
3	P	Adptsf6
4	P	Adptsf7
5	P	Adptsf8

- 3 In the List of Protocols box, select the protocol for the selected Failover pair or port, then press **Enter**.

List of Protocols	
IPX	
IP	

If you selected **IPX**, continue with Step 4.

If you selected **IP**, skip to Step 5.

4 Follow these steps to assign IPX protocol:

a In the List of Frame Types box, select the frame type, then press **Enter**.

List of Frame Types
ETHERNET_802.2
ETHERNET_802.3
ETHERNET_II
ETHERNET_SNAP

b In the IPX Network Number box, type the network number, then press **Enter**.

IPX Network Number
00000001

c Repeat Steps a and b for each frame type you wish to use.

List of Frame Types
ETHERNET_802.2 ✓
ETHERNET_802.3
ETHERNET_II
ETHERNET_SNAP

d Press **Esc** to return to the List of Protocols box, then skip to Step 6.

5 Follow these steps to assign IP protocol:

a In the List of Frame Types box, select the frame type, then press **Enter**.

b In the IP Parameters box, select **Enter IP Address**, then press **Enter**.

IP Parameters
Enter IP Address
Enter Subnet Mask

c In the IP Address box, type the address number, then press **Enter**.

IP Address
1.1.1.2

d In the IP Parameters box, select **Enter Subnet Mask**, then press **Enter**.

e In the Subnet Mask box, type the corresponding subnet mask, then press **Enter**.

Subnet Mask
ff.ff.ff.0

f Press **Esc**.

g Repeat Steps a through f for each appropriate port or pair.

h Press **Esc** until you return to the List of Ports/Failover Pairs box.

6 Repeat Steps 1 through 5 for any other ports you wish to configure.

7 Press **Esc** until you return to the Main Menu.

8 Continue to the next section, *[Viewing the Configuration](#)* on page [9-9](#).

Viewing the Configuration

It is important to verify the current port configurations before saving them to the server.

- 1 From the Main Menu, select **View Configuration**, and press **Enter**. The following screen appears.

Duralink64 Failover Setup		Netware Loadable Module		
Interfaces	Protocol	Frame	Network	IP Address
Adptsf3 P				
Adptsf4 P				
Adptsf5 P				
Adptsf6 P				
Adptsf7 P				
Adptsf8 P				
Marcom F	IPX	E_802.2	00000001	
└ Adptsf1 (Primary)				
└ Adptsf2				

<ESC> to go back to the previous menu.

© Copyright 1998, Adaptec Inc. < F1> Help < F10> Abort Install

- 2 Press **Esc** to return to the Main Menu.

Restarting the Server



Note: See *Copying and Saving the Configuration* on page 9-11.

After installing the Standard driver and configuring the ports, you must restart the server.

- 1 From the Main Menu, select **Install Software**.
- 2 In the Copy New Files box, select **Yes**.
- 3 In the If Software Previously Installed box:
 - Select **Enter** to overwrite the existing drivers individually, and select **Esc**.
 - Press **F5** to overwrite all existing drivers at once.
- 4 In the Save Configuration box, select **Save** and **Quit**.
- 5 At the Notice to Reboot box, select **Enter**.
- 6 **NetWare 5.0 and 5.1:**
 - Reboot the system by typing `restart server` at the system prompt.
- 7 **NetWare 4.x:**
 - Reboot the system by typing `down` at the system prompt.
 - Press **Enter**.
 - At the system prompt, type `restart server`.

Copying and Saving the Configuration

Once you have established and verified all port and group configurations in **setupsf**, you are ready to install program and configuration related files to the server.

- 1 From the Main Menu, select **Install Software**, and press **Enter**.
- 2 In the Copy New Files box, select **Yes**, and press **Enter**.



- 3 From the Main Menu, press **Esc** to exit the program.
- 4 In the Save box, select **Save and Quit** to save the configuration in **sys:\etc\configs\ncf**, and quit the program.
 - If you do not want to save the changes, select **Quit without Saving**, then press **Enter**.
 - If you wish to return to the Main Menu, select **Return to Previous Menu**, then press **Enter**.
- 5 **NetWare 4.x:**
 - a At the system prompt type **down**, and press **Enter**.
 - b At the system prompt type **restart server**.
- 6 **NetWare 5.0 and 5.1:**
 - At the system prompt type **restart server**.

Removing or Uninstalling Drivers

The following procedures are to be used if a new driver needs to be installed to replace an existing driver:

- 1 At the system prompt, type `load a:\nwserver\setupsf`, and press **Enter**.
- 2 Select the name of currently installed driver.
- 3 Select one of the three options: **Standard**, **Failover**, or **Port Aggregation**. Press **Enter**.
- 4 At the Main Menu, select **Uninstall Software**. Press **Enter**.
- 5 Select **Yes**. The computer will begin to remove files.
- 6 Select **Escape**.
- 7 When the Exit Setup box pops up, select **Yes**.
- 8 At the system prompt, type `restart server`, and press **Enter**.

10

Duralink64 Failover for NetWare

In this Chapter

<i>Before you Begin</i>	10-2
<i>Installing the NetWare Failover Driver</i>	10-3
<i>Configuring the Ports</i>	10-4
<i>Creating the Failover Pairs</i>	10-6
<i>Assigning the Protocols</i>	10-9
<i>Viewing the Configuration</i>	10-12
<i>Copying and Saving the Configuration</i>	10-13
<i>Viewing the System Status</i>	10-14
<i>Modifying the Driver Configuration</i>	10-16
<i>Removing or Uninstalling Drivers</i>	10-16

This chapter provides instructions for installing Duralink64 Failover on a server running NetWare 4.x or 5.x.

Before you Begin

- Verify that all system, memory, and NIC requirements are met; see *System Requirements* on page 1-3.
- Verify that the new Adaptec DuraLAN NIC(s) have been installed properly in the server; see Chapter 3, *DuraLAN NIC Installation*.
- Check your system for installed DuraLAN NIC drivers. If a Duralink64 Standard driver, Duralink64 Failover driver, or Duralink64 Port Aggregation driver exists, it must be removed. For information about driver removal, see *Removing or Uninstalling Drivers* on page 10-16.
- Verify that IntraNetWare Service Pack 6 or later is installed for NetWare 4.11. This pack may be downloaded from

<http://support.novell.com>

Note on NetWare

When you are installing Adaptec DuraLAN NICs, it is a good idea to document where each port physically resides in the server, especially when two or more identical NICs exist. This is important since ports are identified by generic port names (such as Adptsf1, Adptsf2, Adptsf3, and so on).

Port names are assigned to ports in the order that the system scans these ports at boot time. Consequently, whenever you physically rearrange the network cards, the port names change as well.

After you have installed Duralink64 Failover use configsf to reconfigure the driver when necessary. (See *Modifying the Driver Configuration* on page 10-16.)

Installing the NetWare Failover Driver

If you are installing NetWare 4.x on a new server, *do not* add the DuraLAN NIC at this time. When prompted to add the NIC, select **No**, and then continue with the NetWare installation.

If you are installing NetWare 5.0 on a new server, please see *Installing the Duralink64 Driver during NetWare 5.0 Operating System Installation* on page 9-3.



Note: This driver uses 32 receive buffers for each port. Therefore, if you are using multiple ports, the number of receive buffers must be increased.

Type `load edit c:\nwserver\startup.ncf`, then type the following commands at the *end* of the file:

```
set minimum packet receive buffers = 512
set maximum packet receive buffers = 1024
```

To install the Failover driver for NetWare follow these steps:


- 1 Insert the Duralink64 Driver for NetWare disk.
- 2 At the system prompt, type: `a:\nwserver\setupsf`, and press **Enter**. The following window appears:



- 3 Select **Failover**, and press **Enter**.
- 4 In the message indicating that New Adaptec NICs have been detected, press **Enter**.
- 5 Continue to the next section, *Configuring the Ports* on page 10-4.

Configuring the Ports

- 1 In the Main Menu, select **Configure Ports**, and press **Enter**.

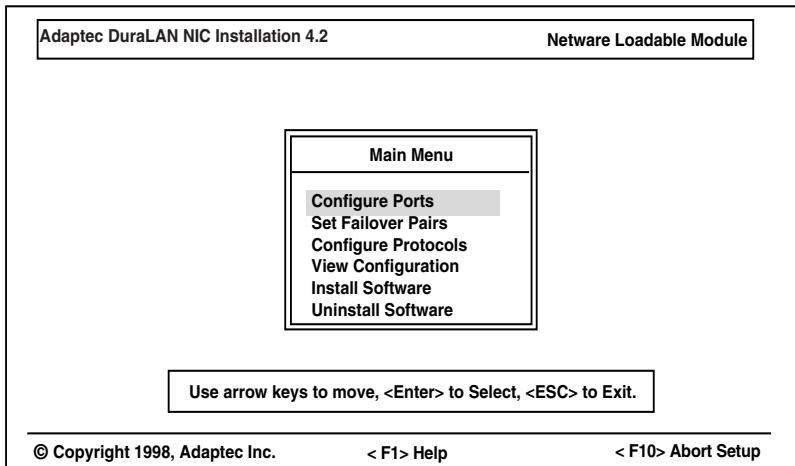

- 2 In the Ports screen, make sure you know which port names are assigned to the actual ports on the NIC. The port names (Adptsf1, Adptsf2, and so on) do not correspond to the physical PCI slot numbers on the motherboard.

No.	Port Name	NIC	Connection Type	Status
1	Adptsf1	ANA-62044/TX:[1]	Autodetect (default)	Enabled
2	Adptsf2	ANA-62044/TX:[2]	Autodetect (default)	Enabled
3	Adptsf3	ANA-62044/TX:[3]	Autodetect (default)	Enabled
4	Adptsf4	ANA-62044/TX:[4]	Autodetect (default)	Enabled
5	Adptsf5	ANA-62044/TX:[1]	Autodetect (default)	Enabled
6	Adptsf6	ANA-62044/TX:[2]	Autodetect (default)	Enabled
7	Adptsf7	ANA-62044/TX:[3]	Autodetect (default)	Enabled
8	Adptsf8	ANA-62044/TX:[4]	Autodetect (default)	Enabled

3 **OPTIONAL.** The *Autodetect* (default) detects which device the port is connected to and negotiates the port speed and transmission mode accordingly. Autodetect is recommended; however, to change the connection type(s):

- Select the port, and press **Enter**. (To select multiple ports, select the port, then press **F5** one at a time for each port.)
- In the Type of Connection menu, select the type, then press **Enter**. ([Connection Types](#) on page [A-2](#) provides descriptions.)
- Repeat Steps 3 and 4 until all ports have been configured.

No.	Port Name	NIC	Connected	Type of Connection
1	Adptsf1	ANA-62044/TX:[1]	Autode	Autodetect (default) 10 Mbps/Half Duplex
2	Adptsf2	ANA-62044/TX:[2]	Autode	10 Mbps/Full Duplex
3	Adptsf3	ANA-62044/TX:[3]	Autode	100 Mbps/Half Duplex
4	Adptsf4	ANA-62044/TX:[4]	Autode	100 Mbps/Full Duplex
5	Adptsf5	ANA-62044/TX:[1]	Autode	Autodetect (default) Enabled
6	Adptsf6	ANA-62044/TX:[2]	Autode	Autodetect (default) Enabled
7	Adptsf7	ANA-62044/TX:[3]	Autodetect (default)	Enabled
8	Adptsf8	ANA-62044/TX:[4]	Autodetect (default)	Enabled

4 **OPTIONAL.** *Enabled* is the default status. To disable a port, select the port, then press **Tab**.

5 Press **Esc** when you are done.

6 Continue to the next section, [Creating the Failover Pairs](#) on page [10-6](#).

Creating the Failover Pairs

The Failover pair consists of only two ports: the primary port and the backup port.


- 1 In the Main Menu, select **Set Failover Pairs**, and press **Enter**.
- 2 In the List of Existing Pairs box, press **Ins**.

List of Existing Pairs
No Failover Pairs currently exist

- 3 Select the pair, and press **Enter**. A default pair name uses the naming convention: first pair = Pair1, second pair = Pair2, third pair = Pair3, and so on.

List of Existing Pairs
1. Pair1

- 4 In the Failover Pair Configuration menu, select **Add/Remove Ports**, and press **Enter**.

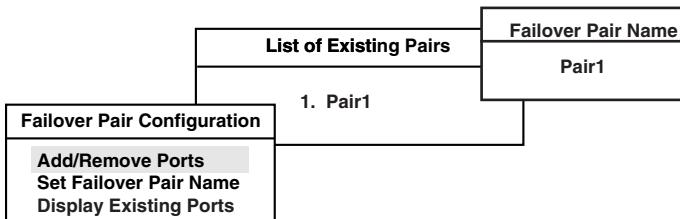

5 In the Existing Ports box, press **Ins**. The message No Ports Present appears the first time you add a new pair.

Existing Ports
No Ports Present

6 In the Available Ports box, select the primary port, and press **Enter**.

Available Ports
1. Adptsf1
2. Adptsf2
3. Adptsf3
4. Adptsf4
5. Adptsf5
6. Adptsf6
7. Adptsf7
8. Adptsf8

7 Press **Ins** to return to the Available Ports box.

8 Select the secondary port, and press **Enter**.



9 **OPTIONAL.** In the Existing Ports box, the check mark indicates the primary port. To change the primary port, select the second port, and press **Enter**.

10 Press **Esc** to apply the ports. The selected ports appear in the Existing Ports box.


Existing Ports
1. Adptsf1 ✓
2. Adptsf2

11 **OPTIONAL.** To rename the default Failover pair name:

- From the Failover Pair Configuration menu, select **Set Failover Pair Name**, and press **Enter**.
- In the Failover Pair Name box, type the pair name, and press **Enter**.

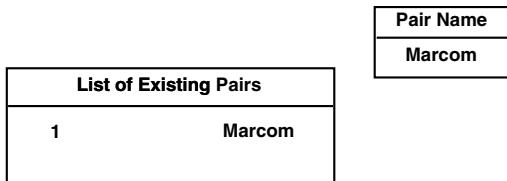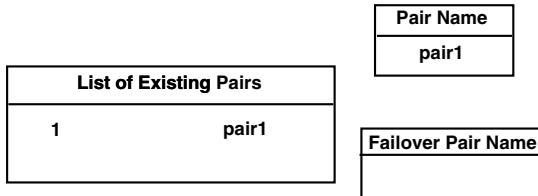

12 To review the ports assigned to the pair, select **Display Existing Ports** from the Set Failover Pairs menu, and then press **Enter**. When you select Display Existing Ports, this box is displayed as read-only.

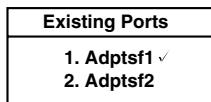

13 Press **Esc** until you return to the Main Menu.

14 To create more pairs, repeat Steps 1 through 13.

15 Continue to the next section, *Assigning the Protocols* on page 10-9.

Assigning the Protocols

You can assign IP or IPX protocols to Failover pairs and stand-alone ports.



Note: The IPX protocol supports all four frame types and multiple frame types simultaneously. IP supports either Ethernet_II or Ethernet_SNAP, but never both at the same time.

- 1 In the Main Menu, select **Configure Protocols**, then press **Enter**.
- 2 In the List of Ports/Failover Pairs box, select the Failover pair or port, then press **Enter**.

P = Stand-alone Port

F = Failover

List of Ports / Failover Pairs		
1	P	Adptsf4
2	P	Adptsf5
3	P	Adptsf6
4	P	Adptsf7
5	P	Adptsf8
6	F	Marcom

- 3 In the List of Protocols box, select the protocol for the selected Failover pair or port, then press **Enter**.


List of Protocols
IPX
IP

If you selected **IPX**, continue with Step 4.


If you selected **IP**, skip to Step 5.

4 Follow these steps to assign IPX protocol:


a In the List of Frame Types box, select the frame type, then press **Enter**.

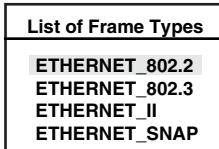

b In the IPX Network Number box, type the network number, then press **Enter**.

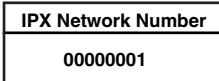

c Repeat Steps a and b for each frame type you wish to use.

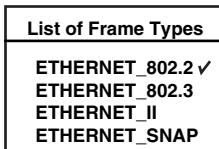


d Press **Esc** to return to the List of Protocols box. Then skip to Step 6.

5 Follow these steps to assign IP protocol:

a In the List of Frame Types box, select the frame type, then press **Enter**.

b In the IP Parameters box, select **Enter IP Address**, then press **Enter**.

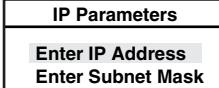

c In the IP Address box, type the address number, then press **Enter**.

IP Address
1.1.1.2

d In the IP Parameters box, select **Enter Subnet Mask**, then press **Enter**.

e In the Subnet Mask box, type the corresponding subnet mask, then press **Enter**.

Subnet Mask
ff.ff.ff.0

f Press **Esc**.

g Repeat Steps a through f for each appropriate port or pair.

h Press **Esc** until you return to the List of Ports/Failover Pairs box.

6 Repeat Steps 1 through 5 for any other port or pair you wish to configure.

7 Press **Esc** until you return to the Main Menu.

8 Continue to the next section, *[Viewing the Configuration](#)* on page [10-12](#).

Viewing the Configuration

It is important to verify the current port configurations before saving them to the server.

- 1 From the Main Menu, select **View Configuration**, and press **Enter**. The View Configuration screen appears.

Duralink64 Failover Setup		Netware Loadable Module		
Interfaces	Protocol	Frame	Network	IP Address
Adptsf3 P				
Adptsf4 P				
Adptsf5 P				
Adptsf6 P				
Adptsf7 P				
Adptsf8 P				
Marcom F	IPX	E_802.2	00000001	
↳ Adptsf1 (Primary)				
↳ Adptsf2				

<ESC> to go back to the previous menu.


© Copyright 1998, Adaptec Inc. < F1> Help < F10> Abort Install

- 2 Press **Esc** to return to the Main Menu.
- 3 Continue to the next section, *Copying and Saving the Configuration* on page 10-13.

Copying and Saving the Configuration

After verifying all port and group configurations, you can install the program and configuration-related files to the server.

- 1 From the Main Menu, select **Install Software**, then press **Enter**.
- 2 When the Copy New Files box appears, select **Yes**, then press **Enter**.

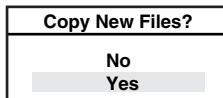

If the software has been previously installed, a note appears. Press **Enter** to continue.

- 3 From the Main Menu, press **Esc** to exit the program.
- 4 In the Save Configuration box, select **Save** and **Quit**. The configuration data is saved in `sys:\etc\configsfc.ncf`. If the previous `autoexec.ncf` file is saved, the system must be rebooted. Press **Enter**.
 - If you do not want to save the changes, select **Quit Without Saving**, then press **Enter**.
 - To return to the Main Menu, select **Return to Previous Menu**, then press **Enter**.
- 5 **NetWare 4.x:**
 - a At the system prompt, type `down`, and press **Enter**.
 - b At the system prompt, type `restart server`.
- 6 **NetWare 5.0 and 5.1:**
 - At the system prompt, type `restart server`, and press **Enter**.
- 7 Continue to the next section, [Viewing the System Status](#) on page [10-14](#).

Viewing the System Status

After installing Duralink64 Failover through **setupsf**, you can view the system status. This program automatically opens whenever you restart the server.

To manually enter the Status screen at the system prompt, type: **load status**. The Duralink64 Failover Status screen appears.

Duralink64 Failover/Stand alone Status		Netware Loadable Module		
Failover Pairs/Ports	NIC	Transmit Kbps	Receive Kbps	Status
Adptsf3	ANA-62044	10234	5250	ACTIVE
Adptsf4	ANA-62044	0	0	DOWN
Adptsf5	ANA-62044	12367	6150	ACTIVE
Adptsf6	ANA-62044	0	0	IDLE
Adptsf7	ANA-62044	10151	5045	ACTIVE
Adptsf8	ANA-62044	8305	4055	ACTIVE
Marcom				
>Adptsf1	ANA-62044	5798	2708	ACTIVE
>Adptsf2	ANA-62044	0	0	STANDBY

< F1> Help <F8> Refresh Interval <ESC> to Exit.

© Copyright 1998, Adaptec Inc. Server Name --> [NAME]



Note: This requires that the Failover software be loaded or an error will occur. If you have not rebooted since you installed the software, reboot, and the above screen will appear automatically.

This module can be used to identify the physical ports by determining the status when unplugging network connections.

Element Descriptions

A Status screen is provided, showing the following information:

- NIC model number
- Transmit Kbps (Kilobits/sec) per port
- Receive Kilobits/sec per port
- Present status of all ports and Failover pairs
 - **ACTIVE:** This port is currently used for data transfer and is connected with data being sent and/or received.
 - **IDLE:** This port is currently used for data transfer and is connected with no data being sent or received.
 - **STANDBY:** This port currently not used for data transfer and is connected with no data being sent or received.
 - **DOWN:** Port is not connected or the link is down.

F Keys

F1— provides online help for each screen.

F8— Changes the refresh interval. Refresh interval is a user-selectable refresh cycle in seconds (default is 1 second). This is the interval by which the utility will refresh the status.

Modifying the Driver Configuration

After installing Duralink64 Failover for NetWare, use configsf to add, remove, or change a configuration for Adaptec NIC drivers. You will be familiar with the screens in this program since they are similar to the ones in fosetsf.

- 1 At the system prompt, type `load configsf`, and press **Enter**.
- 2 In the message screen indicating that ports were added/removed, press **Esc**.
- 3 Refer to *Installing the NetWare Failover Driver* on page 10-3 for instructions.

Removing or Uninstalling Drivers

The following procedures are to be used if a new driver needs to be installed to replace an existing driver:

- 1 At the system prompt, type `load a:\nwserver\setupsf`, and press **Enter**.
- 2 Select the name of the currently installed driver.
- 3 Select one of the following three options: **Standard**, **Failover**, or **Port Aggregation**. Press **Enter**.
- 4 At Main Menu, select **Uninstall Software**. Press **Enter**.
- 5 Select **Yes**. The computer will begin to remove files.
- 6 Press **Escape**.
- 7 When the Exit Setup box pops up, select **Yes**.
- 8 At the system prompt, type `restart server`, and press **Enter**.

11

Duralink64 Port Aggregation for NetWare

In this Chapter

<i>Before you Begin</i>	11-2
<i>Installing the NetWare Port Aggregation Driver</i>	11-3
<i>Configuring Ports</i>	11-4
<i>Creating Port Aggregation Groups</i>	11-6
<i>Creating Fast EtherChannel Groups</i>	11-9
<i>Assigning Protocols</i>	11-12
<i>Verifying Configuration</i>	11-15
<i>Copying and Saving the Configuration</i>	11-16
<i>Viewing System Status</i>	11-17
<i>Modifying Driver Configurations</i>	11-18
<i>Removing or Uninstalling Drivers</i>	11-19

This chapter provides instructions for configuring Duralink64 Port Aggregation on a server running NetWare 4.x or 5.x.

Before you Begin

- Verify that all system, memory, and NIC requirements are met, see *System Requirements* on page 1-3.
- Verify that the new Adaptec DuraLAN NIC(s) has been installed properly in the server, see Chapter 3, *DuraLAN NIC Installation*.
- Check your system for installed DuraLAN NIC drivers. If a Duralink64 Standard driver, Duralink64 Failover driver, or Duralink64 Port Aggregation driver exists, it must be removed. For information about driver removal see *Removing or Uninstalling Drivers* on page 9-12.
- Verify that IntraNetWare Service Pack 6 or later is installed for NetWare 4.11. This pack may be downloaded from

<http://support.novell.com>

Note on NetWare

When you are installing Adaptec DuraLAN NICs, it is a good idea to document where each port physically resides in the server, especially when two or more identical NICs exist. This is important because ports are identified by generic port names, such as Adptsf1, Adptsf2, Adptsf3, and so forth.

Port names are assigned to ports in the order that the system scans these ports at boot time. Consequently, whenever you physically rearrange the network cards, the port names change as well.

After you install Duralink64 Port Aggregation, use configsf to reconfigure the drivers when necessary. (See *Modifying Driver Configurations* on page 11-18.)

Installing the NetWare Port Aggregation Driver

If you are installing NetWare 4.x on a new server, *do not* add the DuraLAN NIC at this time. When prompted to add the NIC, select **No**, and then continue with the NetWare installation.

If you are installing NetWare 5.0 on a new server, please see *Installing the Duralink64 Driver during NetWare 5.0 Operating System Installation* on page 9-3.




Note: This driver uses 32 receive buffers for each port. Therefore, if you are using multiple ports, the number of receive buffers must be increased.

Type `load edit c:\nwserver\startup.ncf`, and then type the following commands at the *end* of the file:

```
set minimum packet receive buffers = 512
set maximum packet receive buffers = 1024
```

To install the Port Aggregation driver for NetWare, follow these steps:


- 1 Insert the Duralink64 Driver disk for NetWare 4.x, 5.0, and 5.1.
- 2 At the system prompt, type: `a:\nwserver\setupsf`.
- 3 Press **Enter**. The following window appears:

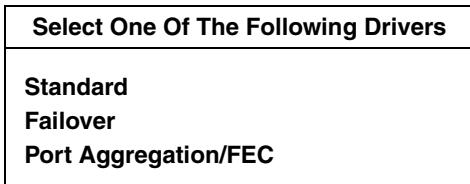

- 4 Select **Port Aggregation/FEC**, and press **Enter**.
- 5 In the message indicating the New Adaptec NICs have been detected, press **Enter**.
- 6 Continue to the next section, *Configuring Ports* on page 11-4.

Configuring Ports

- 1 In the Main Menu, select **Configure Ports**, and press **Enter**. The Duralink64 Port Aggregation Setup Main Menu appears.

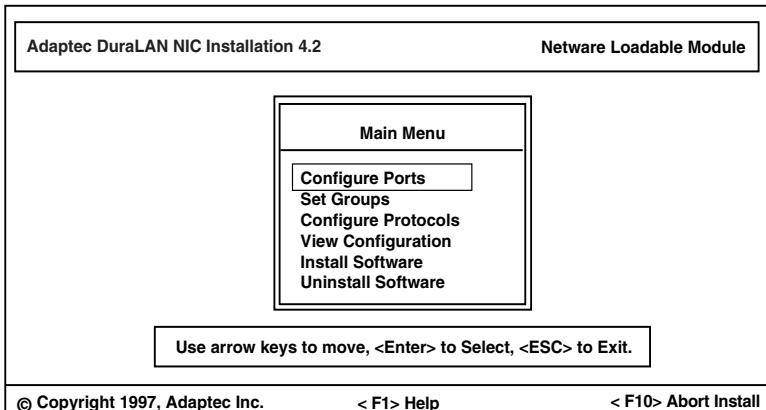

- 2 In the Configuration Ports screen, make sure you know which port names correspond to the actual ports in the server. In this scenario, 2 quad-port NICs exist; thus, eight ports are found. Port 1 is always the top port of a NIC.

No.	Port Name	NIC	Connection Type	Status
1	Adptsf1	ANA-62044/TX:[1]	Autodetect (default)	Enabled
2	Adptsf2	ANA-62044/TX:[2]	Autodetect (default)	Enabled
3	Adptsf3	ANA-62044/TX:[3]	Autodetect (default)	Enabled
4	Adptsf4	ANA-62044/TX:[4]	Autodetect (default)	Enabled
5	Adptsf5	ANA-62044/TX:[1]	Autodetect (default)	Enabled
6	Adptsf6	ANA-62044/TX:[2]	Autodetect (default)	Enabled
7	Adptsf7	ANA-62044/TX:[3]	Autodetect (default)	Enabled
8	Adptsf8	ANA-62044/TX:[4]	Autodetect (default)	Enabled

3 **OPTIONAL.** The *Autodetect* (default) detects which device the port is connected to and adjusts the port speed and transmission mode accordingly. Autodetect is recommended; however, to change the connection type(s):

- Select the port, and press **Enter**. (To select multiple ports, select the port, then press **F5** one at a time before pressing **Enter**.)
- In the Type of Connection menu, select the type, and press **Enter**. (*Connection Types* on page [A-2](#) provides descriptions.)

No.	Port Name	NIC	Type of Connection	
			Connected	Type
1	Adptsf1	ANA-62044/TX:[1]	Autode	Autodetect (default)
2	Adptsf2	ANA-62044/TX:[2]	Autode	10 Mbps/Half Duplex
3	Adptsf3	ANA-62044/TX:[3]	Autode	10 Mbps/Full Duplex
4	Adptsf4	ANA-62044/TX:[4]	Autode	100 Mbps/Half Duplex
5	Adptsf5	ANA-62044/TX:[1]	Autode	100 Mbps/Full Duplex
6	Adptsf6	ANA-62044/TX:[2]	Autode
7	Adptsf7	ANA-62044/TX:[3]	Autodetect (default)	Enabled
8	Adptsf8	ANA-62044/TX:[4]	Autodetect (default)	Enabled

4 **OPTIONAL.** *Enabled* is the status default. To disable a port, select the port, then press **Tab**.


5 When you are finished, press **Esc** to return to the Main Menu.

6 Continue to the next section, *Creating Port Aggregation Groups* on page [11-6](#).


Creating Port Aggregation Groups

After configuring ports, you may create Port Aggregation groups using the following steps:

- 1 In the Main Menu, select **Set Groups**, and press **Enter**.
- 2 In the List of Existing Groups box, press **Ins** to add a new group. The message **No groups currently exist** appears the first time you add a new group¹.

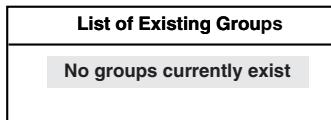


- 3 Select the group, and press **Enter**.

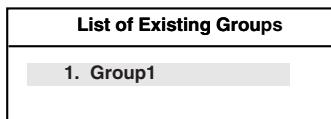

Group1 is the new group's default name.

- 4 In the Group Configuration menu, select **Add/Remove Ports**, and press **Enter**. The Existing Ports box appears.

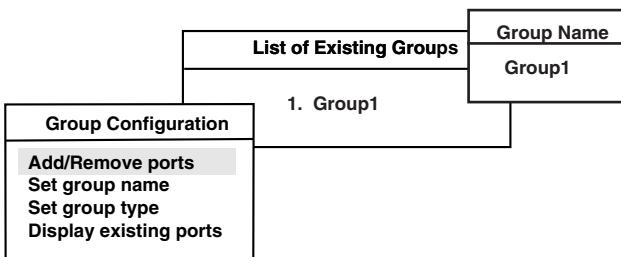

¹ If you are in configsf, this message appears only when no groups are found.

5 In the Existing Ports box, press **Ins**. The message No Ports Present appears the first time you add a new group.

Existing Ports
No Ports Present

6 In the Available Ports box, use **F5** to select the ports for the new group, and press **Enter**. In this scenario, three ports are selected for the new group.

Available Ports
1. Adptsf1
2. Adptsf2
3. Adptsf3
4. Adptsf4
5. Adptsf5
6. Adptsf6
7. Adptsf7
8. Adptsf8

7 Press **Esc** to return to the Group Configuration menu. The selected ports are transferred to the Existing Ports box.

Existing Ports
1. Adptsf1
2. Adptsf2
3. Adptsf3

8 In the Group Configuration menu, select **Set Group Type**, and press **Enter**. The Set Group Type menu appears.


Set Group Type
Adaptec Duralink Port Aggregation
Cisco Fast EtherChannel

9 In the Set Group Type menu, select **Adaptec Duralink Port Aggregation**, and press **Enter**.

10 Press **Esc** to return to the Group Configuration menu.

11 **OPTIONAL.** `setupsf` automatically assigns a name to each new group. For example, the first group = Group1. To assign a unique name to a group:

- From the Group Configuration menu, select **Set Group Name**, and press **Enter**.
- In the Group Name box, type the group name, and press **Enter**. (This field allows up to 20 characters.)

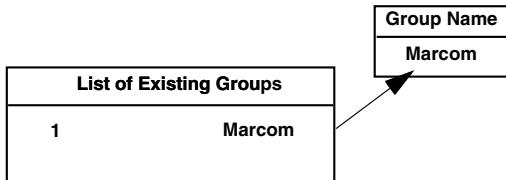


- 12** To create another group, repeat Steps 2 through 11.
- 13** Press **Esc** until you return to the Main Menu.
- 14** Continue to section, *Assigning Protocols* on page [11-12](#).


Creating Fast EtherChannel Groups

Fast EtherChannel (FEC) supports either two or four ports. One, three, or more than four ports are not acceptable. After configuring ports, you may create FEC groups using the following steps:

- 1 In the Main Menu, select **Set Groups**, then press **Enter**.
- 2 In the List of Existing Groups box, press **Ins** to add a new group. The message **No groups currently exist** appears the first time you add a new group¹.

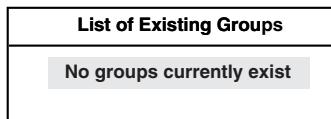


- 3 Select the group, then press **Enter**.

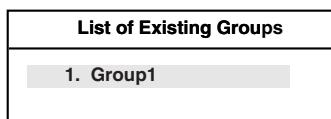

Group1 is the new group's default name

- 4 In the Group Configuration menu, select **Add/Remove ports**, then press **Enter**. The Existing Ports box appears.

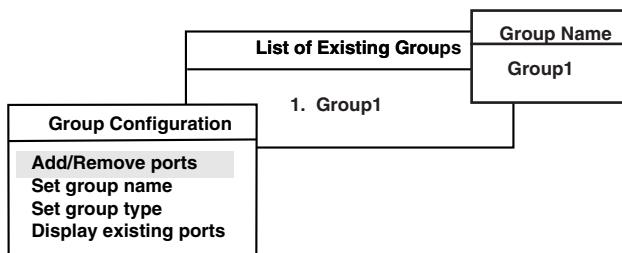

¹ If you are in **configsf**, this message appears only when no groups are found.

5 In the Existing Ports box, press **Ins**. The message **No Ports Present** appears the first time you add a new group.

Existing Ports
No Ports Present

6 In the Available Ports box, use **F5** to select the ports for the new group, then press **Enter**. In this scenario, four ports are selected for the new group.

Available Ports
1. Adptsf1
2. Adptsf2
3. Adptsf3
4. Adptsf4
5. Adptsf5
6. Adptsf6
7. Adptsf7
8. Adptsf8

7 Press **Esc** to return to the Group Configuration menu. The selected ports are transferred to the Existing Ports box.

Existing Ports
1. Adptsf1
2. Adptsf2
3. Adptsf3
4. Adptsf4

8 In the Group Configuration menu, select **Set Group Type**, then press **Enter**. The Set Group Type menu appears.


Set Group Type
Duralink Port Aggregation
Fast EtherChannel

9 In the Set Group Type menu, select **Fast EtherChannel**, then press **Enter**.

10 Press **Esc** to return to the Group Configuration menu.

11 **OPTIONAL.** *setupsf* automatically assigns a name to each new group. For example, the first group = Group1. To assign a unique name to a group:

- a** From the Group Configuration menu, select **Set Group Name**, then press **Enter**.
- b** In the Group Name box, type the group name, then press **Enter**. (This field allows up to 20 characters.)

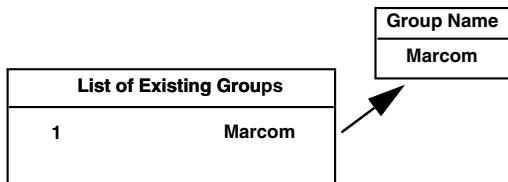

- 12 To create another group, repeat Steps 2 through 11.
- 13 Press **Esc** until you return to the Main Menu.
- 14 Continue to the next section, *Assigning Protocols* on page 11-12.

Assigning Protocols

You can assign the IP or IPX protocols to groups and stand-alone ports. The IPX protocol supports the following frame types simultaneously:

- ETHERNET_802.2
- ETHERNET_802.3
- ETHERNET_II
- ETHERNET_SNAP

IP supports either ETHERNET_II or ETHERNET_SNAP—but never both at the same time.

- 1 In the Main Menu, select **Configure Protocols**, then press **Enter**.
- 2 In the List of Ports/Groups box, select the group or port, then press **Enter**. The virtual port—Marcom—requires only one protocol.¹


P=Port

G=Group

List of Ports / Groups		
1	P	Adptsf4
2	P	Adptsf5
3	P	Adptsf6
4	P	Adptsf7
5	P	Adptsf 8
6	G	Marcom (FEC)

¹ Refer to the List of Existing Groups box to verify which ports are assigned to a particular group.

3 In the List of Protocols box, select the protocol for the current group/port, then press **Enter**.

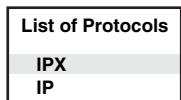


If you selected **IPX**, continue with Step 4.

If you selected **IP**, skip to step 5.

4 Follow these steps to assign IPX protocol:


a In the List of Frame Types box, select the frame type, then press **Enter**. In this example, Marcom will be bound with ETHERNET 802.2.

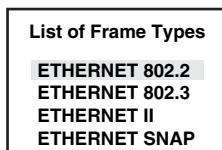

b In the IPX Network Number box, type a unique IPX network number, then press **Enter**.




c Repeat Steps a and b for each frame type you wish to use. A check mark indicates enabled frame types. In this example, Marcom and ETHERNET 802.2 are bound.

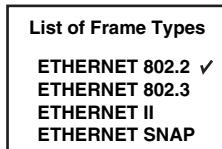


d Press **Esc** to return to the List of Protocols box. Then skip to Step 6.

- 5 Follow these steps to assign IP protocol:
 - a In the List of Frame Types box, select the frame type, then press **Enter**.

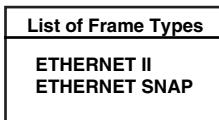

- b In the IP Parameters box, select **Enter IP Address**, then press **Enter**.

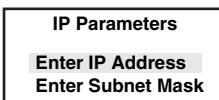

- c In the IP Address box, type the address number, then press **Enter**.
 - d In the IP Parameters box, select **Enter Subnet Mask**, then press **Enter**.
 - e In the IP Subnet Mask box, type the subnet mask, then press **Enter**.
 - f Repeat Steps a through e for each appropriate port or group.
 - g Press **Esc** twice to return to the List of Protocols box.
- 6 Repeat Steps 2 through 5 for any other group or port you wish to configure.
- 7 Press **Esc** to return to the Main Menu.
- 8 Continue to the next section, *Verifying Configuration* on page 11-15.

Verifying Configuration

You should verify the current port configurations before saving them to the server.

- 1 From the Main Menu, select **View Configuration**, then press **Enter**. The View Configuration screen appears.

Duralink Port Aggregation Setup					Netware Loadable Module
Interfaces	Protocol	Frame	Network	IP Address	
Adptsf4 P	No Protocols Configured				▲
Adptsf5 P	No Protocols Configured				
Adptsf6 P	No Protocols Configured				
Adptsf7 P	No Protocols Configured				
Adptsf8 P	No Protocols Configured				
Marcom G	IPX	E_802.2	121212121		
Adptsf1					
Adptsf2					
Adptsf3					▼

<ESC> to go back to the previous menu.

© Copyright 1998, Adaptec Inc. < F1> Help < F10> Abort Setup

In this example the screen indicates that five stand-alone ports without configurations and one group named Marcom are currently enabled.¹ Marcom is made up of three ports: Adptsf1, Adptsf2, and Adptsf3. The IPX protocol is assigned to Marcom using ETHERNET_802.2 as the frame type and 121212121 as the IPX Network Number.

- 2 Press **Esc** to return to the Main Menu.
- 3 Continue to the next section, *[Copying and Saving the Configuration](#)* on page [11-16](#).

¹ If the ports or group were disabled, [Disabled] would appear next to the port/group name.

Copying and Saving the Configuration

Once you have established and verified all port and group configurations in `setupsf`, you are ready to install program- and configuration-related files to the server.

- 1 From the Main Menu, select **Install Software**, then press **Enter**.
- 2 In the Copy New Files box, select **Yes**, then press **Enter**.



- 3 From the Main Menu, press **Esc** to exit the program.
- 4 In the Save box, select **Save and Quit** to save the configuration in `sys:\etc\configs\ncf` and quit the program.
 - If you do not want to save the changes, select **Quit without Saving**, then press **Enter**.
 - If you wish to return to the Main Menu, select **Return to Previous Menu**, then press **Enter**.
- 5 **NetWare 4.x:**
 - a At the system prompt type `down`, then press **Enter**.
 - b At the system prompt type `restart server`.
- 6 **NetWare 5.0 and 5.1:**
 - At the system prompt type `restart server`, then press **Enter**.
- 7 Continue to the next section, *[Viewing System Status](#)* on page [11-17](#).

Viewing System Status

Once you have installed Duralink64 Port Aggregation using `lsetsf`, you can view the system status in the System Status screen. This program opens automatically whenever you restart the server.

To manually enter the Status screen, at the system prompt type:

```
load status
```

Duralink64 Port Aggregation Status 4.2			Netware Loadable Module	
Groups/Ports	NIC	Transmit Kbps	Load Perc.	Status
Adptsf4	ANA-62044	10234	100	ACTIVE
Adptsf5	ANA-62044	0	0	DOWN
Adptsf6	ANA-62044	12367	100	ACTIVE
Adptsf7	ANA-62044	10151	100	ACTIVE
Adptsf8	ANA-62044	8305	100	ACTIVE
Marcom G		5798	100	
Adptsf1	ANA-62044	5798	100	ACTIVE
Adptsf2	ANA-62044	0	0	IDLE
Adptsf3	ANA-62044	0	0	DOWN

< F1> Help <F8> Refresh Interval <ESC> to Exit.

© Copyright 1998, Adaptec Inc.

Server Name --> [NAME]

System Status Data

- Adaptec NIC model number
- Total Kilobits/sec transmitted per port (stand-alone and group). Total Kilobits/sec transmitted per group. The Kilobits/sec sum of aggregated ports in a group equals the total Kilobits/sec transmitted by their group.
- Percentage of transmit load carried by each port in a load-balancing group. The percentage for a stand-alone port is always 100 percent. The percentage for a group is calculated as a percentage of bytes transmitted by the port over bytes transmitted by the group for a fixed period of time. (Use **F8** to adjust time intervals.)

- The present status of all ports and groups.
 - **DOWN** is displayed when a link is down.
 - **ACTIVE** is displayed when the link is up and has transmitted data within the established time interval.
 - **IDLE** is displayed when the link is up, but the port has not transmitted any data within the established time interval.

Setting Time Intervals

By default, the System Status screen refreshes every second. You may change the time interval using **F8**.

Modifying Driver Configurations

Once Duralink64 Port Aggregation is installed, use **configsf** to add, remove, or change a driver configuration for an Adaptec DuraLAN NIC. You will be familiar with the screens in this program since they are similar to the ones in **lsetsf**.

- 1 At the system console prompt, type **load configsf**, and press **Enter**.
- 2 In the message screen indicating that ports were added/removed, press **Esc**.
- 3 Once you have opened **configsf**, refer to *Configuring Ports* on page [11-4](#) for more instructions.

Removing or Uninstalling Drivers

Use the following procedures if a new driver needs to be installed to replace an existing driver.

- 1 At the system prompt, type `load a:\nwserver\setupsf`, and press **Enter**.
- 2 Select the name of the currently installed driver.
- 3 Select one of the three options: **Standard**, **Failover**, or **Port Aggregation**. Press **Enter**.
- 4 At the Main Menu, select **Uninstall Software**. Press **Enter**.
- 5 Select **Yes**. The computer will begin to remove files.
- 6 Press **Escape**.
- 7 When the Exit Setup box pops up, select **Yes**.
- 8 At the system prompt, type `restart server`, and press **Enter**.

12

Installing Duralink64 NetWare Client

In this Chapter

<i>Installing Novell Client 32 for DOS</i>	12-2
<i>Installing Novell Client 32 for Windows</i>	12-5
<i>Connecting Clients to the NetWare Failover Server</i>	12-6
<i>Connecting Clients to the NetWare Port Aggregation Server</i>	12-7

This chapter provides instructions for installing Duralink64 on a NetWare client.

Installing Novell Client 32 for DOS

This section provides instructions on installing the Adptsf 32-bit driver for Novell Client 32 using the ODI driver. Please note that DuraLAN products do not support 16-bit drivers.

- 1 Download the latest version of Novell NetWare Client 32 via the Novell Web site, www.novell.com.
- 2 Start DOS.
- 3 Insert your Novell NetWare Client 32 package.
- 4 Type `install`, then press **Enter**.
- 5 Follow the instructions on your screen. Refer to [Selecting Options](#) on page 12-3 if you are not sure which option to select.

When you are done, you may confirm settings in `startnet.bat`.



Note: This installation setup assigns settings to only one port. To assign settings to multiple ports, you must edit `startnet.bat`. See [Editing startnet.bat](#) on page 12-4.

Selecting Options

This section provides the option you must select in a given screen. These screens vary depending on which NetWare Client 32 package you are using.

Screen Name/Message	Option
Client Installation	Select either NetWare Client 32 for DOS and Windows 3.1x or IntraNetWare DOS/Windows for DOS/Windows .
Driver Type	Select 32-Bit .
32-Bit Network Board Drivers	Select User Specified 32 Bit Driver . <i>Do not</i> choose Adaptec PCI Ethernet Driver Failover!
When asked to insert the NetWare Client 32 for DOS/Windows 3.1x 32-bit disk	Insert the Duralink64 driver for NetWare 4.x (disk 2 of 2), and then type a : \nwserver.
32-Bit Network Board Drivers	Select Adaptec DuraLAN Network Adapters .
Settings for Adaptec DuraLAN Network Adapter	Set IOMAP to 1 . Set Connection Type to Autodetect Default or None .

Editing startnet.bat

To assign multiple ports, follow these steps:

- 1** Load c:\novell\client32\adptsf.lan.
- 2** In startnet.bat, type slot=[port slot number] at the end of each line. The following example shows the setting assigned to port 1:

```
iomap=1 frame=ETHERNET_802.2 slot=1
```

- 3** For the next port, type

```
iomap=1 frame=[frame type] slot=[port slot  
number]
```

To assign multiple frame types, repeat this step, changing the frame type setting.

- 4** Repeat Step 3 for each additional port.
- 5** Save your changes.
- 6** Exit startnet.bat.

Connecting Clients to the NetWare Server

Connecting clients to the NetWare Duralink64 server requires the NDIS driver. *Do not* use an ODI driver! See the appropriate section:

- *Connecting Clients to the NetWare Failover Server* on page 12-6.
- *Installing the NetWare Port Aggregation Driver* on page 11-3.

Installing Novell Client 32 for Windows

This section describes how to install the Adptsf 32-bit driver for Novell Client 32. Please note that Adaptec does not support 16-bit drivers.



Note: This procedure requires the NDIS driver with Client 32. *Do not* use an ODI driver!

- 1 If you are using Windows NT 4.0, install the latest Microsoft service packs that are available for the Windows operating system. Then restart the system.
- 2 Install the DuraLAN Standard driver. Instructions are provided in *Installing the NetWare Standard Driver* on page 9-4.
- 3 Install the Client 32 software, see your Novell documentation for instructions.

Connecting Clients to the NetWare Server

Connecting clients to the NetWare Duralink64 server requires the NDIS driver. *Do not* use an ODI driver! See the appropriate section:

- *Installing the NetWare Failover Driver* on page 10-3.
- *Installing the NetWare Port Aggregation Driver* on page 11-3.

Connecting Clients to the NetWare Failover Server

For optimum performance of NetWare Duralink64 Failover, all clients (any brand) should increase their IPX retry count.

- For DOS clients using VLM or Novell Client 32

Type the following lines in **edit net.cfg** [*assure second line of entry line is indented*]:

```
protocol ipx
    ipx retry count = 255
```

- For Windows 95 Clients using Novell Client 32

From the Control Panel, locate NetWare Clients, and then type 255 under the IPX retry count in the IPX 32-bit Protocol tab.

- For Windows NT Clients using Novell Client 32

Set the IPX retry count in the registry in NetWare Workstation Parameters. Use the following steps:

- a** From the DOS prompt, type **regedit** to enter the Registry Editor.
- b** Double-click **hkey_local_machine**.
- c** Double-click **System**.
- d** Double-click **CurrentControlSet**.
- e** Double-click **Services**.
- f** Double-click **NetWare Workstation**.
- g** Double-click **Parameters**.
- h** Double-click **Retry Count** to enter the Edit DWORD Value menu.
- i** Change the base to decimal, then change value data to 255.
- j** Click **OK**.
- k** Close the Registry Editor.
- l** Restart the system.

Connecting Clients to the NetWare Port Aggregation Server

For optimum performance of NetWare Duralink64 Port Aggregation, all clients (any brand) should increase their IPX retry count.

- For DOS clients using VLM or Novell Client 32

Type the following lines in **net.cfg** (indent the second line):

```
protocol ipx
  ipx retry count = 255
```

- For Windows 95 Clients using Novell Client 32

From the Control Panel, locate NetWare Clients, and then type 255 under the IPX retry count in the IPX 32-bit Protocol tab.

- For Windows NT Clients using Novell Client 32

Set the IPX retry count in the registry in NetWare Workstation Parameters. Use the following steps:

- a** From the DOS prompt, type **regedit** to enter the Registry Editor.
- b** Double-click **hkey_local_machine**.
- c** Double-click **System**.
- d** Double-click **CurrentControlSet**.
- e** Double-click **Services**.
- f** Double-click **NetWare Workstation**.
- g** Double-click **Parameters**.
- h** Double-click **Retry Count** to enter the Edit DWORD Value menu.
- i** Change the base to decimal, then change value data to 255.
- j** Click **OK**.
- k** Close the Registry Editor.
- l** Restart the system.

A

Cables and LEDs

This section is not intended to be an exhaustive explanation of connecting Ethernet networks but will provide some useful information on cabling suitable for Adaptec DuraLAN NICs.

The following table outlines the two cable specifications of IEEE 802.3u: 100BaseTX and 100BaseFX.

	100BaseTX	100BaseFX
Cable supported	CAT 5 UTP	62.5/125 multimode fiber
Number of cable pairs	2	1
Node-to-repeater cabling distance	100 meters	137 meters
Node-to-switch to full duplex	100 meters	2000 meters

Connection Types

Here are some of the possible connection type options given when configuring NICs. The options vary depending upon which operating system the NIC is being configured.

- Autodetect Default Connection

Detects the cable type, optimal line speed, and duplexity for the specific Adaptec PCI NIC model in use. This is the default and recommended connection type.

- 10 Megabits/sec UTP/Half Duplex

Forces the connection to 10 Megabits/sec in Half Duplex Mode.

- 100 Megabits/sec TX/Half Duplex

Forces the connection to 100 Megabits/sec in Half Duplex Mode.

- 10 Megabits/sec UTP/Full Duplex

Forces the connection to 10 Megabits/sec in Full Duplex Mode.

- 100 Megabits/sec TX/Full Duplex

Forces the connection to 100 Megabits/sec in Full Duplex Mode.

Full Duplex Support

To implement Full Duplex on your network, you need both an NIC and a switch that supports Full Duplex. Full Duplex support allows an NIC to send and receive data at the same time, doubling available bandwidth.



Note: Full Duplex can also be enabled point-to-point with a crossover cable instead of a switch.

Installation instructions in this *User's Guide* describe how to enable Full Duplex. Additional information can be found in the *readme.txt* files. Adaptec PCI TX NICs support Full Duplex at both 10 Megabits/sec and 100 Megabits/sec.


Cable Requirements

Cable requirements for Adaptec DuraLAN NICs vary according to network speed, cabling standard, and the connector to be used. The table below identifies appropriate cabling, based on these variables. The table applies to both Half Duplex and Full Duplex (for selected models) environments.

NIC	Connector	10 Mbps	100 Mbps	Cable Pins Used
TX Adapters	RJ-45	CAT 3,4,5 UTP	CAT 5 UTP	1,2,3, 6
FX Adapters	ST	N/A	62.5/125 micron multimode fiber	N/A
	SC	N/A	62.5/125 micron multimode fiber	N/A

Straight-through Cables

The majority of twisted-pair environments use twisted-pair cables that are wired straight-through. This means that each pin of the modular plug connector is wired to the same pin on the opposite end of the cable (pin 1 is wired to pin 1). Straight-through cables connect workstations and servers to repeaters and switches. Cables for 100BaseTX, use two pairs (pins 1, 2, 3, and 6).

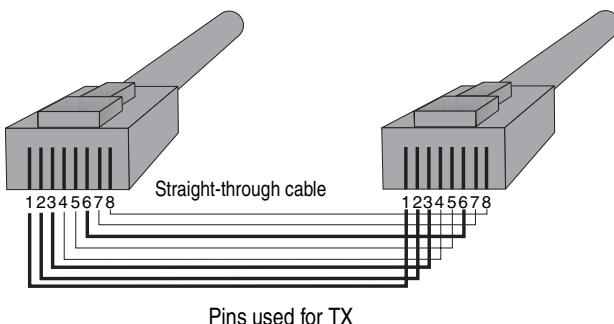


Pin-out and Color Requirements

Straight-through Cable – 10BaseT or 100BaseTX	
Pin	Colors – Both Ends
1	Orange/White
2	Orange
3	Green/White
4	Blue
5	Blue/White
6	Green
7	Brown/White
8	Brown

Diagnostics Loop-back Cable


The following pin-outs are used for Diagnostics external and autonegotiation tests. Refer to [Diagnostic Tests](#) on page [D-2](#) for more information regarding diagnostic tests.

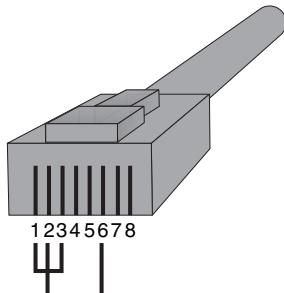

Loop-back cable

Diagnostic LEDs

Diagnostic Light Emitting Diodes (LEDs) provide information about link status (ls) and network activity (act). The figure below shows the locations of LEDs for each board. See the descriptions on the following page for details on each LED display.

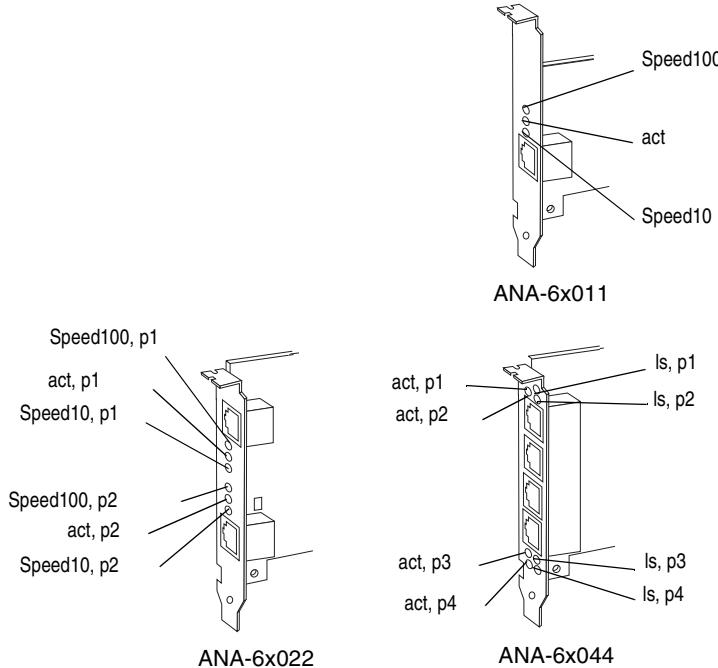

act = network activity, p = port, ls = link status

LED Functions

For ANA-6x011, and ANA-6x022:

- Speed100

The Speed100 LED is green. When ON, it indicates that a valid 100 Megabits/sec link has been made.

- Speed10

The Speed10 LED is green. When ON, it indicates that a valid 10 Megabits/sec link has been made. When OFF, no 10 Megabits/sec link has been made.

- act

The act LED is amber. The act LED lights up to signal the presence of incoming or outgoing traffic.

For ANA-6x044:

- ls

When ON and green, it indicates that a valid 100 Megabits/sec link has been made. When ON and amber, it indicates that a valid 10 Megabits/sec link has been made. When OFF, no valid link has been made.

- act

The act LED is amber. The act LED lights up to signal the presence of incoming or outgoing traffic.

B

Troubleshooting Tips

This appendix explains how to troubleshoot problems with your DuraLAN NIC. If your NIC is not functioning properly, first make sure that it was set up according to the instructions in this *User's Guide*.

- Verify that your NIC is installed properly and configured correctly; see [Chapter 3, DuraLAN NIC Installation](#).
- Verify that your network is properly cabled and the NIC is properly connected; see [Connecting the Network Cable](#) on page [3-6](#) and [Appendix A, Cables and LEDs](#).
- Verify that the DuraLAN driver is installed correctly; see chapters 3 and 4, which cover the selection and installation process for DuraLAN NICs, or chapters 5 through 8, which describe Duralink64 Drivers for Windows environments.
- Verify that you are using the latest BIOS for your computer and the latest DuraLAN driver.
- Verify that your cable, terminators, and connectors are functioning properly, or install the NIC in a different slot.

Isolating Faulty Hardware

If the problem persists, try the following:

- Replace the NIC with the same type of Adaptec NIC that is known to work. If the new NIC functions properly, the problem is related to the original NIC.
- Install the NIC in another functioning computer, and run the tests again. If the NIC works in this machine, the problem is related to one of three areas:
 - The computer is faulty
 - There is a hardware conflict
 - There are problems with the cables or connectors

Troubleshooting

Use the following table to help answer common questions. For more information on FAQs, see the www.adaptec.com support site.

Symptom	Solution
Adaptec NIC is conflicting with an installed PCI SCSI Adapter	Configure the NIC and SCSI adapters to use different interrupts via BIOS, System Configuration Utility (SCU), or EISA Configuration Utility (ECU) provided by the system vendor.
Workstations cannot connect to the NetWare server	<p>Make sure the workstation and server are using the same frame type.</p> <p>Add the following two lines to the NetWare Server <code>startup.ncf</code> file:</p> <pre data-bbox="471 639 845 761">set minimum packet receive buffers=512 set maximum packet receive buffers=1024</pre> <p>For Failover and Port Aggregation NetWare servers, verify that IPX retry count = 255 is on each workstation. See Connecting Clients to the NetWare Failover Server on page 12-6.</p>
Error messages during NetWare driver installation	Install NetWare Service Pack 6 (iwp6) or later, select ODI 3.31 specification , then install the DuraLAN NIC driver.
Driver fails to load or fails to recognize the DuraLAN NIC	Check the BIOS settings. Sometimes the bus master is disabled by default; if this is the case, enable the bus master.
Persistent problems with an adapter card set to IRQ 15	This occurs in Novell's NetWare. Either disable IRQ 15 or change the Adaptec DuraLAN NIC to another interrupt. Please refer to your Novell documentation.
System hangs at boot up	Make sure the DuraLAN NIC is seated properly in the PCI slot. Check with your system vendor for the latest BIOS.

Symptom (Continued)	Solution
LED does not light when running autonegotiation in the Diagnostics utility	Use a loop-back cable; see <i>Diagnostics Loop-back Cable</i> on page A-4.

Configuring the BIOS

Your system BIOS *may* determine available NIC resources and configure the Adaptec PCI NICs automatically. However, depending on your system, you may need to configure the PCI BIOS. To do this, enter your computer BIOS Setup and select **Advanced Settings** from the Main Menu. Make sure the following settings are made (your BIOS may not match the following options exactly):

Option	Setting
PCI Slot Enabled	Enable all PCI slots in your system.
Bus Mastering	Enable PCI bus mastering for the slot(s) to be used by the NIC(s).
PCI INTA	For the 62011, assign an interrupt (10, 11, 12, and so on) to PCI Interrupt Vector A.
PCI INTA-B	For the 62022, assign an interrupt (10,11, 12, and so on) to PCI Interrupt Vector A or B.
PCI INTA-D	For the 62044, assign an interrupt (10,11, 12, and so on) to PCI Interrupt Vector A-D.
PCI Bus Latency	Set to a value between 40 and 80.

Two- and four-port NICs use a PCI-to-PCI bridge chip. If your system BIOS does not support the PCI-to-PCI bridge chip, these NICs will not be configured properly. Contact your computer manufacturer to obtain a new BIOS version that supports the PCI-to-PCI bridge chip.

Frequently Asked Questions

Duralink64 Software and DuraLAN NICs – General Questions

- What is Duralink64 v5.x software?

Adaptec's innovative Duralink64 software includes Duralink64 stand-alone drivers, Port Aggregation, and Failover. This software is supported by Adaptec's DuraLAN 32-bit and 64-bit NICs. Duralink64 Port Aggregation software makes it possible to aggregate the outbound bandwidth of 2 to 12 Fast Ethernet ports into one virtual network interface for up to 1.2 Gigabits/sec of total throughput per workgroup. Duralink64 Failover Software offers FDDI-like port resiliency for optimum availability, and safe, fault-tolerant Fast Ethernet networks.

- How do the stand-alone drivers, Port Aggregation, and Failover differ?

The Duralink64 stand-alone driver is the minimum software required for DuraLAN NICs. Duralink64 Port Aggregation software groups up to 12 Fast Ethernet ports onto a single aggregated connection operating up to 1.2 Gigabits/sec per workgroup. Duralink Failover software is an application that automatically reacts to preserve a network connection if an Ethernet link fails.

- Which Adaptec NICs support the Duralink64 v5.x software suite?

Adaptec's Duralink64 stand-alone, Port Aggregation, and Failover drivers are supported by the ANA-6x011/TX, ANA-6x022, and ANA-6x044.

- Can I use the Adaptec Duralink64 v5.x software with NICs from other vendors?

Duralink64 v5.x software only works with Adaptec PCI 10/100 DuraLAN NICs but is fully interoperable with other products from other vendors.

- Which protocols work with Duralink64 v5.x software and my DuraLAN NICs?

TCP/IP and NetBEUI under Windows NT and Windows 2000, and TCP/IP and IPX/SPX under NetWare.

- Does Duralink64 v5.x software or the DuraLAN NICs support AppleTalk?

No.

- Does Duralink64 v5.x or my DuraLAN NIC support routing?

Routing functionality is provided by network operating systems, and not by NICs themselves. The NIC can be used with server operating systems (like Novell's NetWare, Windows NT, and Windows 2000) that support routing.

- What is the difference between the Duralink64 v4.2 or 5.0 and Duralink v3.0 software?

Duralink64 v4.2 and v5.0 are the software drivers written for Adaptec's DuraLAN ASIC (used on the ANA-6x011/TX, ANA-6x022, and ANA-6x044). Duralink v3.0 is the software written for Adaptec's legacy NICs based on the DEC/Intel ASICs (used on the ANA-6911A/XX, ANA-6922A/XX, and ANA-6944A & B/XX).

- Can I use the Duralink64 v5.x software with the legacy Adaptec DEC-based NICs?

No. The Duralink64 v5.x software is written only for the new Adaptec DuraLAN NICs and will not support the legacy Adaptec DEC-based NICs. You can use both cards in one system if you load both the Duralink64 v4.2 or v5.x and Duralink v3.0 software. However, you cannot mix and match Adaptec legacy DEC-based cards and Adaptec DuraLAN cards in a single Port Aggregation or Failover group.

Duralink64 v5.x Failover Software Questions

- What is Duralink64 Failover software?

Duralink64 Failover software is a network device application that automatically reacts to preserve a network connection when an Ethernet link fails. Duralink64 Failover supports mission-critical applications by activating a standby link in the event of failure, providing increased uptime and maintaining server availability. The driver establishes an active and a hot-standby link. Once the active link goes down, the standby link becomes active. The standby link is activated when the following conditions occur on the primary link:

- link loss,
- the driver loses contact with the NIC's "keep alive" mechanism,
- an abnormal hardware interrupt occurs,
- the port becomes unable to transmit for a specified time, or
- abnormal send and receive counters occur, such as too many collisions or errors on the segment.

- Which protocols work with Duralink64 Failover?

TCP/IP and NetBEUI under Windows NT and Windows 2000, and TCP/IP and IPX/SPX under NetWare.

- Is Duralink64 software interoperable/compatible with other vendors' NICs and network devices?

Duralink software only works with Adaptec DuraLAN NICs but is fully interoperable with network devices (such as switches and hubs) from other vendors.

- Does Duralink64 Failover work with a switch or a hub?

Duralink64 Failover works with any switch or any hub.

- How many ports can I configure for the Failover group?

Two ports per Failover group. Within each group, only one port can be used as the primary or active port, and only one port can be used as the backup or standby port.

- What happens during Failover?

The driver momentarily halts data transmission, does error checking, transfers the MAC address of the primary port to the backup port, enables the backup port for data transmissions, and continues to transmit data on the backup port.

- If I have the Duralink64 stand-alone drivers installed and want to install the Failover drivers, what do I need to do?

You must uninstall or remove the Duralink64 stand-alone drivers, and reboot the system. Then you can install the Duralink64 Failover drivers.

Duralink64 v5.x Port Aggregation Software Questions

- What is Duralink64 Port Aggregation software?

Adaptec's Duralink64 Port Aggregation technology builds upon standards-based Fast Ethernet to provide network managers a reliable high-speed solution for the network backbone. Duralink64 Port Aggregation software groups up to 12 Fast Ethernet ports onto a single aggregated connection operating up to 1.2 Gigabits/sec per workgroup. See the Port Aggregation white paper on the Adaptec Web site (<http://www.adaptec.com>).

- What are the key benefits of Duralink64 Port Aggregation software?

- Network scalability
- Increases bandwidth by adding ports
- Allows segmentation of the network as needed by grouping ports
- Adds fault tolerance by design

- What applications or environments call for Duralink64 Port Aggregation?

Applications or environments that require Duralink64 Port Aggregation include servers that have large numbers of clients or download large amounts of data, such as application and video servers.

■ How does Duralink64 Port Aggregation work?

For all protocols, Duralink64 Port Aggregation effectively distributes transmit traffic among all ports within a Port Aggregation group. The Duralink64 Port Aggregation driver assigns a primary port to the Port Aggregation group, and the protocol binds to that port. To the protocol, the primary port is the only port. However, the driver uses all the ports in the group to transmit packets to the clients. Packets are generally received by the server via the primary port; but in the case of NetBEUI, all ports receive and transmit.

Duralink64 Port Aggregation requires connection to a switch in order for the ports to be aggregated as one logical link.

■ How does the Failover portion of Duralink64 Port Aggregation work?

Network fault tolerance means that a specific portion of the network is able to tolerate a failure. Fault tolerance is a built-in feature of the Duralink64 Port Aggregation product since there are at least two contributing members of each Port Aggregation group. It is highly improbable that the server connection will fail in this context.

If one port fails, the duties associated with the failed port are redistributed to other members of the Port Aggregation group. If the primary port fails, another member of the group is assigned the primary port's MAC address, minimizing impact to routers and their routing tables. If the primary port comes back online, the primary port's address is reassigned back to the primary port.

■ What NICs support Duralink64 Port Aggregation?

Adaptec's ANA-6x011/TX, ANA-6x022, and ANA-6x044 NICs support Duralink64 Port Aggregation.

■ Which network switches support Duralink64 Port Aggregation?

Duralink64 Port Aggregation has been tested with all the leading vendors' switches. Duralink64 Port Aggregation requires connection to a switch in order for the ports to be aggregated as one logical link.

- Which protocols and operating systems work with Duralink64 Port Aggregation?

Adaptec's Port Aggregation driver works with TCP/IP and NetBEUI under Windows NT and TCP/IP and IPX/SPX under NetWare.

- Does Duralink64 Port Aggregation support multiple VLANs?

Only one VLAN is supported per aggregated group or per port.

- How does Duralink64 Port Aggregation compare to Cisco's Fast EtherChannel?

Both Duralink64 Port Aggregation and Cisco's Fast EtherChannel are proprietary. Cisco's Fast EtherChannel focuses on increasing bandwidth between Cisco switches while Adaptec's Port Aggregation focuses on increasing bandwidth between server and switch connections, to increase server availability to clients. Each port on Cisco's Fast EtherChannel module can be configured to FEC Mode or Fast Ethernet Mode. (FEC Mode allows you to group up to four ports from one FEC module to another FEC module in different Cisco switches.)

- Does Duralink64 Port Aggregation support Cisco's Fast EtherChannel?

Yes.

- Where can I learn more about Duralink64 Port Aggregation?

Go to the Adaptec Web site at: <http://www.adaptec.com>.

Duralink64 v5.x Windows NT – General Questions

- Which service pack has been tested with DuraLAN and Duralink Failover 4.0 drivers?

Windows NT Service Pack 3 (SP3). Microsoft generally recommends installing SP3 on all Windows NT systems. Before installing Duralink64 v5.x software, be sure to install SP3.



Note: Duralink64 software may not work properly with SP1 or SP2.

- Does Duralink64 v5.x support Novell's 32-bit client for Windows NT?

Yes. However, connecting clients to the NetWare Duralink64 server requires the NDIS driver. *Do not* use an ADI driver. See the *User's Guide Windows NT Installation* section for details.

- How can I determine the status of a Failover group under Windows NT?

You can view the status of any Failover group using the status screen (Control Panel, Network Adapters, Status tab).

- Do the Duralink64 v5.x Failover drivers support AppleTalk under Windows NT?

No.

Duralink64 v5.x Windows 95, Windows 98, and Windows 2000 – General Questions

Windows 95

- How do I install Duralink64 v5.x software on my Windows 95 system?

First, you must determine which version of Windows 95 is installed on your system: OSR1 or OSR2. Right click on **My Computer**, and select **Properties**. You should see Windows 95 on the screen and 00.950 x under it (where the x represents A or B. The A represents OSR1. The B represents OSR2.

- Which Duralink64 software should I use with Windows 95 OSR1?

Use the software on the disk in the directory labeled Win95a (a:\win95a).

- Which Duralink64 software should I use with Windows 95 OSR2?

Use the software at the root directory on the disk (a:\).

- Does Duralink64 v5.x support Novell's 32-bit client for Windows 95?

Yes. However, connecting clients to the NetWare Duralink64 server requires the NDIS driver. *Do not* use an ADI driver. See the *User's Guide Windows 95 Installation* section for details.

Windows 98

- How do I install Duralink64 v5.x software on my Windows 98 system?

Follow the standard Windows 98 Hardware Installation procedure using the Have Disk option.

Duralink64 v5.x NetWare – General Questions

- I used Load Install to try to load my NIC and it's not working. What should I do?

For Stand-alone, Failover, or Port Aggregation drivers, use **setupsf** from the Duralink64 v5.x NetWare disk.

- What version of the service pack do I need for Duralink64 v5.x software?

Use SP6 and ODI 3.31 patches for NetWare 4.11 for all DuraLAN drivers. The DuraLAN drivers will not work unless you apply the patches to NetWare before installing the drivers.

- What should I do when upgrading from Duralink64 v5.x Stand-alone drivers to Duralink64 v5.x Failover drivers?

Use **setupsf** to remove existing stand-alone drivers from the system. Use **setupsf** from the Duralink64 v5.x NetWare disk to install the new failover drivers.

- It's not clear what should be done from the Failover Setup Menu. How do I configure the ports?

To install the Duralink64 v5.x Failover software on NetWare v4.11, v5.0, or v5.1, use **setupsf** from the Duralink64 v5.x NetWare disk. At the Main Menu, select **Failover**, then, **Configure Ports**, **Set Failover Pairs**, **Configure Protocols**, **Install Software** and then **Save** and **Exit**. Make sure you follow this sequence and end with Save and Exit. The Save and Exit function modifies the **autoexec.ncf** file so that the Failover software is loaded each time you boot the server.

- How do I install Duralink64 v5.x Failover or Port Aggregation if I currently have the Duralink64 v5.x Stand-alone drivers installed?

The **setupsf** file is used only when installing and uninstalling Duralink64 v5.x Failover or Port Aggregation software. The **configsf** file is also used after installation for changing the failover configuration.

- Does Duralink64 v5.x support Novell's 32-bit client for Windows 95, Windows 98, Windows 2000, or Windows NT?
Yes. However, connecting clients to the NetWare Duralink64 server requires the NDIS driver. *Do not* use an ODI (Open Data-Link Interface) driver. See the *User's Guide Windows 95, Windows 98, Windows 2000, or Windows NT Installation* sections for details.

Duralink64 SNMP Agents

Windows NT and NetWare SNMP agents are provided to support Failover and Port Aggregation capabilities. These agents handle standard port configurations, Failover pairs, and Port Aggregation. Use of the agents allow remote monitoring from any standard network management station with SNMP (version 1) support.

The following information is provided:

- **Information group**—containing card, port, and interface counts.
- **Interface statistics table**—listing characteristics and summary statistics for individual port interfaces, Failover groups, and multiple port load balancing groups.
- **Port statistics table**—listing all ports grouped by interface and providing characteristics and statistics for each individual port. Port 1 in any multiple group is always the port that is available to be bound to protocol stacks.
- **Card information table**—describing each Adaptec network card on the system.
- **Card port information table**—sorted by network card listing all ports and the interface to which they are assigned.
- **Trap definition**—for traps that are generated when the status of any port changes.

Monitoring the NICs by SNMP

The duralink.mib file must be compiled on the SNMP Management station to manage the NICs. This file is located on the Duralink64 for Windows disk in the **snmpmibs** directory. Please refer to the *Duralink Manager Server User's Guide*.

SNMP Support

The message **!SNMP service is not installed** will appear during the installation and configuration of NT if SNMP service is not installed. If SNMP functionality is not desired, ignore this message. If SNMP is desired, install SNMP Service using the Windows NT CD, then reinstall SP3.

The driver installation enables an SNMP agent to provide management information to the SNMP management station. The agent supports both the DuraLAN and older EMPCI NICs. However, if you install your EMPCI drivers after the DuraLAN installation, management information is restricted to the EMPCI configuration.

The **.mib** file used for your SNMP management console is located in the following directory: **a:\snmpmibs\duralink.mib**. After compiling this file on an SNMP management station, you will then receive traps or events relative to the DuraLAN network adapter.



Note: Duralink64 software does not support SNMP for Windows 2000.

D

The Diagnostics Utility

Your Adaptec DuraLAN NIC is supplied with a DOS Diagnostics utility that is found on the LAN and Duralink64 Failover Drivers NetWare disk. Use the Diagnostics utility to check the functionality of your DuraLAN NICs.

Running the Diagnostics

From the Hard Disk Drive

Use the following steps to run the Diagnostics utility from your hard disk drive:

- 1 Make sure `himem.sys` and `emm386.exe` are currently in `config.sys` and that `files=30` is present.

If they are not, add these lines to the top of the `config.sys` file:

```
device=c:\dos\himem.sys
device=c:\dos\emm386.exe /noems
files=30
```

Type the path to the DOS programs if it is not found in `c:\dos`.

- 2 Create a directory for the diagnostics on your hard disk drive.
- 3 Copy all files in this directory to the new diagnostics directory of the hard disk drive.
- 4 At the DOS prompt, type `go_diags`, and press **Enter**.



Note: The easiest way of testing a DuraLAN NIC is running the Selftest.

From the Floppy Disk Drive

To prepare a DOS diagnostics boot disk, use the following steps:

- 1 Create a bootable DOS disk.
- 2 Copy the DOS files `himem.sys` and `emm386.exe` to the disk.
- 3 Copy all the files in this directory to the root directory of the DOS boot disk.
- 4 Start the system from the floppy disk.
- 5 At the DOS prompt, type `go_diags`, and press **Enter**.



Note: The easiest way of testing a DuraLAN NIC is running the Selftest.

Diagnostic Tests

The following table lists the tests that can be run on the Adaptec DuraLAN Fast Ethernet NIC(s). The diagnostics commands are case sensitive and must be typed exactly as they appear in the table.

Command	Test
<code>selftest</code>	Verifies a variety of card functions. You should run this test first to isolate common errors.
<code>port X</code>	Specifies the port you want to test. If more than one DuraLAN NIC is installed, remove all cards and then test one card at a time.
<code>display</code>	Displays values of all chip registers.

Command	Test
loop	Performs multiple tests consecutively. At the last line before you run the tests, type end. For example: Loop>port 1 Loop>selftest Loop>port 2 Loop>selftest Loop>end
eeprom	Tests contents of serial eeprom and displays it on screen.
exit	Exits the Diagnostics utility.
hbi_slave	Tests slave accesses, checks serial eeprom, and checks register accesses to the chip.
hbi_dma	Checks DMA transfers to and from the board.
mac	Tests registers and various functions of Ethernet controller.
address_filter	Tests Ethernet packet filtering capabilities.
internal_10_mac	Tests internal loop-back at 10 Megabits/sec within the chip.
internal_100_mac	Test internal loop-back at 100 Megabits/sec within the chip.
internal_10_phy	Tests loop-back from the physical device at 10 Megabits/sec.
internal_100_phy	Tests loop-back from the physical device at 100 Megabits/sec.
external_10	This test requires a loop-back cable. It tests the loop-back from the cable at 10 Megabits/sec.
external_100	This test requires a loop-back cable. It tests the loop-back from the cable at 100 Megabits/sec.

Command	Test
autonegotiate <speed> (speed is one of five options)	Tests the speed the card negotiates. This test has five options: 0 – Tests for full autonegotiation (highest speed) 10 – Forces test at 10 Megabits/sec Half Duplex 20 – Forces test at 10 Megabits/sec Full Duplex 100 – Forces test at 100 Megabits/sec Half Duplex 200 – Forces test at 100 Megabits/sec Full Duplex Note: Requires a hub, switch, or loop-back cable. Also, autonegotiate defaults to 10 MB if the cable is not connected.
checksum	Tests the ability to calculate TCP/IP checksum.
statistics	Verifies statistics gathering features of the chip.
echoer #/sender # (where # is the number of packets to send)	This test requires two computers on a private network: one as the sender, and the other as the echoer. This test is useful for testing the network and verifying that data is being passed between the echoer and the sender.
pause	Enter the echoer command first, and then enter the sender command in the sender system. (<i>This command sequence is critical!</i>) The two commands work in tandem. The echoer system displays the number of packets received and then exits. The sender system displays a summary of packets transmitted and received, corrupted packets, number of collisions, and lost packets.
mem (default)	Tests the flow controller features of the chip.
io	Slave access set to Memory Mode.
timer	Slave access set to I/O Mode.
power-management	Tests the interrupt delay time feature of the Ethernet controller.
mod (mac offset data)	Tests the power-down features of the Ethernet controller.
help or ?	Allows the modification of the Ethernet controller registers.
	Displays all diagnostics commands.

Index

A

Adaptec customer support i-iii
adding or removing ports 8-21
ANA-6x011 1-6, 1-7
ANA-6x022 1-6, 1-7
ANA-6x044 1-6, 1-7, 2-4
AppleTalk compatibility B-6, B-11
assigning protocols
 general 11-12
 IP/IPX 10-9, 10-11
assigning TCP/IP address
 Windows 2000 8-13
 Windows NT 3.51/4.0 8-16

B

bandwidth B-8
BIOS setup B-4

C

cable specification
 100BaseFX A-1
 100BaseTX A-1
cables
 100BaseTX A-3
 data via LED display A-5
 general requirements A-3
 loop-back A-4
 pin-out and color requirements
 A-4

straight through A-3
twisted pair A-3
chips, PCI-to-PCI bridge B-4
clients
 connecting to the Failover server
 12-6
 connecting to the Port Aggregation server 12-7
configuration
 copying 10-13
 saving 10-13
configuring ports
 general configuration 6-2, 11-4
 NetWare with Duralink64 9-5,
 10-4
 verification 11-15
 Windows 2000 6-2 to 6-4, 6-6, 7-2,
 8-18
 Windows 95 6-6
 Windows 98 6-6
 Windows NT 8-3
 Windows NT 3.5.1 6-4
 Windows NT 3.51/4.0 7-2, 8-2,
 8-19
 Windows NT 4.0 6-4
 Windows NT with Duralink64
 6-4, 7-2
configuring protocols
 BIOS Setup B-4
 NetWare with Duralink64 software 10-9

configuring the Failover pair
 general 7-4 to 7-9
 NetWare 10-6
 Windows 2000 7-4
 Windows NT 3.51 7-8
 Windows NT 4.0 7-6
connecting clients to server 12-4
connection types A-2
copying configuration 9-11
copying the configuration 10-13,
 11-16
creating groups
 Fast EtherChannel 8-10
 Fast EtherChannel for NetWare
 11-9
 Port Aggregation 8-4 to 8-7, 11-6
customer support i-iii

D

diagnostic LEDs
 details A-5
 functions A-6
diagnostics
 LEDs A-5
 loop-back cables A-4
 running from the floppy disk
 drive D-2
 running from the hard disk drive
 D-1
 tests D-2
DOS 12-2
driver configuration
 standard for Windows 6-4
drivers
 conditions for removal B-8
 modifying 10-16, 11-18
 removing 5-16 to 5-18, 10-16
 stand-alone B-5
 uninstalling 10-16

duo NICs 1-5, 1-9
DuraLAN driver installation
 selecting the appropriate driver
 3-7 to 3-8
DuraLAN NIC
 about 3-3
 installation 3-4, 5-2
 models 1-4 to 1-6
Duralink64 driver installation
 Windows 2000 5-6
 Windows 95 5-12
 Windows 95 OSR1 5-13
 Windows 95 OSR2 5-12
 Windows 98 5-11
 Windows NT 3.51 5-9 to 5-10
 Windows NT 4.0 5-7 to 5-8
Duralink64 Failover
 software description B-7
 support 1-6, 4-2 to 4-5
Duralink64 general compatibility
 B-5
Duralink64 GUI
 Windows NT 6-4, 7-2, 8-3
Duralink64 Port Aggregation
 benefits B-8
 description 1-7, 2-1 to 2-4, B-8
 environments B-8
 Failover function B-9
 function B-9
 network switches B-9
 NIC support B-9
 software B-5
Duralink64 software installation
 compatibility B-7
 Failover protocols B-7
 NetWare Client 12-1
 Windows 95 B-12
 Windows 95 OSR1 B-12
 Windows 95 OSR2 B-12
 Windows NT 5-1, 7-1

E

- element descriptions
 - F keys 10-15
 - informational screen 10-15
- Event Viewer dialog box 7-10

F

- F keys 10-15
- Failover driver installation
 - NetWare 10-3
- Failover pair
 - configuring in Windows 2000 7-4
 - configuring in Windows NT 3.51 7-8
 - configuring in Windows NT 4.0 7-6
 - number per group B-7
- Failover, description B-8
- Fast EtherChannel
 - creating groups 8-10
- Fast Ethernet 1-4, 2-4
- fault tolerance 2-2, B-8, B-9
- FEC (Fast EtherChannel)
 - creating groups 8-10
 - network configurations 2-2
- FEC for NetWare 11-9
- full-duplex Ethernet 2-2
- Full-Duplex implementation A-2

G

- groups
 - adding/removing ports 8-19, 8-21
- Fast EtherChannel 8-8, 8-10 to 8-12
 - modifying 8-18
- Port Aggregation 8-4 to 8-7, 11-6
- ports B-8

H

- hardware
 - requirements 1-3
 - tips B-2
- HotPlug, Windows 2000 5-3
- hubs
 - dual 4-3 to 4-5
 - Duralink64 Failover compatibility B-7
 - single 4-2

I

- IEEE (Institute of Electrical and Electronics Engineers) 1-4
- implementing Full Duplex A-2
- installation
 - Duralink64 driver during NetWare 5.0 OS installation 9-3
 - Duralink64 driver during NetWare 5.1 OS installation 9-3
 - Failover driver 10-3
 - NetWare Port Aggregation driver 11-3
 - NetWare standard driver 9-4
 - NICs 3-1
 - Novell 32-bit client for DOS 12-2
 - Novell 32-bit client for Windows 12-5
 - tips 5-15, 9-2
 - installing HotPlug 5-3
- IPX (Internet Packet EXchange)
 - address 11-12
 - protocols 9-6
- IPX, compatible protocol B-6, B-7
- IRQ (Interrupt Request) 1-3

L

- LEDs
 - See* diagnostic LEDs
- legacy Adaptec DEC-based NIC compatibility B-6

M

modifying drivers
 NetWare 10-16
modifying groups 8-18
monitoring Failover pairs in Windows NT 3.51/4.0 7-10
MSLs (Mirrored Server Link) 2-2

N

NetBEUI, compatible protocol B-6, B-7
NetWare
 connecting clients to Failover 12-6
 connecting clients to Port Aggregation 12-7
 driver configuration modification 10-16
 Duralink64 software installation 11-1
 F keys 10-15
 Failover driver installation 10-3
 fault tolerance 2-2
 LAN driver installation 9-1
 patches B-13
 Port Aggregation driver 11-3
 standard driver configuration 9-4
NetWare 5.0, 5.1 9-3
NetWare Client

 Duralink64 software installation 12-1
network cable connection 3-6
network configuration
 description 4-1
 dual hubs 4-3
 dual hubs with 4-port NIC 4-5
 dual hubs with routers 4-4
 dual hubs with switch 4-4
Port Aggregation described 2-4
single hub 4-2
traditional 2-2

Windows NT utility 8-18
NIC drivers
 DuraLAN standard driver 3-3, 3-8
 Duralink64 Failover 3-8
 Duralink64 Port Aggregation 3-8
NICs (network interface cards)
 duo port 1-5, 1-9
 quad port 1-5
 single port, 64 bit 1-4
Novell 1-6, 1-7
Novell 32-bit client 12-2, 12-5, B-11
 installation 12-5
 Windows 2000 B-14
 Windows 95 B-12
 Windows 98 B-14

O

operating system compatibility with Duralink64 B-10

P

performance monitor
 Windows 2000 8-30
 Windows NT 8-30
Port Aggregation
 comparisons B-5
 creating groups for Windows 2000 8-4
 creating groups for Windows NT 4.0 8-6
 NetWare 11-3
 network configurations 2-2
port configuration
 reconfiguration B-13
 Windows 2000 7-2
 Windows NT 3.51/4.0 7-2
ports
 adding/removing 8-19, 8-21
 aggregation B-9
 configuring 9-5, 11-4, B-7

failure backup B-9
identification 5-2
protocols
 assigning 9-6, 9-8, 10-9
 compatibility with Duralink64
 B-10
 IP 9-6, 9-8
 IPX 9-6, 9-8

Q

quartet NICs 1-5, 1-9

R

removing drivers 5-16 to 5-18, 9-12, 10-16, 11-19
 Windows 2000 5-16
 Windows 95/98 5-18
 Windows NT 3.51 5-17
 Windows NT 4.0 5-16

removing HotPlug 5-3

removing NICs, Windows 95 5-13

renaming groups 8-19

requirements
 hardware 1-3
 software 1-3

restarting server 9-10

Routing, functionality B-6

S

saving configuration
 general 9-11
 NetWare 10-13

saving the configuration 10-13, 11-16

scalability B-8

Selftest, DuraLAN NIC running in D-2

server, restarting 9-10

service packs B-11

SNMP (Simple Network Management Protocol)

manager 7-10
support C-2

software installation
 NetWare 11-1
 Windows NT 8-1

software requirements 1-3

SPX, compatible protocol B-6, B-7

standard driver configuration
 NetWare 9-4
 Windows NT 4.0/3.51 6-4

status reporting 10-14

status reports B-11

status tab 8-25, 8-28

straight-through cables A-3

straight-through, twisted pair cables A-3

support, customer i-iii

switches
 Duralink64 Failover compatibility B-7
 Duralink64 Port Aggregation connections B-9

switches, Duralink64 B-9

system requirements 1-3, 1-9

system status
 checking in Windows 2000 8-24
 checking in Windows NT 8-27
 data 11-17
 NetWare 10-14
 viewing 10-14, 11-17

T

TCP/IP address 8-13 to 8-17
 protocol B-6, B-7
 setting in NetWare 11-12
 setting in Windows 2000 8-13
 setting in Windows NT 3.51/4.0
 8-16

technical support i-iii

Technical Support Identification (TSID) number i-iii

tests, diagnostics D-2

time intervals 11-18

troubleshooting

 isolating faulty hardware B-2

 solutions B-3

 tips B-1

TSID Number

See Technical Support Identification Number

typographic conventions 1-9

U

uninstalling drivers 9-12, 10-16,
 11-19

utilities, diagnostics D-1

V

verifying ports 11-15

viewing

 configuration 9-9, 10-12

 configuration screen 11-15

 system status 10-14, 11-17

VLANs (Virtual Local Area Networks), support B-10

W

Windows 2000 5-6

 Failover pair 7-5

 GUI 5-1, 8-4

 performance monitor 8-30

Windows 95

 Duralink64 driver installation
 5-12

Windows 95 OSR1

 Duralink64 driver installation
 5-13

Windows 95 OSR2

 Duralink64 driver installation
 5-12

Windows 98

 Duralink64 driver installation
 5-11

Windows NT

 Duralink64 Failover support 1-6,
 1-7

 Duralink64 software installation
 5-1, 7-1

 performance monitor 8-30

 server clustering 2-3

 software installation 8-1

Windows NT 3.51

 Duralink64 driver installation
 5-9 to 5-10

Windows NT 4.0

 Duralink64 driver installation
 5-7 to 5-8

Adaptec, Inc.
691 South Milpitas Boulevard
Milpitas, CA 95035

© 2001 Adaptec, Inc.
All rights reserved. Adaptec and the Adaptec logo
are trademarks of Adaptec, Inc. which may be
registered in some jurisdictions.

P/N: 512923-06, Ver. AA DR 07/01