



Schaltung R.P.G. W 18 N

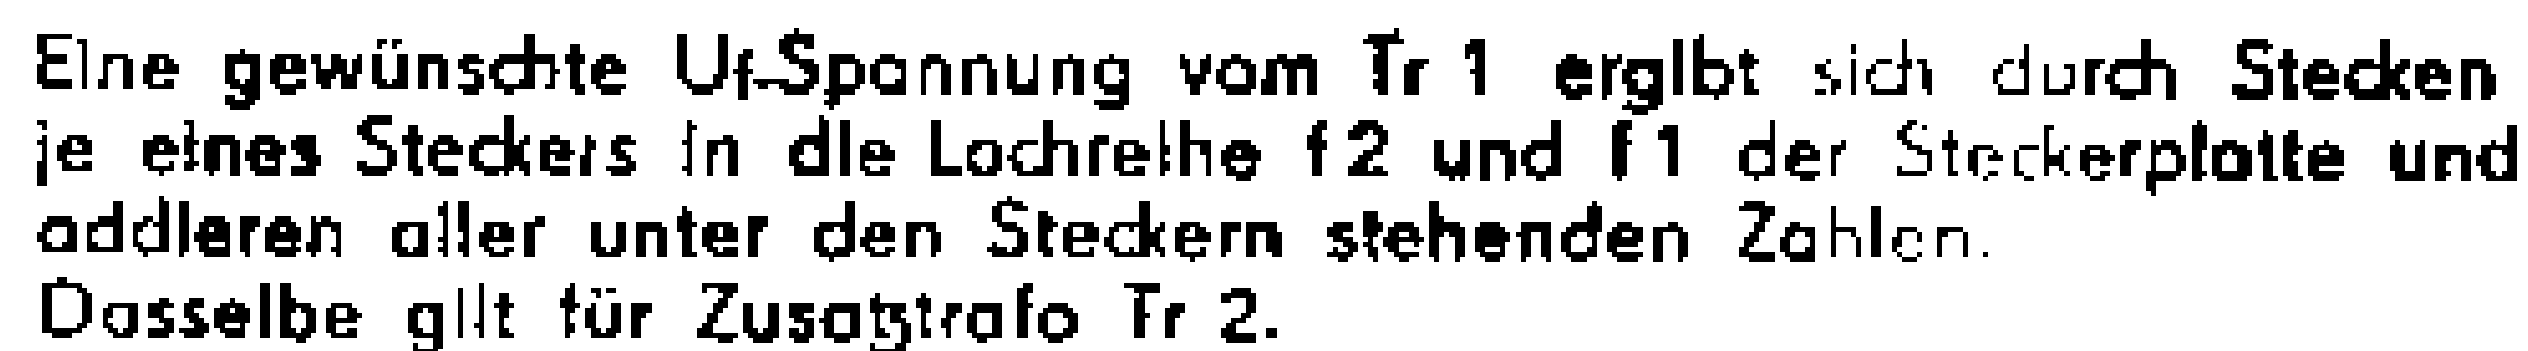

Schaltbild des W 18 (8. 1950)

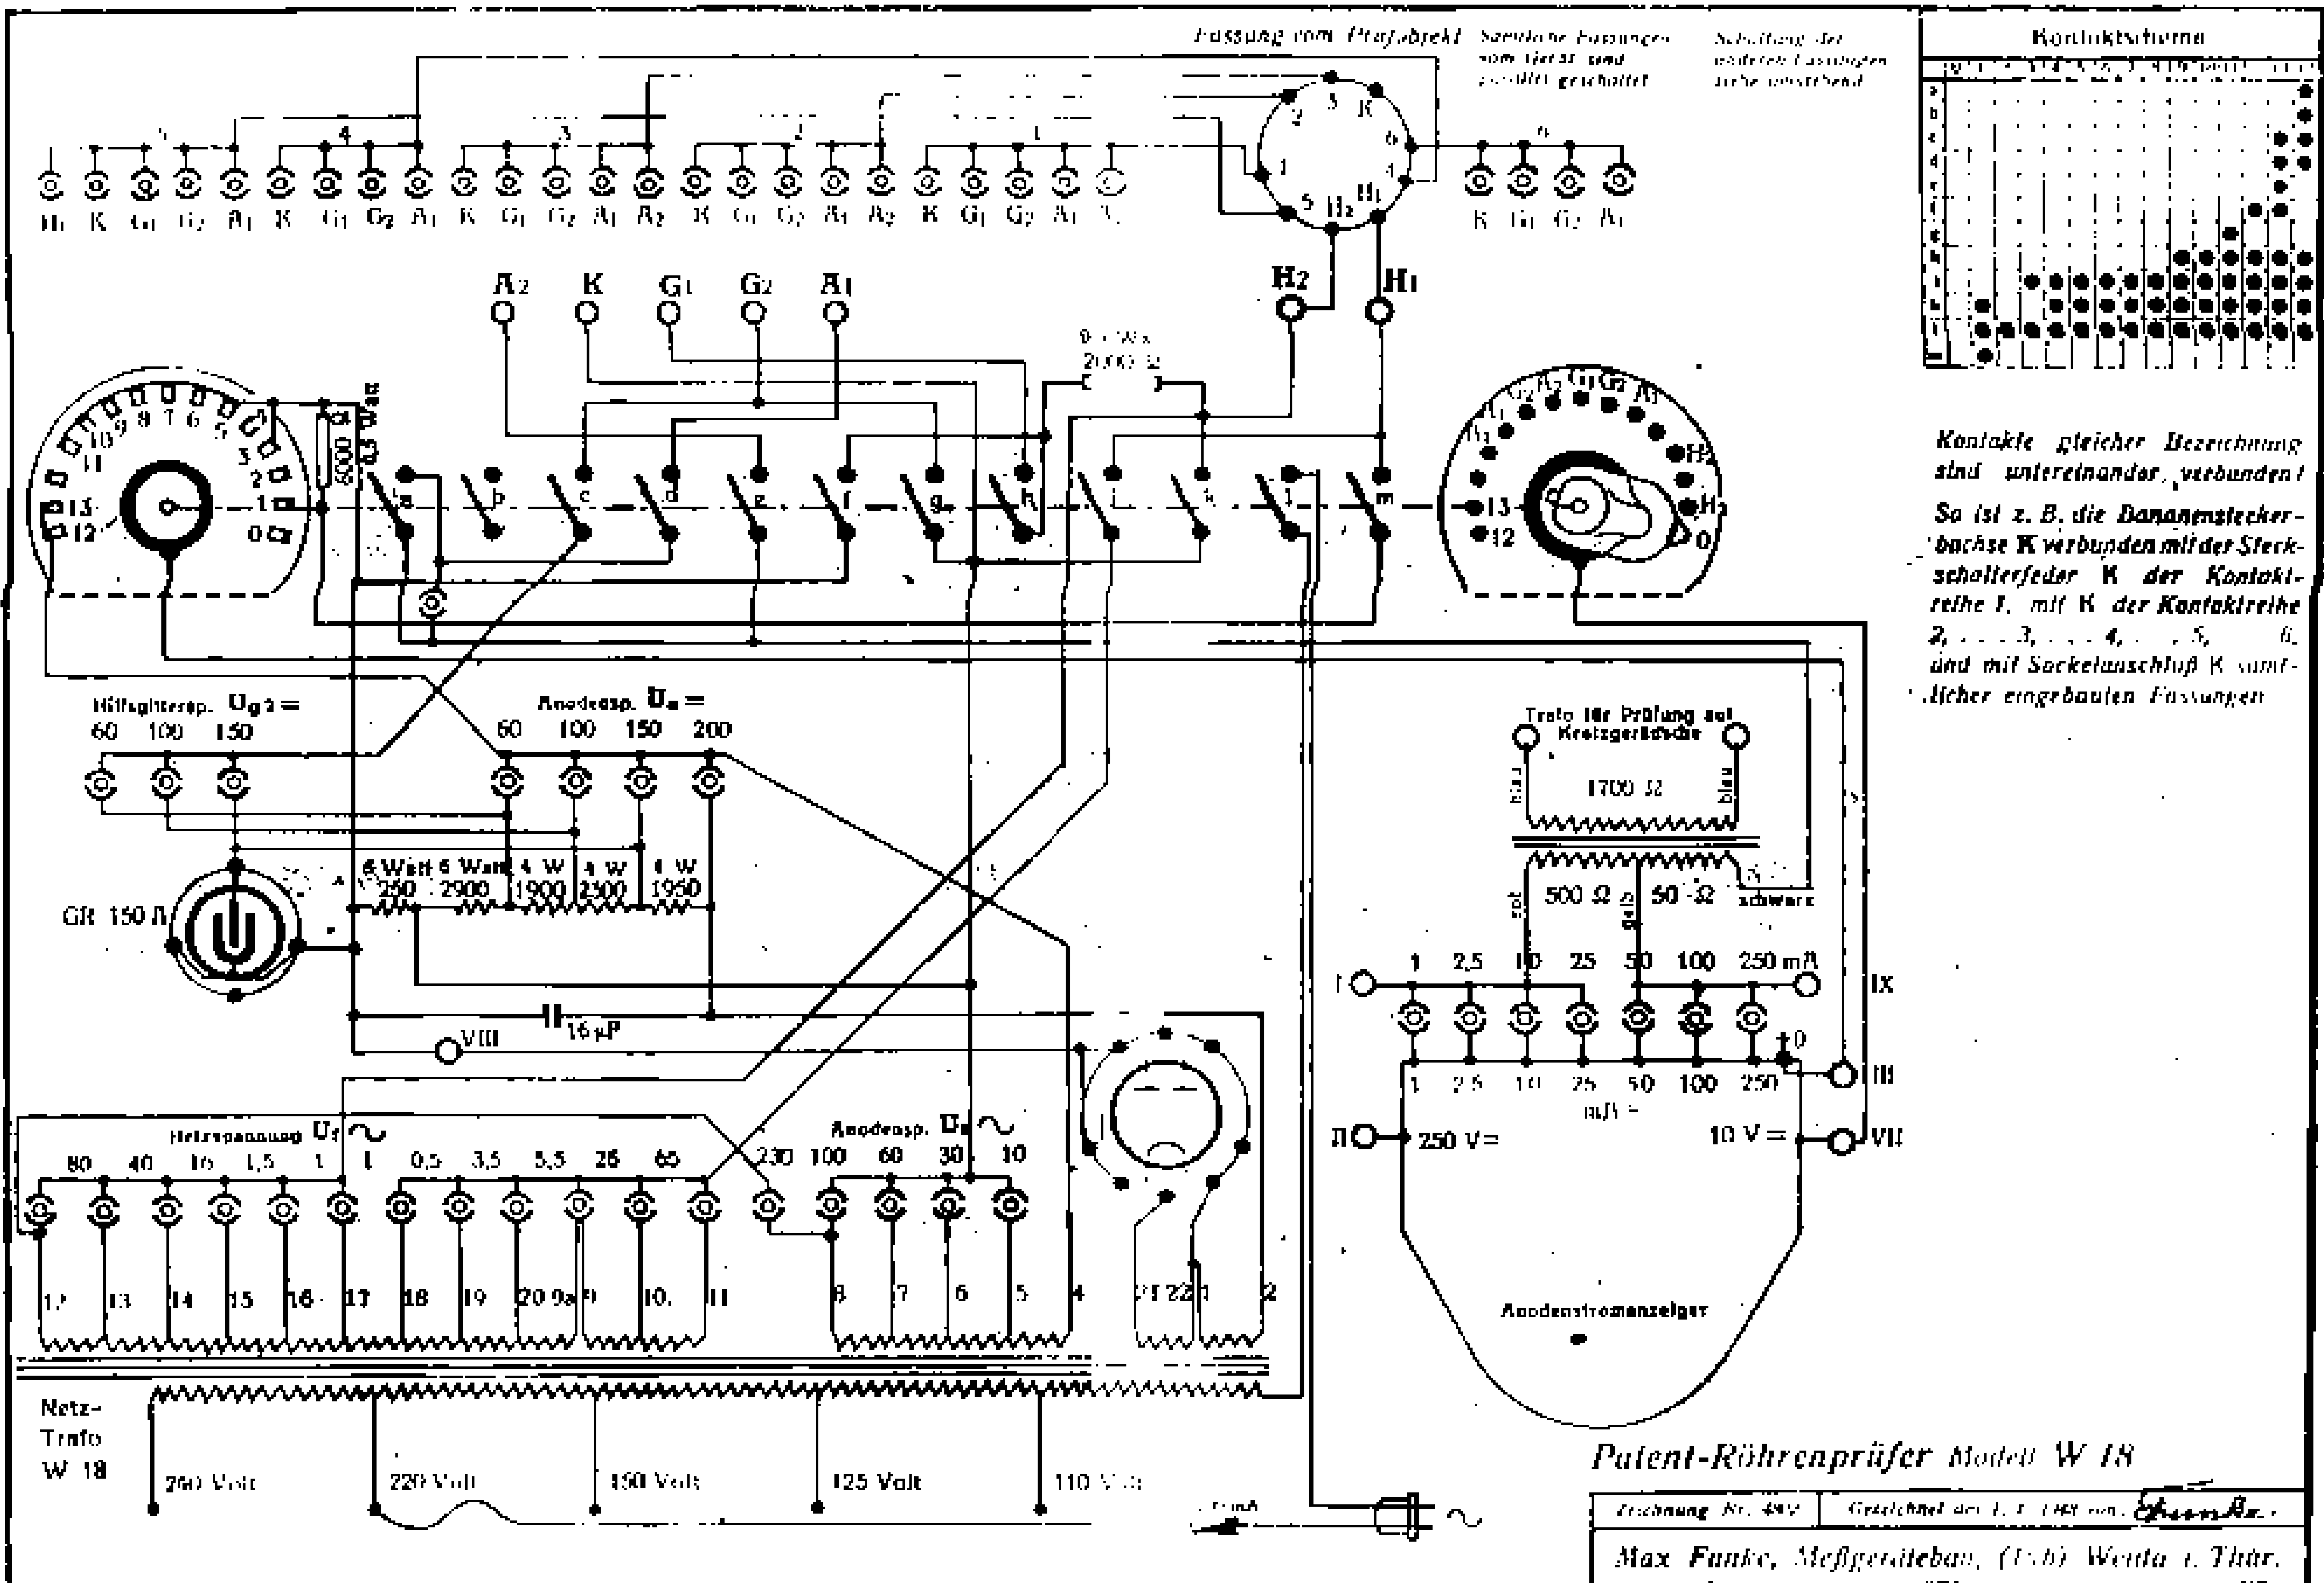

PIN 1					PIN 2					PIN 4					PIN 5				
A2	A1	G2	G1	K	A2	A1	G2	G1	K	A2	A1	G2	G1	K	A1	G2	G1	K	H1
●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20 21 22 23 24
<u>I</u>	<u>II</u>	<u>III</u>	<u>IV</u>		H1	A1							K	A2	H2	<u>V</u>	<u>VI</u>	<u>VII</u>	<u>VIII</u>
●	●	●	●		●	●			●				●	●	●	●	●	●	●
		<u>V</u>			<u>U</u>		<u>W</u>												
		60			30		45								10				1
●	●	●			●	●	●	●		●	●	●	●				●	●	●
25	26	27			28	29	30			31	32	33	34	35	36	37	38	39	40
															41	42			43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60

● Universal-Karte Funke W19 W19/S ●

U _A ... V =						A	PIN 7				PIN 6				J _A ... mA									
40	30	60	100	150	200	II	A1	G2	G1	K	A1	G2	G1	K	250	100	50	25	10	5	2,5	1	LOCK	
●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
49	50	51	52	53	54	55	56	57	58				62	63	64	65	66	67	68	69	70	71	72	

