

ALS-8 Command Summary

by Paul Schaper

MEMORY

ENTR addr	Insert values into memory. Values accepted until terminated by a slash (/) or an illegal value. Value followed by colon (:) adjusts current address pointer.
DUMP addr1 (addr2)	Display contents of memory. Only one location displayed if second address omitted or less than first address.

FILE

FILE (/name/ (addr))	
FILE	Display name and addresses of current file.
FILE /name/	Make an already existing file current.
FILE /name/ addr	Create a new file at address. Make it current.
FILE /name/ 0	Delete existing file. There will be no current file when this command is finished.
FILES	Display list of existing files and addresses.
FCHK	Verify the internal structure of current file and update the ending address.
FMOV addr	Move current file to address. FCHK is performed after moving to verify move. The address cannot be 0 and you cannot move an empty file.
FIND	Find all occurrences of string in current file. Type string after colon prompt.

EDIT

DELT line1 (line2)	Delete a line or lines from current file.
EDIT	Enter TXT-2 Extension Package. Press ctrl-F to exit.
LIST (line1 (line2))	Display current file with line numbers.
TEXT (line1 (line2))	Display current file without line numbers.
RNUM line# (incr)	Renumbers the current file so that its first line is line# with an increment of incr. If increment is unspecified, it is 5. The largest

increment is 25. The increment is reduced to 1 after the line numbers reach 9000. FCHK is performed after renumbering.

SYSTEM

IODR (/name/ (in (out)))

IODR	List contents of I/O Drive Table.
IODR /name/	Switch I/O driver for next command only.
IODR /name/ in out	Enter I/O driver into I/O Driver Table.
IODR /name/ 0	Delete I/O driver from I/O Driver Table.

SWCH	When used after IODR /name/, switch is permanent.
-------------	---

MODE base	All addresses and memory values entered or displayed are in octal (8) or hexadecimal (16). Initially set to 16.
------------------	---

ASSI(x) orig (load)	Assemble reading source from the current input driver with output sent to the current output driver. If load address is omitted, origin will be used.
ASSI orig (load)	Produces full listing with errors.
ASSIE orig (load)	Lists only those lines with errors.
ASSIS orig (load)	Produces full listing with errors and assembler's symbol table.
ASSIX orig (load)	Produces full listing with errors and assembler's symbol table with cross reference.

ASSM(x) orig (load)	Assemble from current file with output sent to the current output driver. If load address is omitted, origin will be used.
ASSM orig (load)	Produces full listing with errors.
ASSME orig (load)	Lists only those lines with errors.
ASSMS orig (load)	Produces full listing with errors and assembler's symbol table.
ASSMX orig (load)	Produces full listing with errors and assembler's symbol table with cross reference.

EXEC addr	Perform a subroutine call to address.
------------------	---------------------------------------

SIMU(x)	Enter Simulator Extension Package. Type X to exit.
SIMU	Enter Simulator Extension Package clearing I/O port definitions.
SIMUS	Reenter Simulator Extension Package preserving I/O port definitions.

AUTO (num)	Enter text into the current file. If num is omitted, ALS-8 starts with line one with increment one. Num can be from 0 to 7 with no significance placed on what the value is. If num specified, ALS-8 starts with line number one greater than last line in current file with increment one. Press ESC to exit.
-------------------	--

SYML(x /sname/ (num))	
------------------------------	--

SYML	Display contents of System Symbol Table. The end address of the table is printed following the list of names and addresses.
SYMLE /sname/ num	Enter a name and value into System Symbol Table.
SYMLD /sname/	Delete a name and value from System Symbol Table.
STAB addr	Set start of Assembler System Symbol Table. Must be set before first assembly.
CUST(x /name/ (addr))	
CUST	Print contents of Custom Command Table.
CUSTE /name/ addr	Create a new Custom Command.
CUSTD /name/	Delete a Custom Command.
TERM width	Set display/input width. Initially set to 80. Maximum is 119.
FORM	Specifies printed listing of assembler source or files are to be formatted. ALS-8 is initialized to the non-formatted state.
NFOR	Specifies printed listing of assembler source or files are not to be formatted. ALS-8 is initialized to the non-formatted state.
ESET addr	EDIT uses a parameter to limit the maximum address the file may reach, but no corresponding command has been provided. Enter the command: CUSTE /ESET/ FFF3 After this the command ESET, followed by an address, will set the parameter to the value of the address given.
VDM driver	TXT-2 includes a driver to allow ALS-8 to use the VDM as an output device. For use as a standby driver, the following command is recommended: IODR /VDM/ input address FE77 The driver may also be made the SYSTEM DRIVER by using the following command: IODR /SYSIO/ 0 FE77
EXIT	Enter the following command to provide a convenient way of returning to Solos: CUSTE /EXIT/ C004