



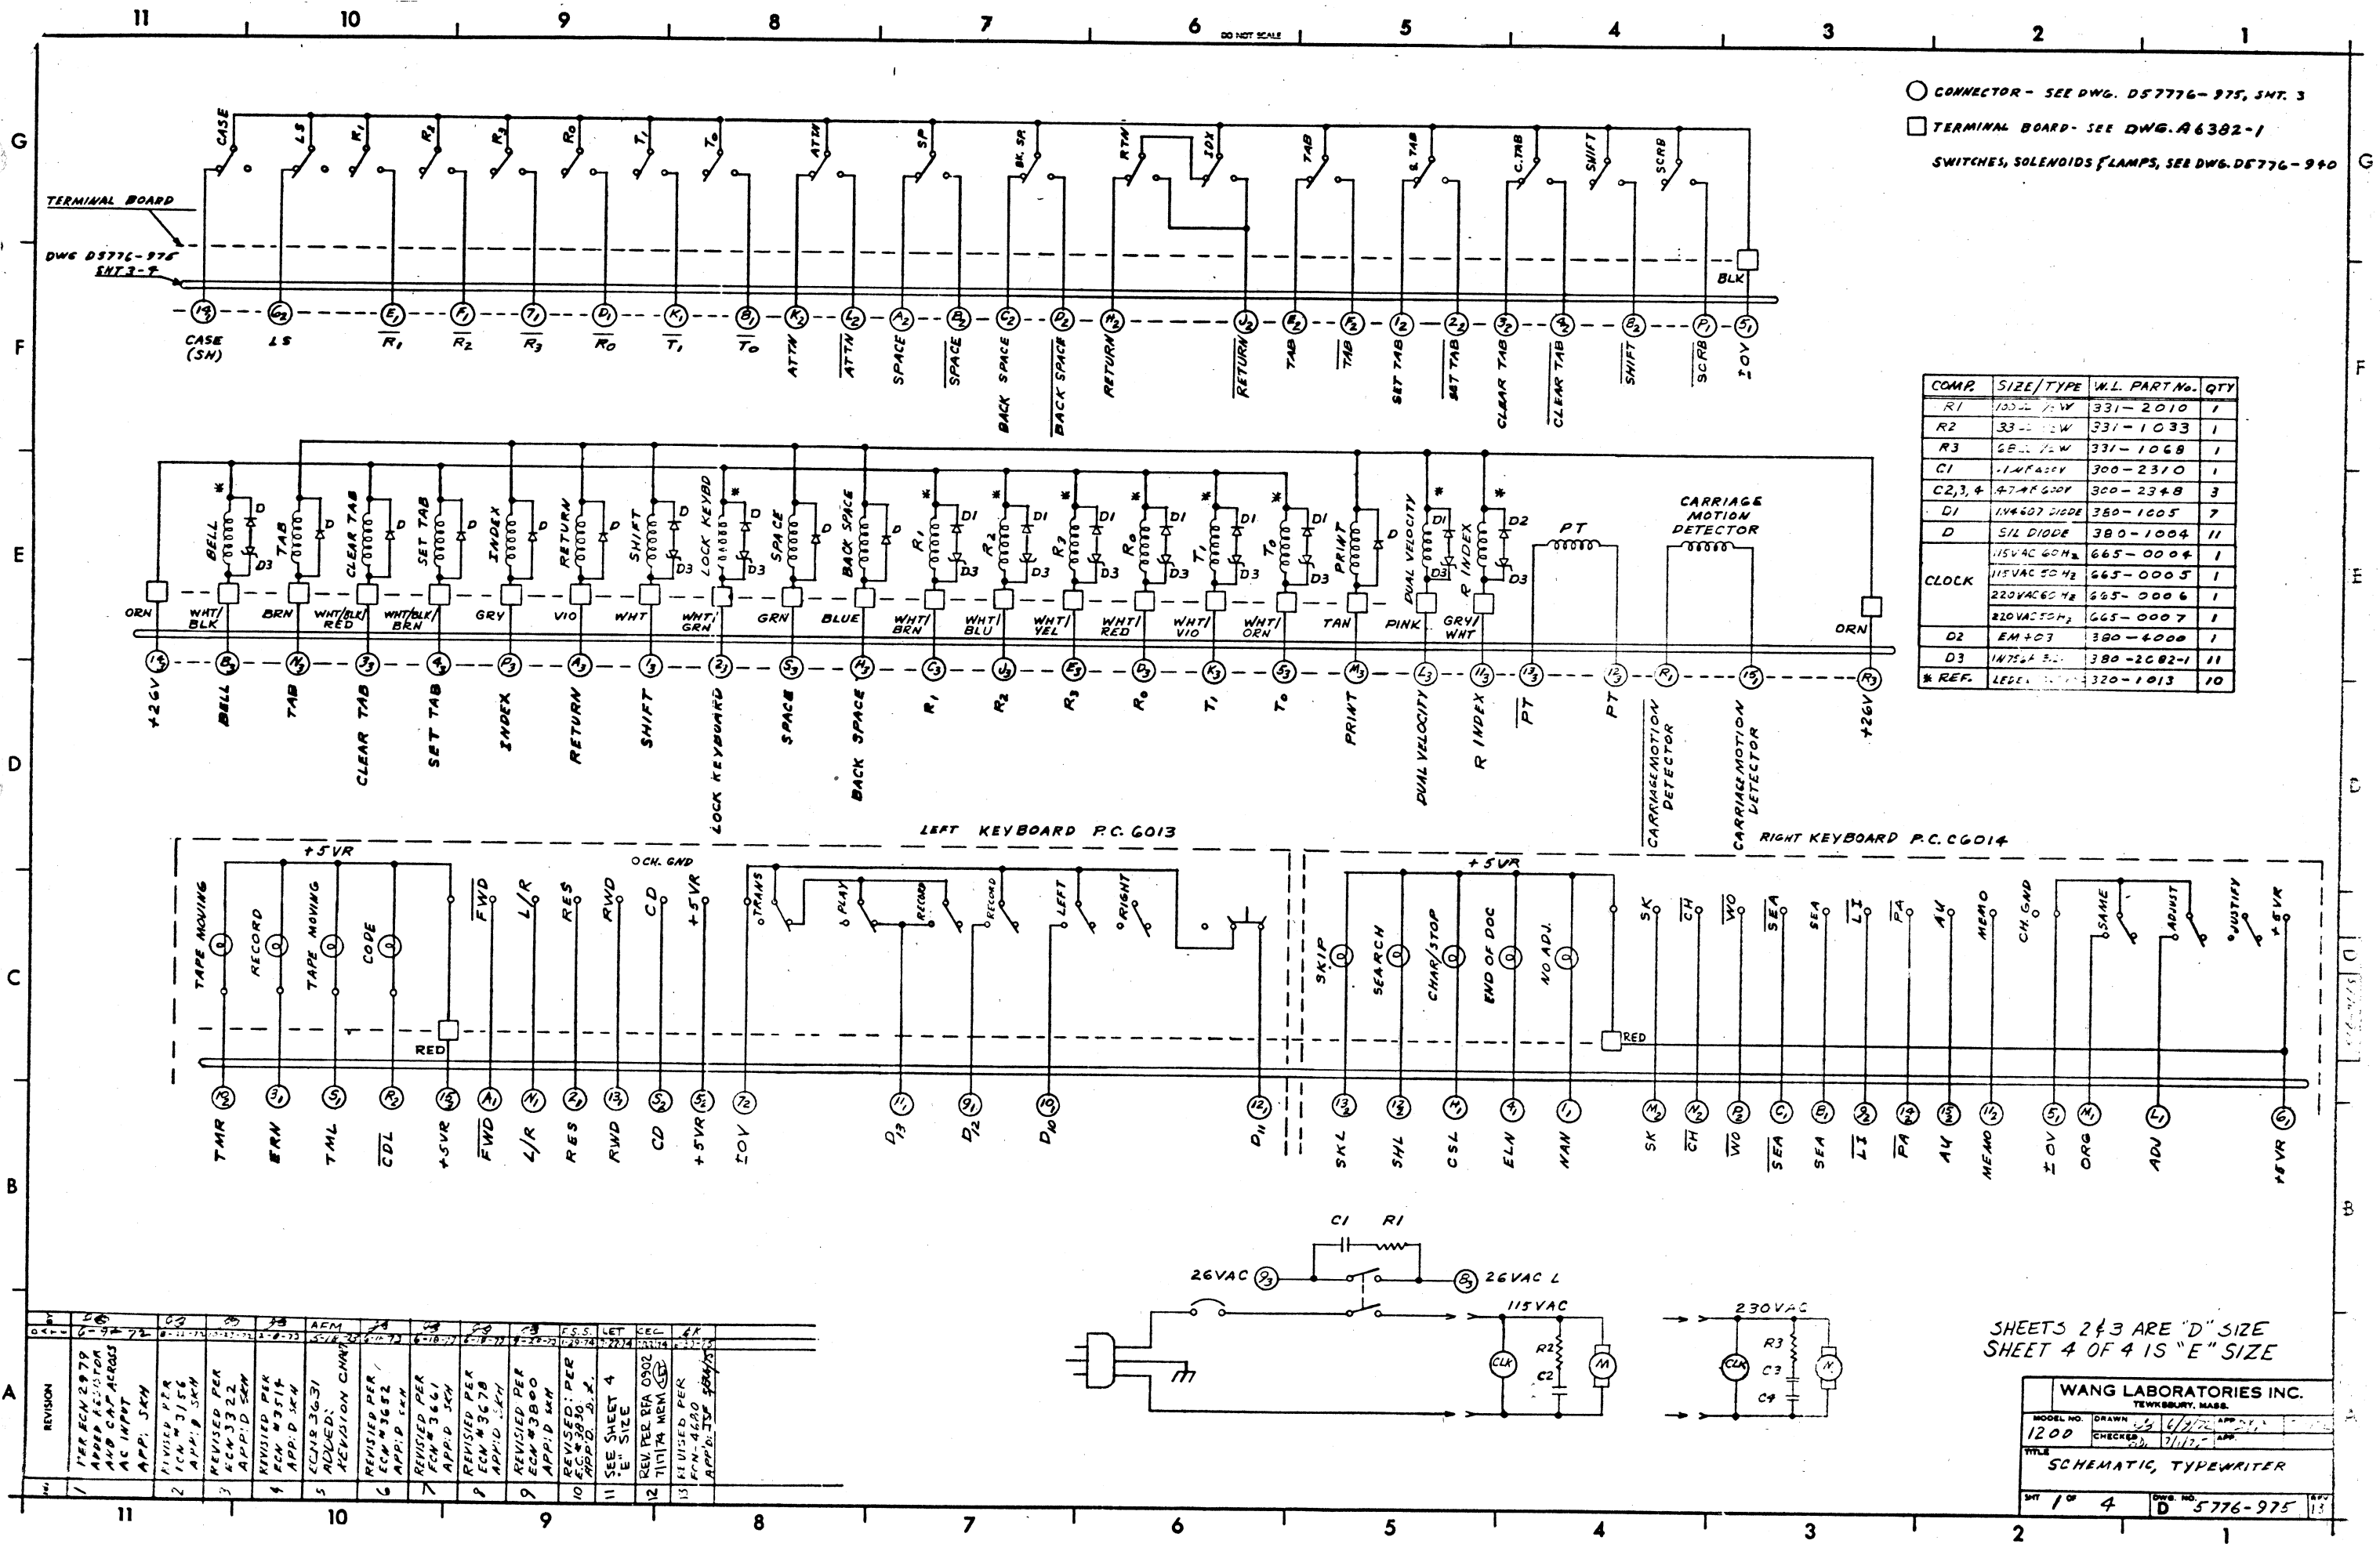

○ CONNECTOR - SEE DWG. D5776-975, SMT. 3
□ TERMINAL BOARD - SEE DWG. A6382-1
SWITCHES, SOLENOIDS, LAMPS, SEE DWG. D5776-990

COMP.	SIZE/TYPER	W.L. PART No.	QTY
R1	100Ω 1/2W	331-2010	1
R2	33Ω 1/2W	331-1033	1
R3	68Ω 1/2W	331-1068	1
C1	1μF 450V	300-2310	1
C2,3,4	47μF 630V	300-2348	3
D1	1N4607 DIODE	380-1005	7
D	SIL DIODE	380-1004	11
CLOCK	115VAC 60Hz	665-0004	1
	115VAC 50Hz	665-0005	1
	220VAC 60Hz	665-0006	1
	220VAC 50Hz	665-0007	1
D2	EM-03	380-4000	1
D3	1N754 3.0	380-2082-1	11
* REF.	LEDEL	320-1013	10

REVISION	DATE	BY	CHKD	DESCRIPTION
1	1-29-79	ECN 2979		APPROX. POSITION AND CAP. ACROSS AC INPUT
2	6-11-79	ECN 3031		APPROX. SKN
3	6-11-79	ECN 3032		APPROX. SKN
4	6-11-79	ECN 3033		APPROX. SKN
5	6-11-79	ECN 3034		APPROX. SKN
6	6-11-79	ECN 3035		APPROX. SKN
7	6-11-79	ECN 3036		APPROX. SKN
8	6-11-79	ECN 3037		APPROX. SKN
9	6-11-79	ECN 3038		APPROX. SKN
10	6-11-79	ECN 3039		APPROX. SKN
11	6-11-79	ECN 3040		APPROX. SKN
12	6-11-79	ECN 3041		APPROX. SKN
13	6-11-79	ECN 3042		APPROX. SKN

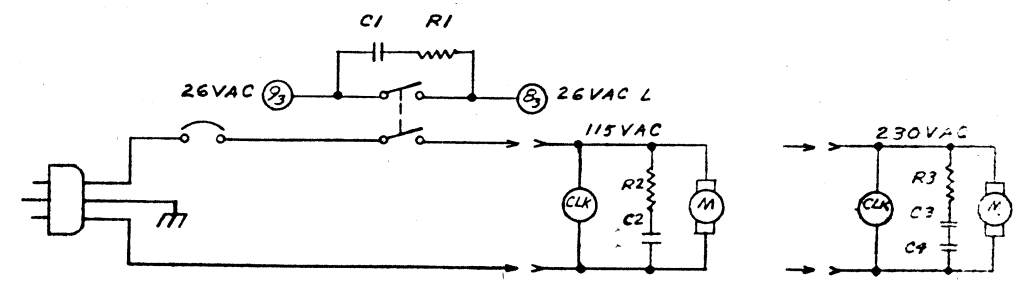


SHEETS 2 & 3 ARE "D" SIZE
SHEET 4 OF 4 IS "E" SIZE


WANG LABORATORIES INC.			
TEWKSBURY, MASS.			
MODEL NO.	DRAWN	DATE	APP.
1200	6/1/79	6/1/79	APP.
CHECKED	DATE	DATE	DATE
DATE	DATE	DATE	DATE
TITLE			
SCHEMATIC, TYPEWRITER			
SHT	1 OF 4	DWG. NO.	D 5776-975

G
F
E
D
C
B
A

CONN. 3						CONN. 2						CONN. 1					
SIGNAL	WIRE COLOR OR NUMBER	6259 PIN NO.	WIRE SIZE	W.L. PART NO.	LENGTH	SIGNAL	WIRE COLOR OR NUMBER	6259 PIN NO.	WIRE SIZE	W.L. PART NO.	LENGTH	SIGNAL	WIRE COLOR OR NUMBER	6259 PIN NO.	WIRE SIZE	W.L. PART NO.	LENGTH
SPT ₅	GREEN	5	#24	600-2005	5 1/2'	AH	R.K.B. CABLE-6	15	—	—	—	MD	RIGHT COAX-CLR	15	—	—	—
+2GV	ORANGE	14	#24	600-2003	5 1/2'	CD	L.K.B. CABLE-5	5	—	—	—	TML	VIO/ORN	5	#24	600-2073	8 1/2'
+2GV	ORANGE	R	#24	600-2003	5 1/2'	FA	R.K.B. CABLE-5	14	—	—	—	SH	MAIN CABLE-24	14	—	—	—
PT	LEFT COAX-BLK	13	—	—	—	CDL	VIO/YEL	R	#24	600-2074	8 1/2'	MD	RIGHT COAX-BLK	R	—	—	—
INDEX ₅	GRAY	P	#24	600-2008	5 1/2'	SKL	GRY/BRN	13	#24	600-2081	7 1/2'	RWD	L.K.B. CABLE-8	13	—	—	—
PT	LEFT COAX-CLR	12	—	—	—	WO	R.K.B. CABLE-11	P	—	—	—	SCR _B	MAIN CABLE-6	P	—	—	—
TAB ₅	BROWN	N	#24	600-2001	5 1/2'	SHL	GRY/GRN	12	#24	600-2085	7 1/2'	D11	L.K.B. CABLE-12	12	—	—	—
IS	GRY/WHT	11	#22	600-1098	5 1/2'	CH	R.K.B. CABLE-9	N	—	—	—	L/R	L.K.B. CABLE-7	N	—	—	—
PRINT ₅	TAN	M	#24	600-2011	5 1/2'	MEMO	R.K.B. CABLE-8	11	—	—	—	D13	L.K.B. CABLE-11	11	—	—	—
±0V	LEFT COAX-SHLD	10	—	—	—	SK	R.K.B. CABLE-13	M	—	—	—	ORG	R.K.B. CABLE-14	M	—	—	—
DVS	PINK	L	#24	600-2022	5 1/2'	TMR	VIO/RED	10	#24	600-2072	8 1/2'	D10	L.K.B. CABLE-9	10	—	—	—
2GVAC	YELLOW	9	#18	600-0004	5 1/2'	ATTN	MAIN CABLE-21	L	—	—	—	ADJ	R.K.B. CABLE-15	L	—	—	—
To15	WHT/VIO	K	#24	600-2097	5 1/2'	LT	R.K.B. CABLE-7	9	—	—	—	D12	L.K.B. CABLE-10	9	—	—	—
2GVAC	YELLOW	B	#18	600-0004	5 1/2'	ATTN	MAIN CABLE-22	K	—	—	—	T12	MAIN CABLE-9	K	—	—	—
Ro25	WHT/BLU	J	#24	600-2096	5 1/2'	SHP	MAIN CABLE-5	B	—	—	—	To2	MAIN CABLE-12	B	—	—	—
—	—	7	—	—	—	CR/LFI	MAIN CABLE-19	J	—	—	—	—	—	J	—	—	—
BS ₅	BLUE	H	#24	600-2006	5 1/2'	±0V	L.K.B. CABLE-12	7	—	—	—	R32	MAIN CABLE-8	7	—	—	—
—	—	6	—	—	—	CR/LFI	MAIN CABLE-20	H	—	—	—	CSL	GRY/RED	H	#24	600-2082	7 1/2'
CH GND	GRN/YEL	F	#18	600-0054	5 1/2'	LIS	MAIN CABLE-23	6	—	—	—	+5VR	R.K.B. CABLE-122	6	—	—	—
To05	WHT/ORN	5	#24	600-2093	5 1/2'	TABT	MAIN CABLE-13	F	—	—	—	R22	MAIN CABLE-11	F	—	—	—
Ro35	WHT/YEL	E	#24	600-2094	5 1/2'	+5VR	L.K.B. CABLE-3&4	5	—	—	—	±0V	BLACK	5	#18	600-0000	5 1/2"
SET TAB	WHT/BLK/BRN	4	#24	600-2901	5 1/2'	TABT	MAIN CABLE-14	E	—	—	—	R12	MAIN CABLE-7	E	—	—	—
Ro05	WHT/RED	D	#24	600-2092	5 1/2'	CPT	MAIN CABLE-3	4	—	—	—	ELN	GRY/ORN	4	#24	600-2083	7 1/2'
CLR TAB	WHT/BLK/RED	3	#24	600-2902	5 1/2'	BK SPT	MAIN CABLE-17	D	—	—	—	Ro2	MAIN CABLE-10	D	—	—	—
Ro15	WHT/BRN	C	#24	600-2091	5 1/2'	CPT	MAIN CABLE-4	3	—	—	—	ERN	VIO/GRN	3	#24	600-2075	8 1/2'
KBL ₅	WHT/GRN	2	#24	600-2095	5 1/2'	BK SPT	MAIN CABLE-18	C	—	—	—	SEARCH	R.K.B. CABLE-10	C	—	—	—
BEL ₅	WHT/BLK	B	#24	600-2090	5 1/2'	STAB	MAIN CABLE-1	2	—	—	—	RES	L.K.B. CABLE-13	2	—	—	—
SHF ₅	WHITE	1	#24	600-2009	5 1/2'	SPT	MAIN CABLE-15	B	—	—	—	SEARCH	R.K.B. CABLE-12	B	—	—	—
CRS	VIOLET	A	#24	600-2007	5 1/2'	STAB	MAIN CABLE-2	1	—	—	—	NAN	GRY/YEL	1	#24	600-2084	7 1/2'
						SPT	MAIN CABLE-16	A	—	—	—	FWD	L.K.B. CABLE-6	A	—	—	—

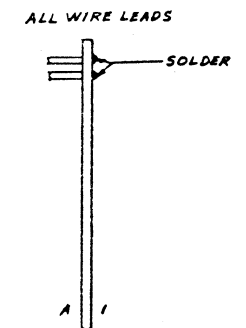

- NOTE:-
1. SOLDER LEADS 25 & 26 MAIN CABLE, 3 & 4 RIGHT KEYBOARD CABLE, BLACK LEAD 5, AND RIGHT COAX SHIELD TO TERMINAL.
 2. AFTER ALL LEADS ARE SOLDERED TO THE FINGER BOARD AND THE ASSEMBLY HAS BEEN INSPECTED, TIE THE LEADS 3' FROM POINT "X" THEN ADD TWO ONE FOOT PIECES OF 3/16" TUBING AS FOLLOWS. ONE SIDE ALL GRAY WITH TRACER, RIGHT KEYBOARD CABLE AND 30 CONDUCTOR MAIN CABLE. ALL REMAINING LEADS GO INTO THE OTHER TUBING. OMIT BOTH COAX CABLES. TIE TO ABOUT 2" FROM END OF TUBING.
 3. NUMBERED CABLE JACKET ENDS AT POINT "Y" RIGHT COAX JACKET AT POINT "Z"
 4. FOLD BACK AND TIE UNUSED LEADS.
 5. A TOLERANCE OF -1/4, +1/2 TO THE BREAKOUTS AND FANOUTS.

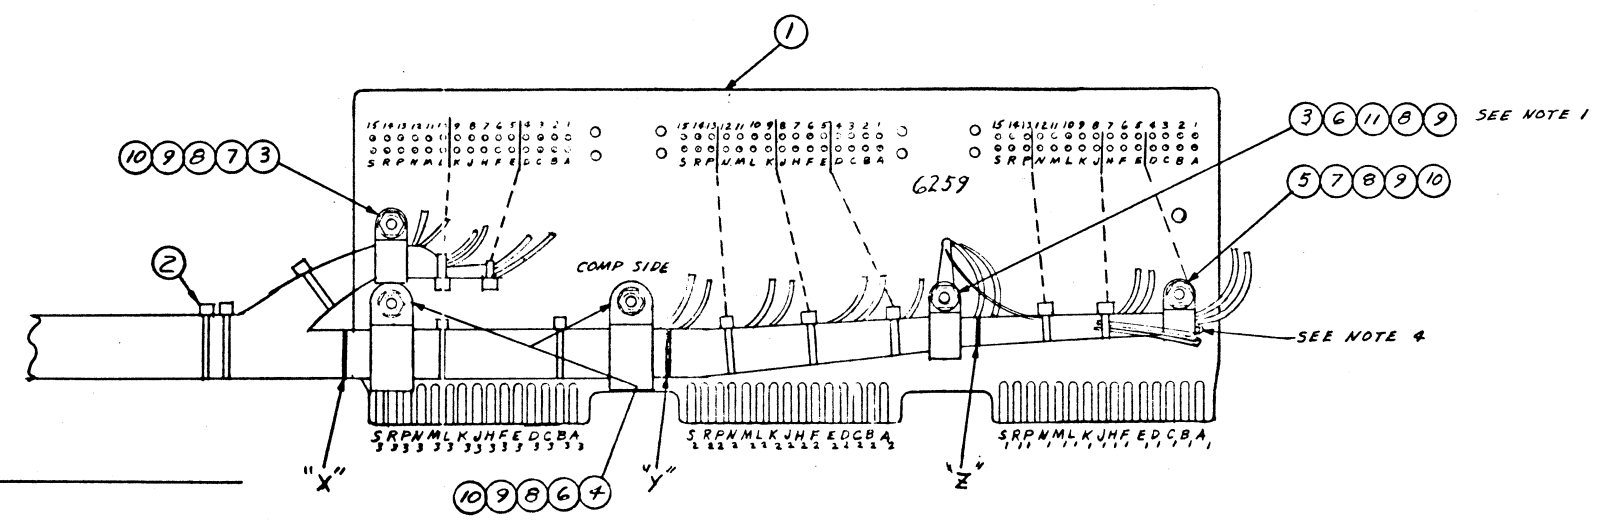

SEE NOTE 2		2' TUBING	605-0013	3/16" CLEAR
11	1	LUG	654-1006	#6 GND LUG
10	4	WASHER LOCK	653-3001	#6 INT. T.
9	5	NUT, SM. PAT.	652-3004	#6-32
8	5	WASHER FLAT	653-3000	#6
7	2	SCREW	650-3120	6-32 X 3/8
6	3	SCREW	650-3160	6-32 X 1/2
5	1	CLAMP	654-1252	1/4"
4	2	CLAMP	654-1257	9/16"
3	2	CLAMP	654-1254	3/8"
	A/R	SOLDER	660-0202	ALLOY 63-37
	A/R	WIRE (BLACK)	600-0000	#18 3" LONG
2	A/R	PAN-TY	605-1004	PLT-M
1	1	FINGER BOARD	510-6259	6259
IDENT	QTY	NAME	W.L. PART NO.	DESCRIPTION

REVISION	DATE	BY	APP'D	REVISION	DATE	BY	APP'D
1	1-8-72	PER	ECN #3201	10	1-29-74	PER	ECN #3661
2	1-8-72	APP'D	APP'D	11	1-29-74	APP'D	APP'D
3	1-8-72	ECN #3661	ECN #3661				
4	1-8-72	FOR REV. REGR	FOR REV. REGR				
5	1-8-72	TO THIS ECN	TO THIS ECN				
6	1-8-72	REVISION	REVISION				
7	1-8-72	ECN #3661	ECN #3661				
8	1-8-72	APP'D	APP'D				
9	1-8-72	ECN #3661	ECN #3661				
10	1-8-72	APP'D	APP'D				

SHEETS 1 & 2 ARE "D" SIZE
SHEET 4 IS "E" SIZE

WANG LABORATORIES INC.
TEWKSBURY, MASS.

MODEL NO.	1200	DRAWN	7-8-72	APP	
CHECKED	6-2	7/11/75	APP	7/11/75	
TITLE C1, 2 AND 3 WIRING					
SHT	3	OF	4	DWG. NO.	5776-975